

APPLICATION

AMP Part #

Jeep Wrangler (JK) 2-Door

2007–2018

75121-01A

INSTALLATION GUIDE**INSTALLATION TIME****3-5 Hours**


Professional installation recommended

SKILL LEVEL

4= Experienced



TOOLS REQUIRED

- ☐ 13 mm socket
- ☐ 13 mm end wrench
- ☐ Ratchet wrench and extension
- ☐ Wire crimpers
- ☐ Wire stripper/cutter
- ☐ 3/16" hex key wrench (allen wrench)
- ☐ 5 mm hex key wrench (allen wrench)
- ☐ Electrical Tape
- ☐ T-25 Torx Driver
- ☐ Heat Gun
- ☐ Drill

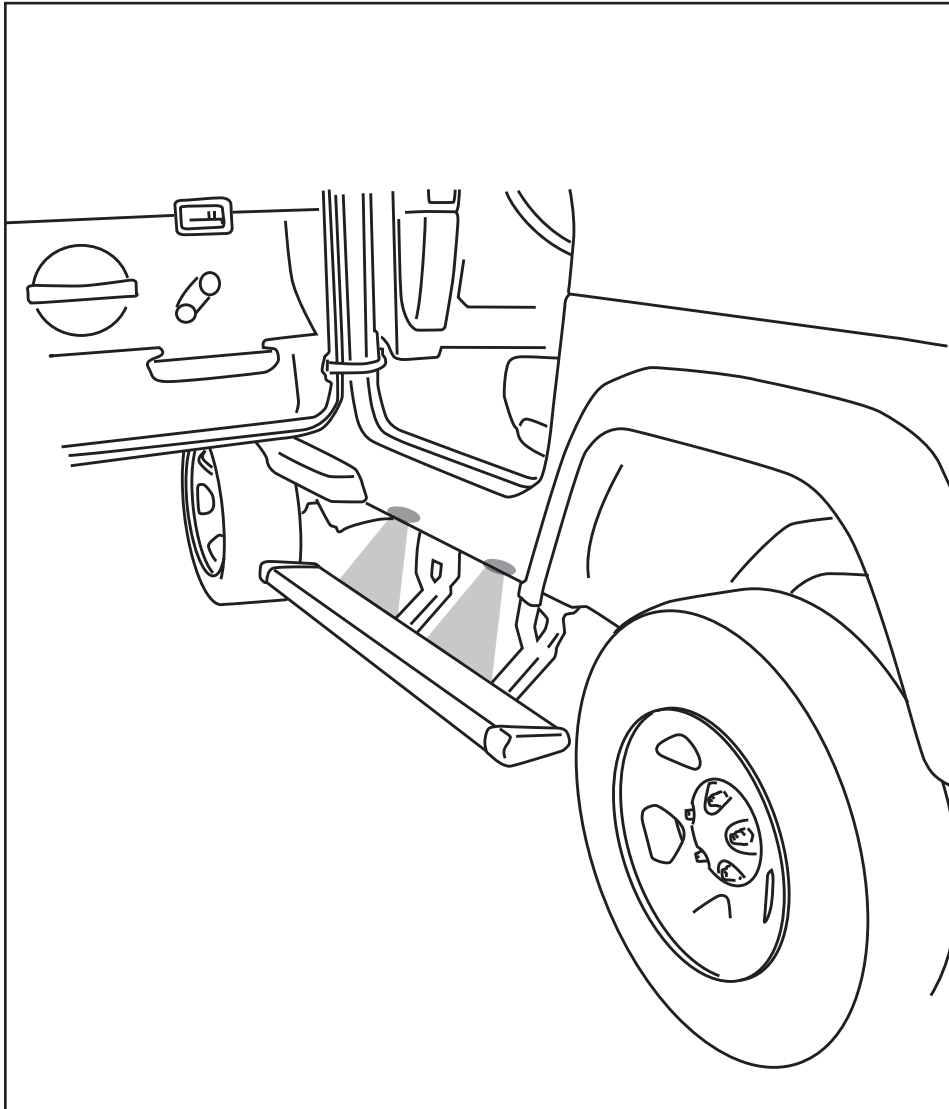WARRANTY**5-Year Limited Warranty****REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST**

Designed and manufactured by RealTruck AMP Research® • Made in Mexico
Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/
© RealTruck Group, Inc., 2026 • Five-year limited warranty. • Professional installation is recommended.

The motors must be attached to the linkage before mounting to vehicle.

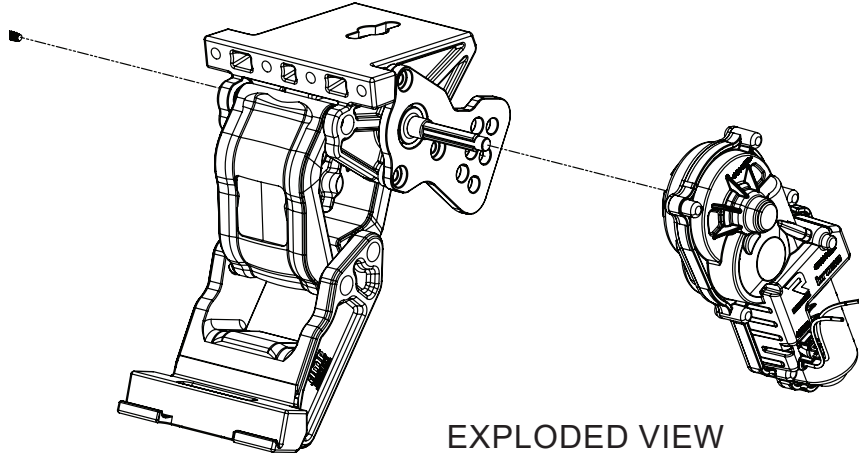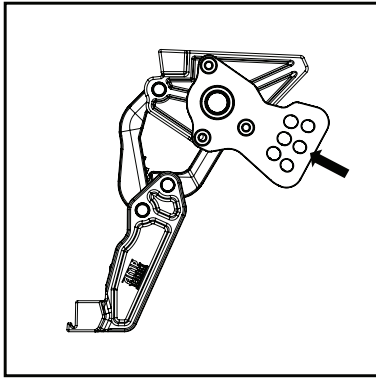

EXPLODED VIEW

- Motor
- Fasteners

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their Linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.

Instructions:

1. Slide motor on to drive shaft.
2. Rotate motor by hand while on the shaft to position it to the mounting plate (orientation as shown above).
3. Fasten motor to the motor mounting plate using supplied PT Screw with T-25 Torx driver. Tighten screw to 60 in-lbs (6.8 N·m). **Do not over torque.**

Note:


The motor and shaft have only three possible positions. Depending on the current position of the motor, motor/shaft and the orientation of the motor plate, it may be necessary to power it in order to align it correctly with the linkage and shaft during assembly so that the motor can be mounted to the mounting plate.

To do this:

1. Power up the motor.
2. Open the door to allow the motor to spin and reposition.
3. Once the motor times out, remove the fuse.
4. Assemble the motor onto the shaft.
5. Fasten motor to mounting plate.

This process may need to be repeated to achieve the correct alignment.


PARTS LIST AND HARDWARE IDENTIFICATION

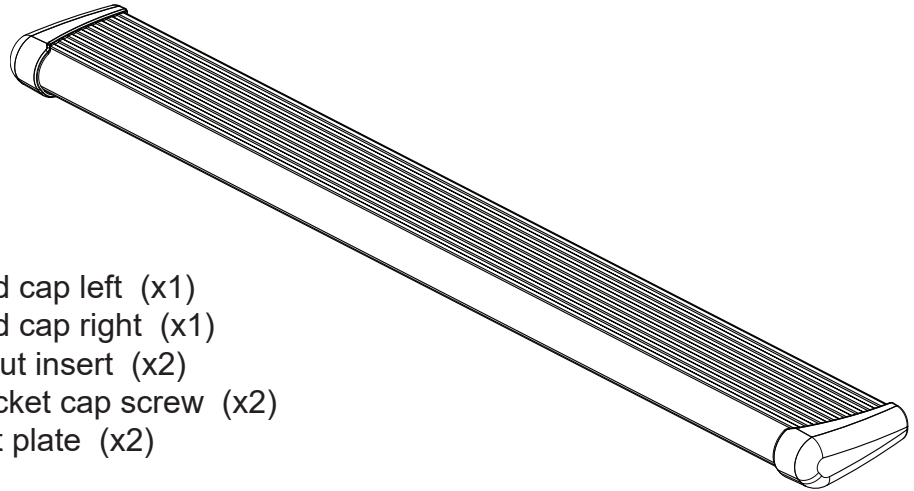

End cap left (x1)
End cap right (x1)
T-nut insert (x2)
Socket cap screw (x2)
Nut plate (x2)

① x2


Step assembly

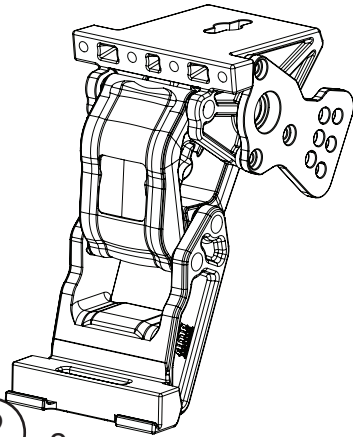

② x2

(2 door)


Motor Linkage

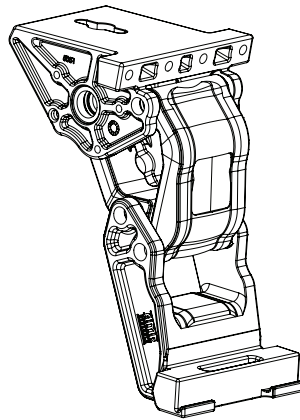

③ x2


(2 door)

Idler Linkage

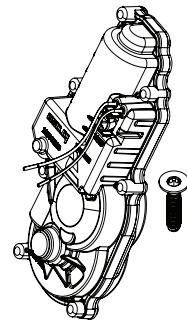


④ x2

 Motor Assembly kit




⑤ x4

Posi-Tite®

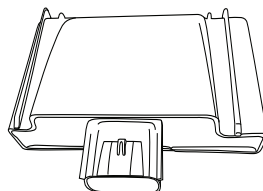

⑥

Controller SSA

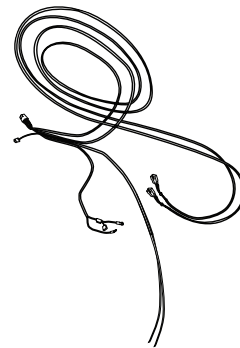


⑦

Wire Harness


PARTS LIST AND HARDWARE IDENTIFICATION



 8 x4
U nut



9 x8
Socket Cap
Screw

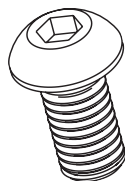

10 x8
Button Head Bolt




11 x4
Hex Flange Bolt




12 x8
Washer Black




13 x4
Posi-Taps™
(Red/Grey)

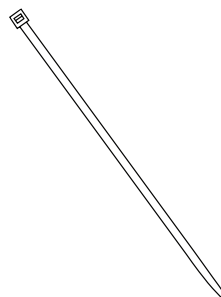


14 x20
Cable Tie 6"

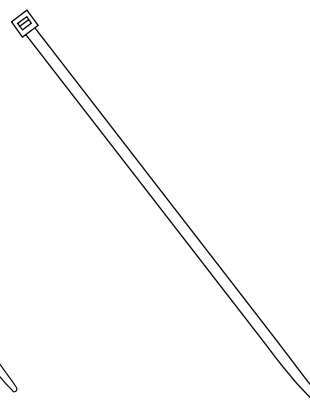


15 x2
Cable Tie 11"

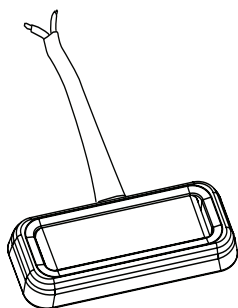

16 x4
LED Lamp

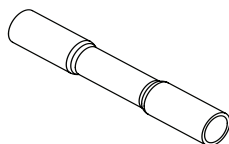


17 x8
Butt Connector

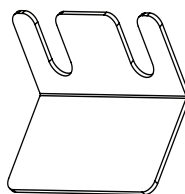

18 x4
Light Bracket

Insert U nut into position for front Idler Linkage mounting position.


Front of vehicle passenger side

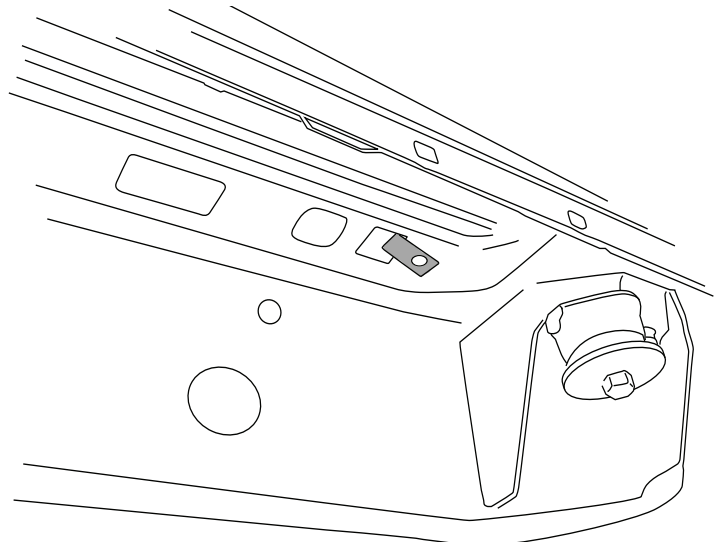

1


Install Front Idler Linkage assembly. Use button head bolts with washers and Hex flange bolt Torque to 16 ft-lbs. (22N m)

Note: Install light bracket between pinch weld and linkage mount as shown. Install brackets on forward holes of linkage.

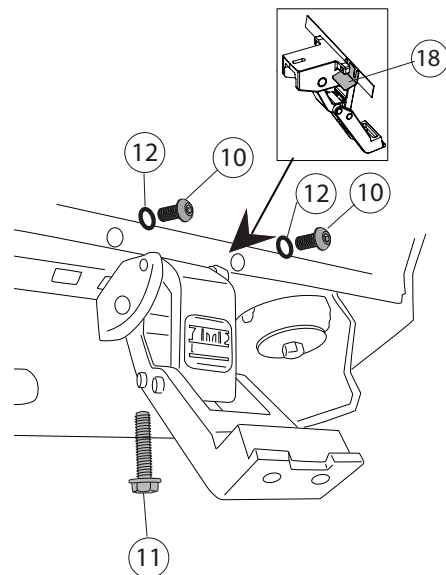

2

Insert U nut into position for rear Drive Linkage mounting position.

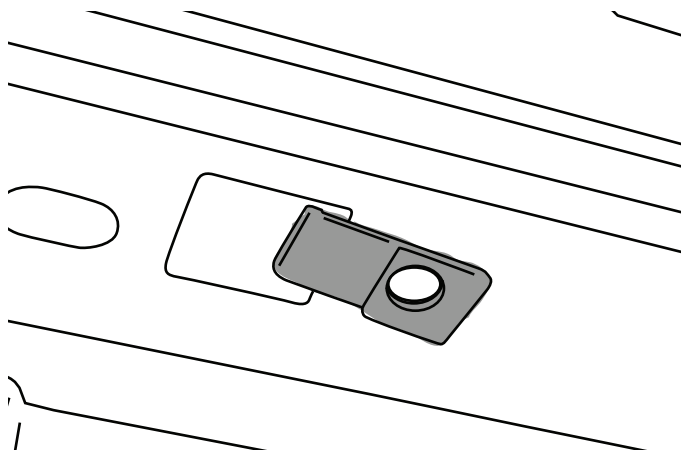


Front of vehicle passenger side



3

Install Rear Drive Linkage assembly. Use button head bolts with washers and Hex flange bolt Torque to 16 ft-lbs. (22Nm). Install light bracket on front side of linkage as in step 4.

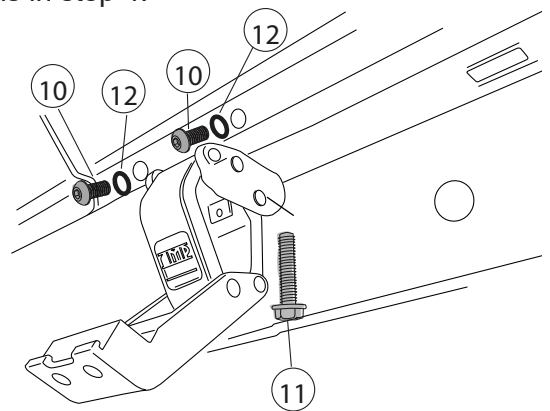


Front of vehicle passenger side




4

Mount step extrusion to linkage assemblies. Line up t-nuts in step assembly with slots in lower mounts of linkage assemblies. Fasten loosely to allow for adjustments.

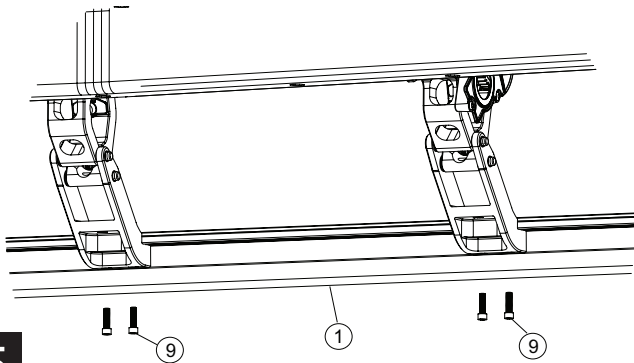


5

Line up rear of step extrusion with rear fender well.

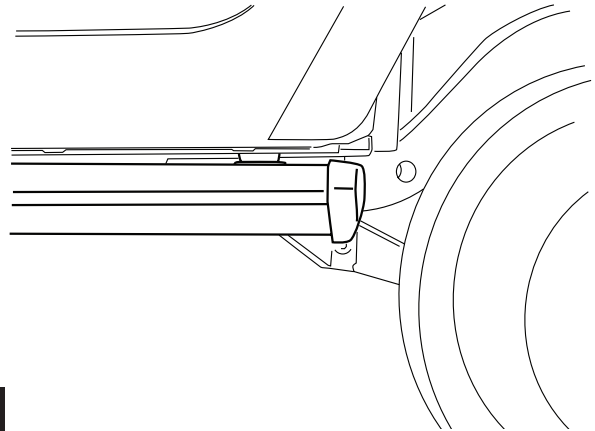

6

Tighten 4 socket cap screws with 3/16" allen wrench
Torque to 10 ft-lbs. (13.5 N-m)


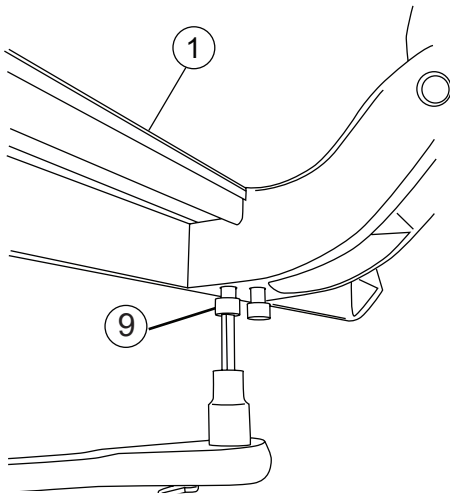


7

Repeat steps 1-7 on the driver side of the vehicle.


8

Remove fuse from PowerStep wire harness.
Install controller on passenger side at firewall.
Secure with 11" cable ties. Connect Red wire to positive battery terminal and Black wire to negative battery terminal.

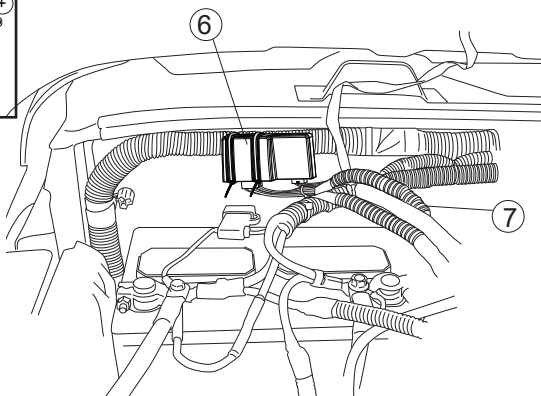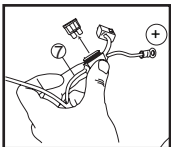


9

Route longest leg of wire harness across fire wall to driver side and under vehicle outside of frame rail.
Route shortest leg of wire harness down fire wall and outside of frame rail on passenger side.

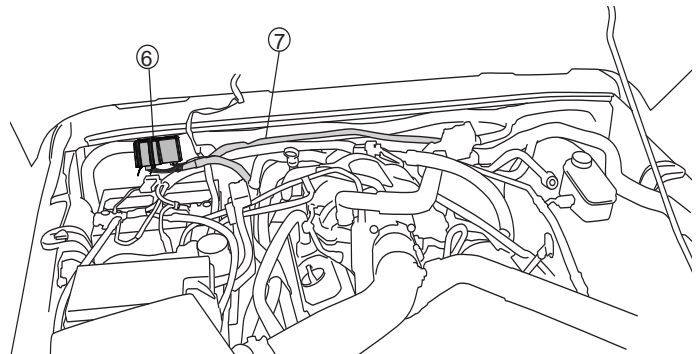


10

Remove passenger side front door sill.

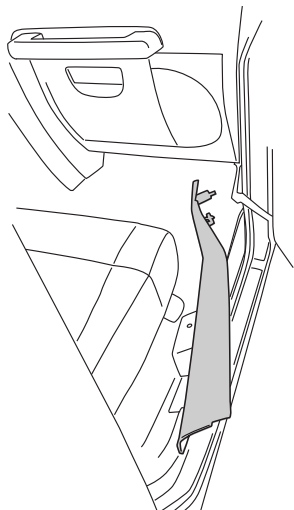


11

Lift carpet. Slit rubber grommet and pass trigger wires through grommet in floor into passenger compartment.

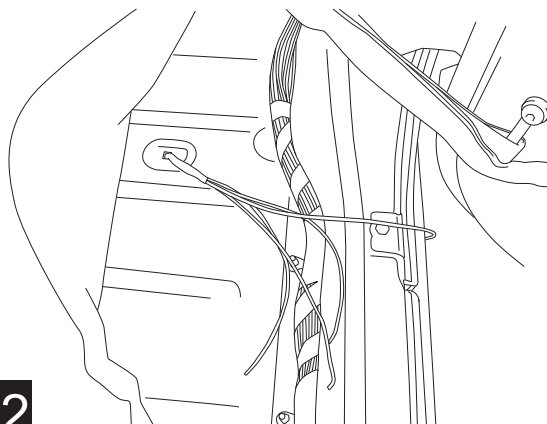


12

Posi-Tap™ instructions

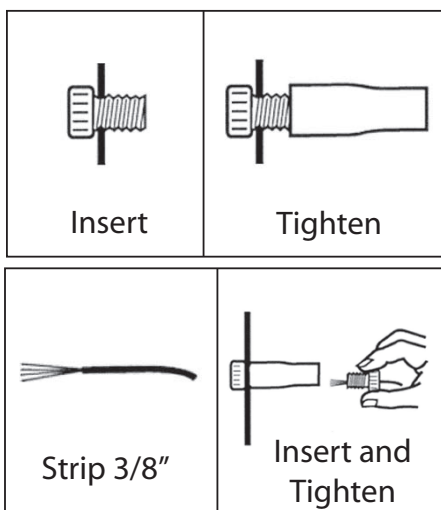


13

Use Posi-Tap connectors to connect Power Step trigger wires to like colored wires in the factory system as shown: Violet/White wire in loom coming from front door, Violet/Yellow and Violet/Grey are not used tape off ends.
Note: For door removal attach posi tap on chassis side of door harness.

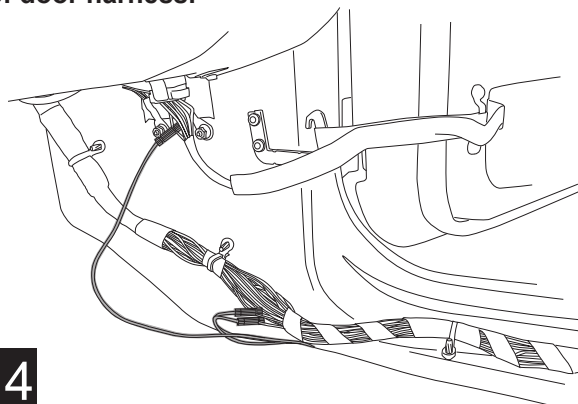


14

Remove driver side door sill and pull up carpet.

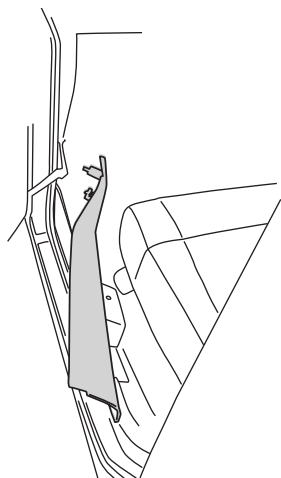

15

Route Violet wire under carpet to driver side door sill and connect to violet wire coming from door as shown. **Note: For door removal attach posi tap on chassis side of door harness.**

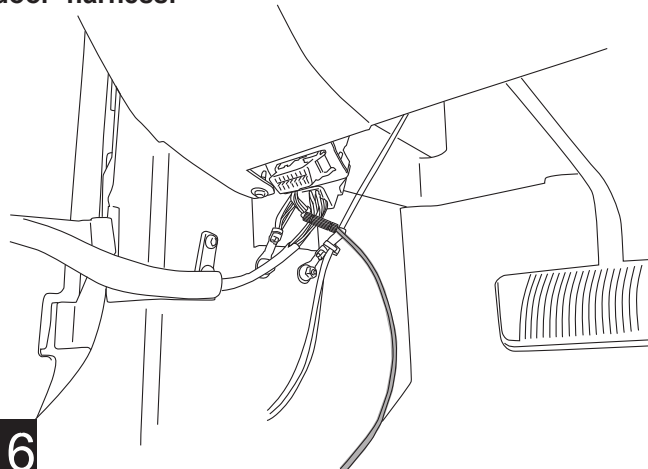


16

Before proceeding, see spin direction of the each motor than proceed with step A or B below.

Use method B for both drivers side and passenger side.


A. Motor spinning the shaft clockwise direction:

- 1) First, install one Posi-Tite® onto white wire from the motor. See image on right.
- 2) Install second Posi-Tite® onto orange wire from motor. See image on right.

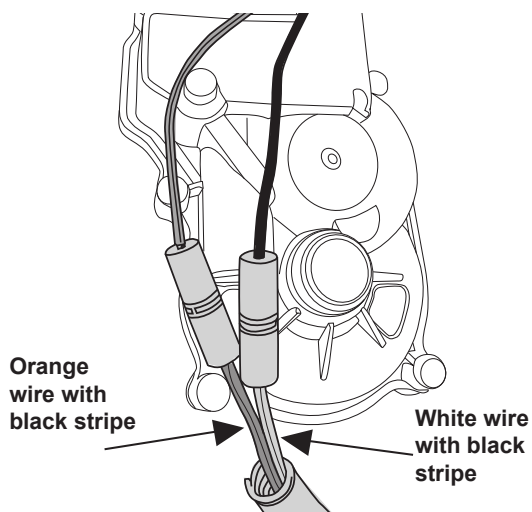

- 3) Next, connect the white wire with black stripe from the wire harness to the other end of the Posi-Tite® that is connected to the all white wire from first step above.

- 4) Connect the Posi-Tite® the orange wire from the motor with the orange with black stripe wire from the harness.

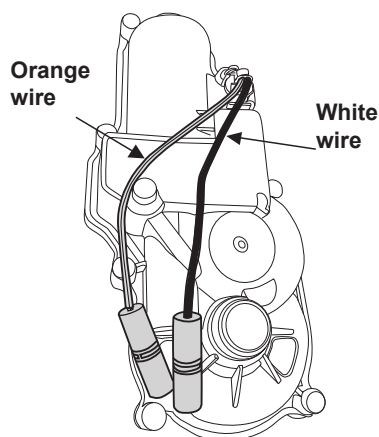

Posi-Tite® Instructions

1. Strip 3/8"



2. Push




3. Tighten




B. Motor spinning the shaft counter clockwise direction:

- 1) First, install one Posi-Tite® onto white wire from the motor. See image on right.
- 2) Install second Posi-Tite® onto orange wire from motor. See image on right.

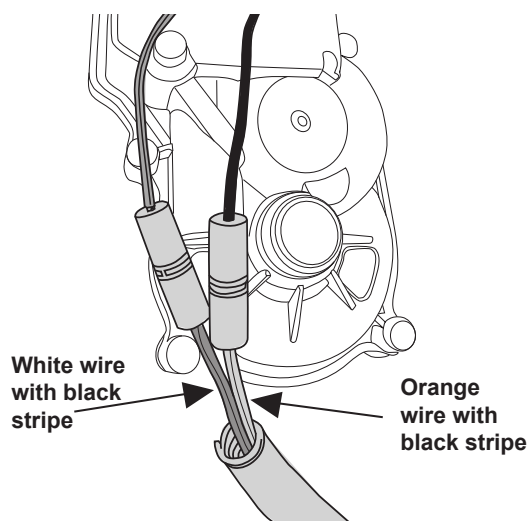


- 3) Next, connect the orange wire with black stripe from the wire harness to the other end of the Posi-Tite® that is connected to the all white wire from first step above.

- 4) Connect the Posi-Tite® the orange wire from the motor with the white with black stripe wire from the harness.

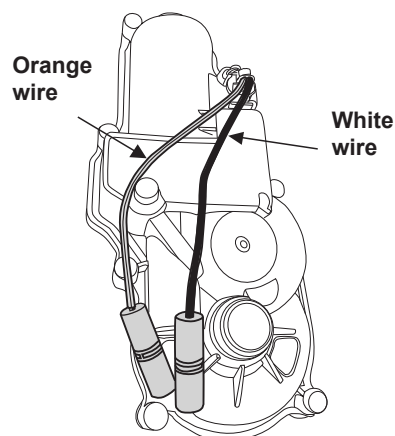

Posi-Tite® Instructions

 1. Strip 3/8"




2. Push



3. Tighten




On each side of the vehicle install LED Lamps onto installed brackets provided.

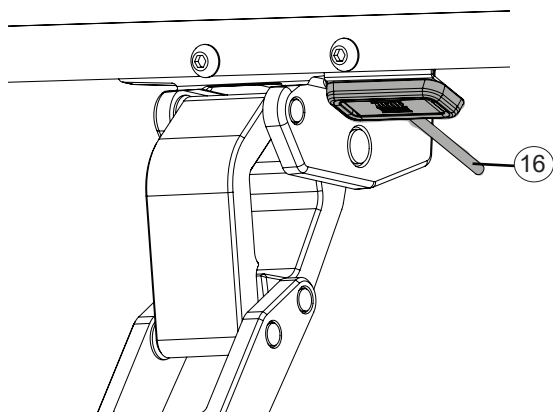


18

Using supplied butt connectors, connect the lamp wires. Red to Red, Black to Black. Once Crimped use heat gun to shrink tube.

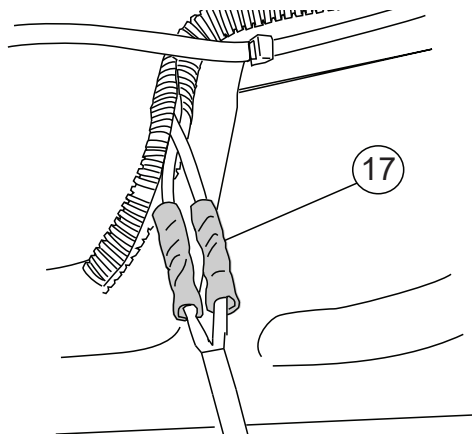


19

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

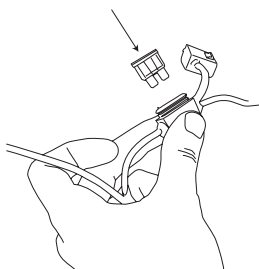

Reinstall fuse.

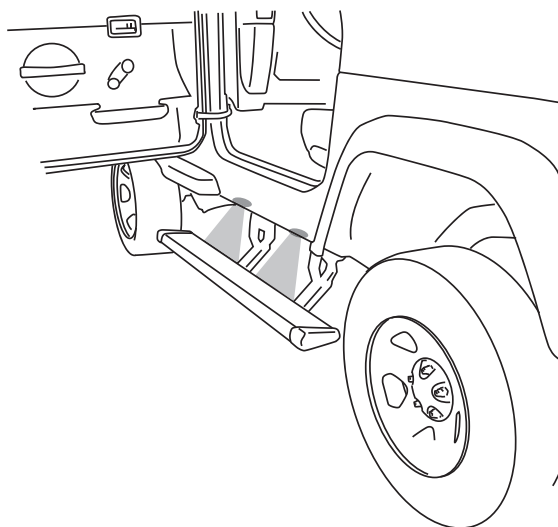

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close.

NORMAL OPERATION: When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. **Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.**

CORRECT OPERATION OF LIGHTS: All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reilluminated by closing and opening any door of vehicle.

20



AMERICAN DESIGNED & ENGINEERED

Thank you for your recent RealTruck purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

<https://realtruck.com/warranty-registration/>
or scan the QR Code



Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.

To view other RealTruck products that may be offered for your vehicle.


Please visit: www.realtruck.com

Rev 05.30.24

Congratulations on your purchase of the genuine RealTruck / AMP Research PowerStep!

Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: RealTruck / AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.

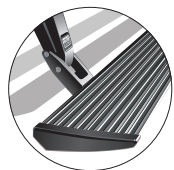

Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.


Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.

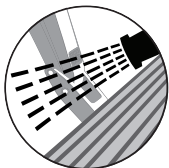

Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand.

Avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

RealTruck / AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by nature or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK TECH SUPPORT 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.