


## INSTALLATION INSTRUCTIONS

### Polaris RZR Heavy Duty Rack & Pinion

Item	Description	Qty
A	Heavy Duty Rack & Pinion	1
B*	Z-Bend or Straight Tie Rods	2

\*Depending on machine, and setup, Straight or Z-Bend Tie Rods are included.

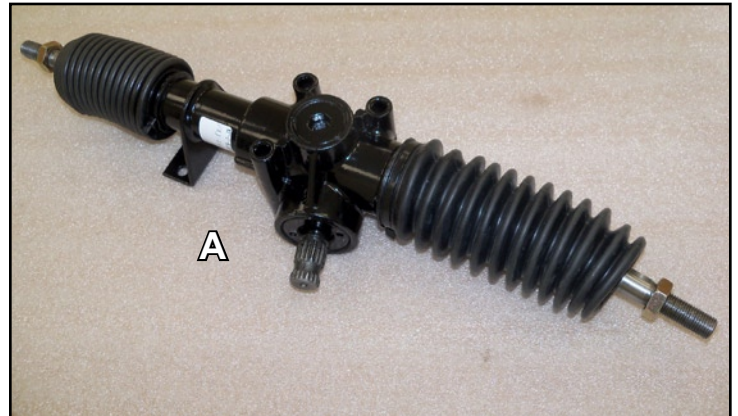

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

# SUPERATV.COM

#### Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Stock hardware will be reused. Do not discard.

1. Raise front of machine off ground, secure with jack stands and remove Wheels.
2. Remove Tie Rods and disconnect Steering Shaft from Rack and Pinion. See Fig. 1.
3. Remove Rack and Pinion. See Fig. 1 and Fig. 1a.
4. Install Rack and Pinion (A) to machine with stock hardware. See Fig. 2.
5. Reconnect Steering Shaft to Rack and Pinion (A). See Fig. 2a.
6. Install Tie Rod (B) to Rack and Pinion (A). See Fig. 3.
7. Transfer stock Tie Rod Ends to Tie Rods (B) and reinstall to Spindles with stock hardware. See Fig. 3a.

 **Use Loc-Tite when installing Tie Rods** 

