



INSTALLATION INSTRUCTIONS


Radiator Relocation Kit for Polaris RZR XP® 1000

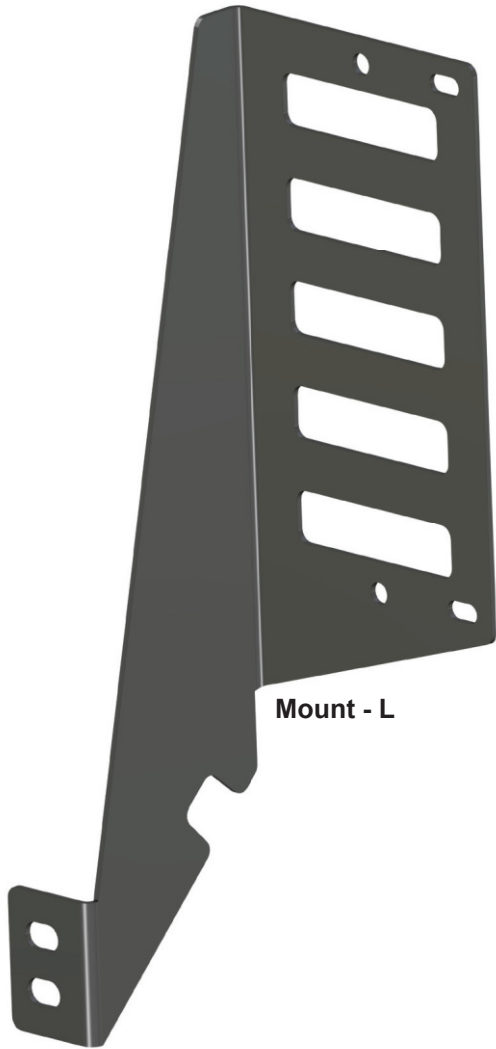

Mount - L

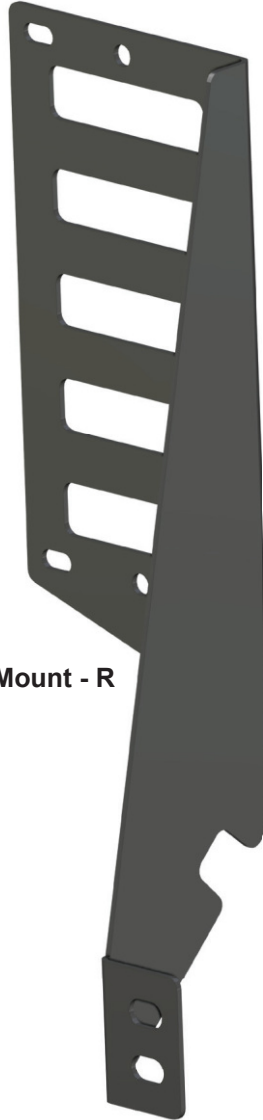

Mount - R

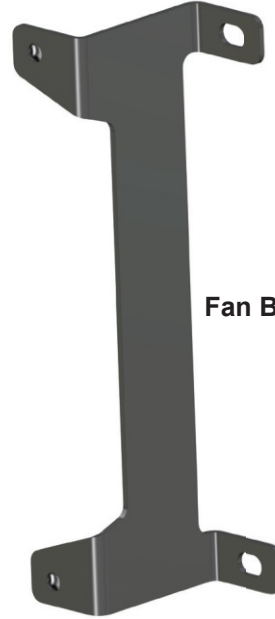

Fan Bracket x 2




*Spacer x 4




Clamp x 6



Elbow

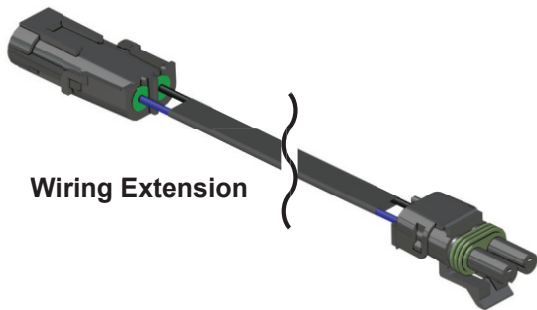

Wiring Extension

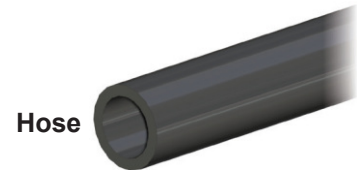

Hose

**used with SuperATV Radiators only*

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427




8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.


Thank You

For Choosing







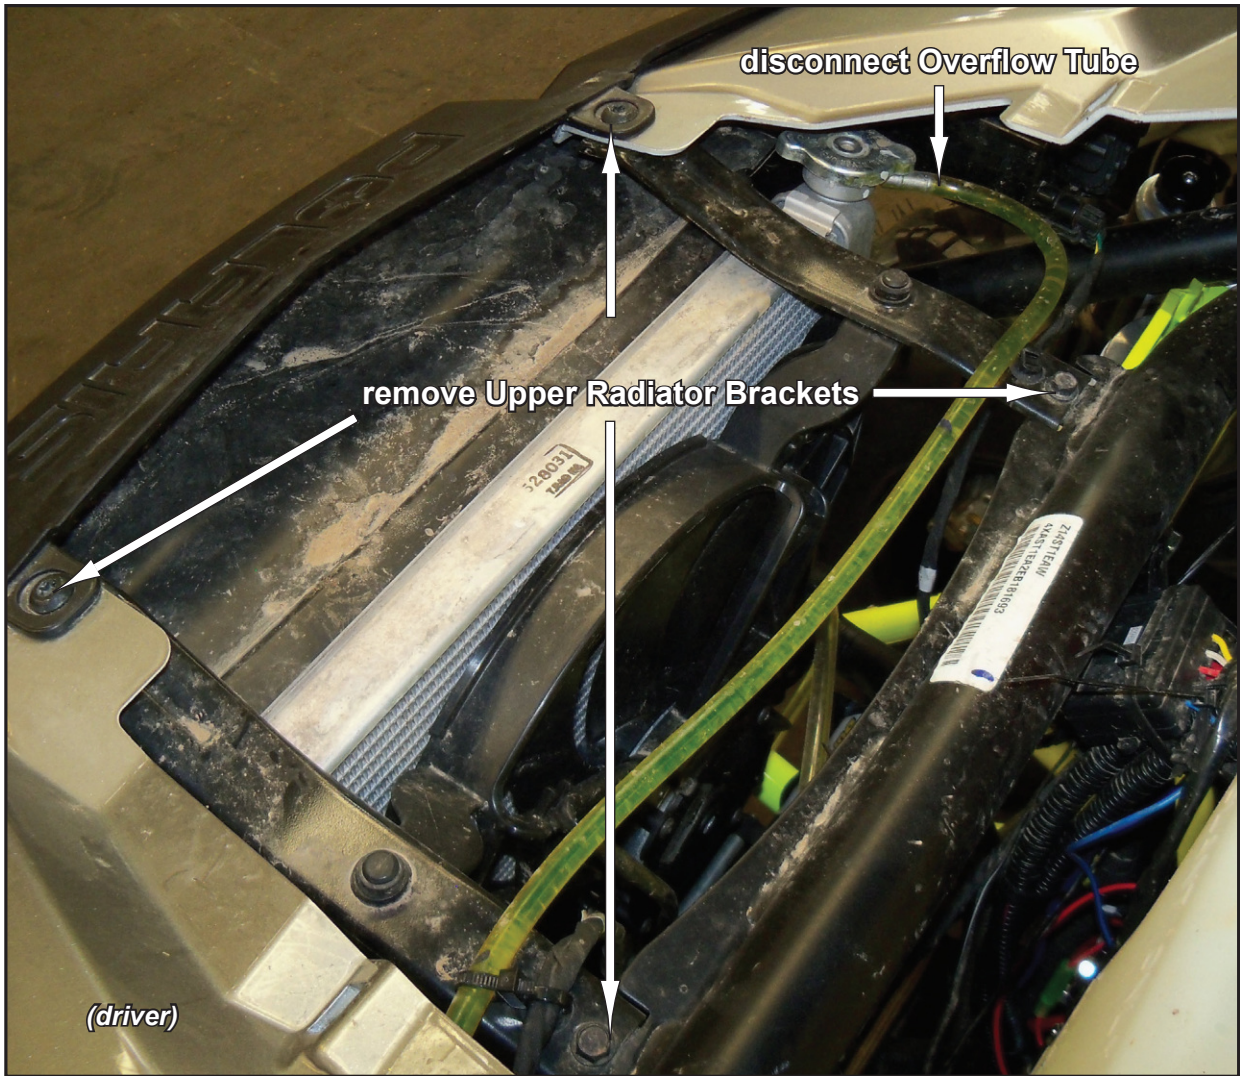


remove Front Shocks for easiest access

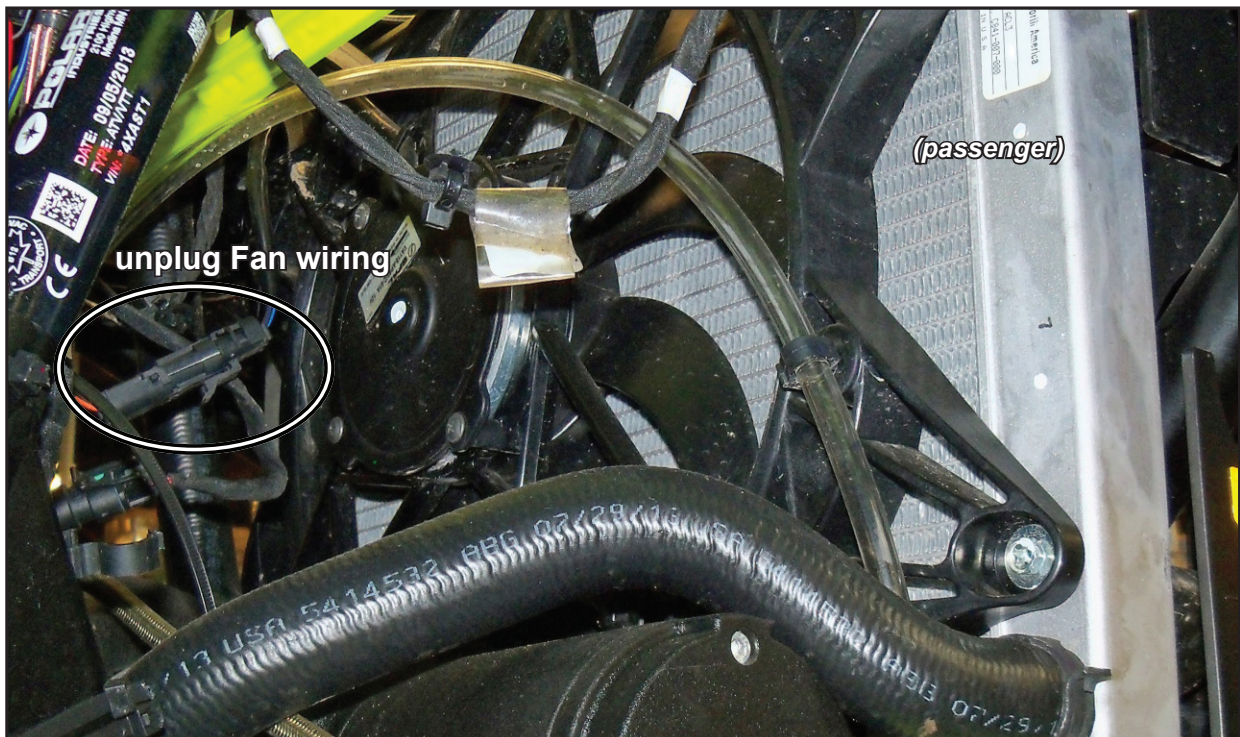


drain coolant from Radiator

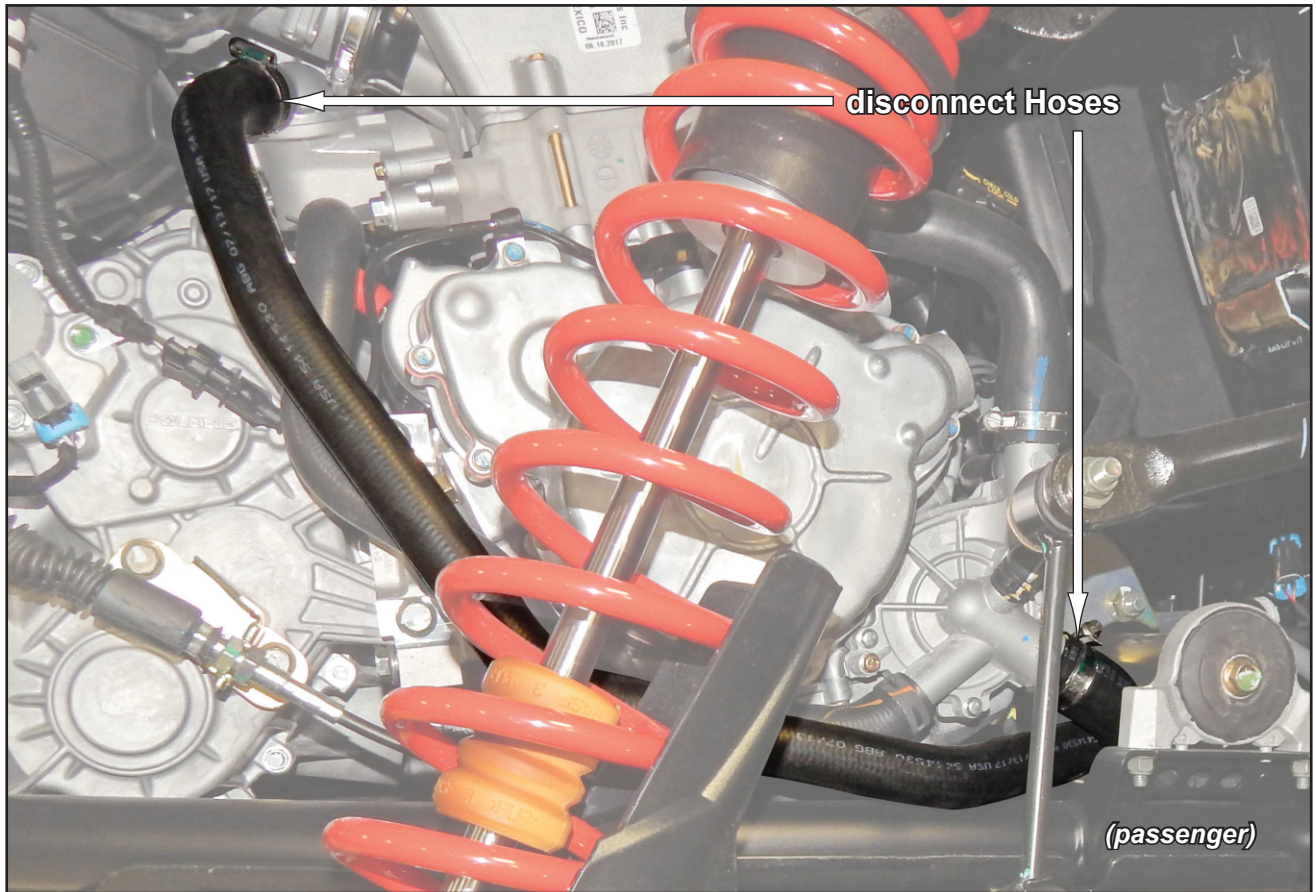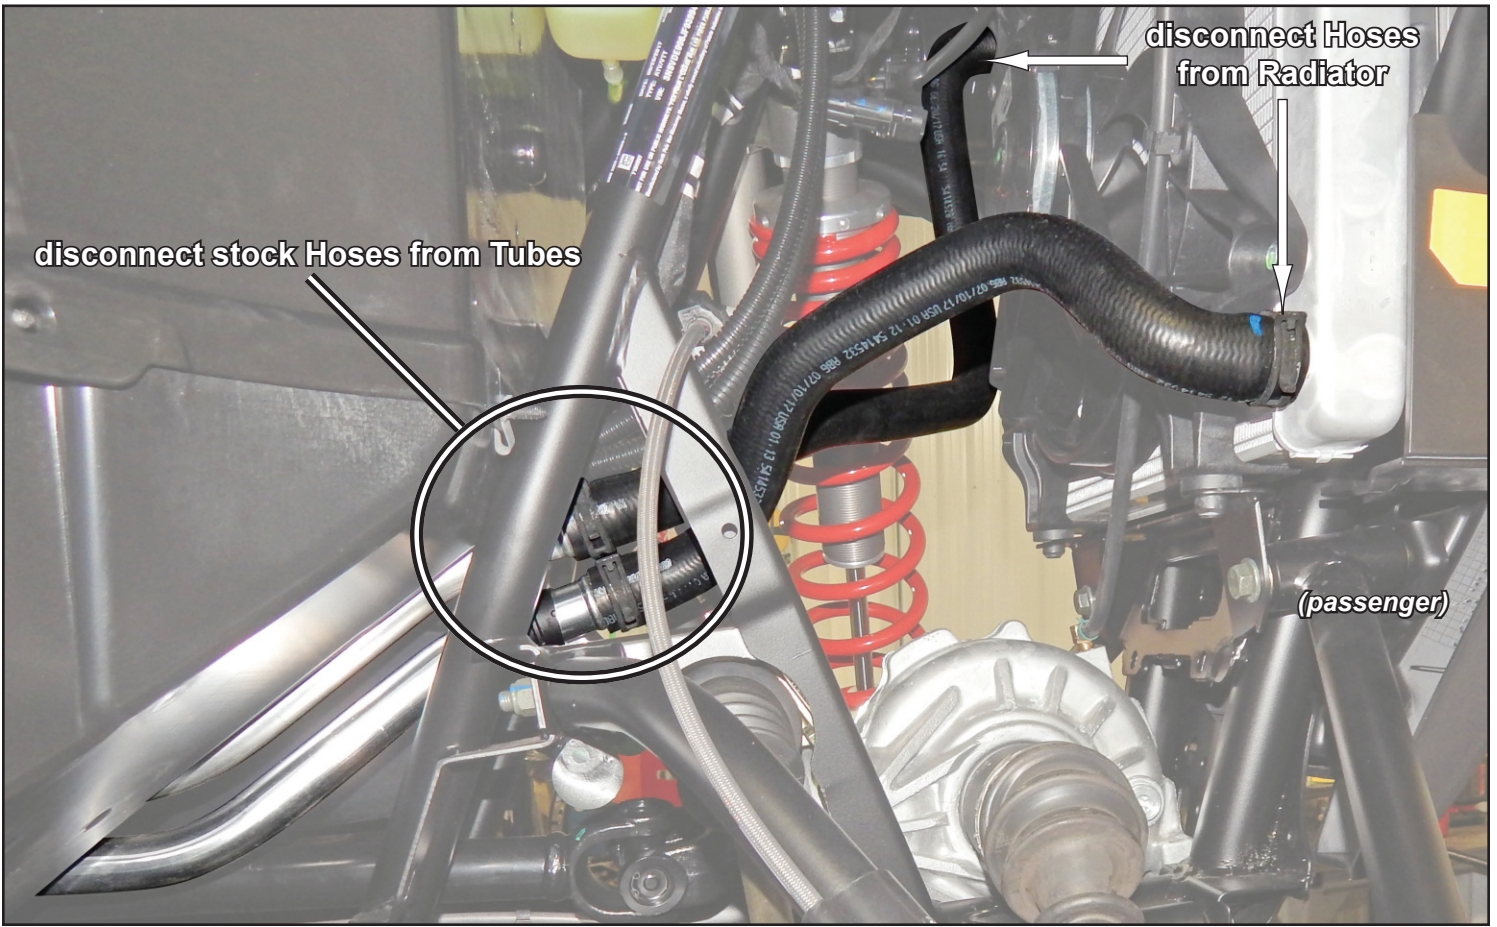


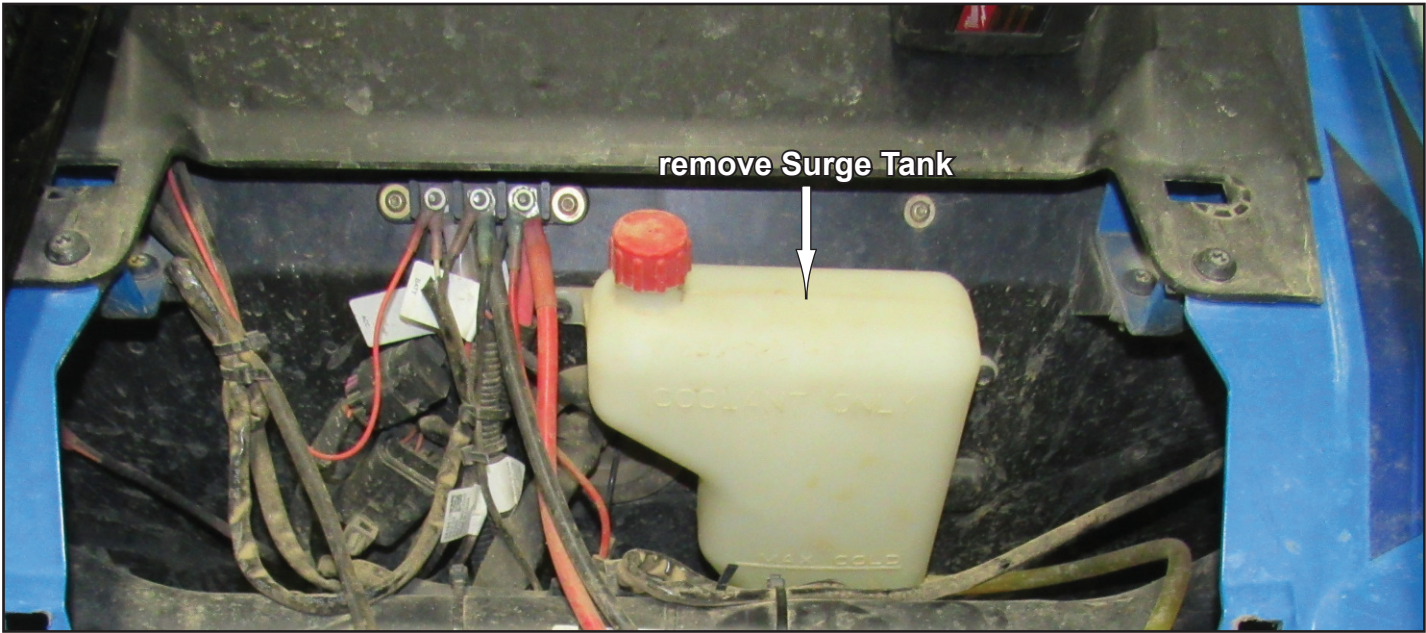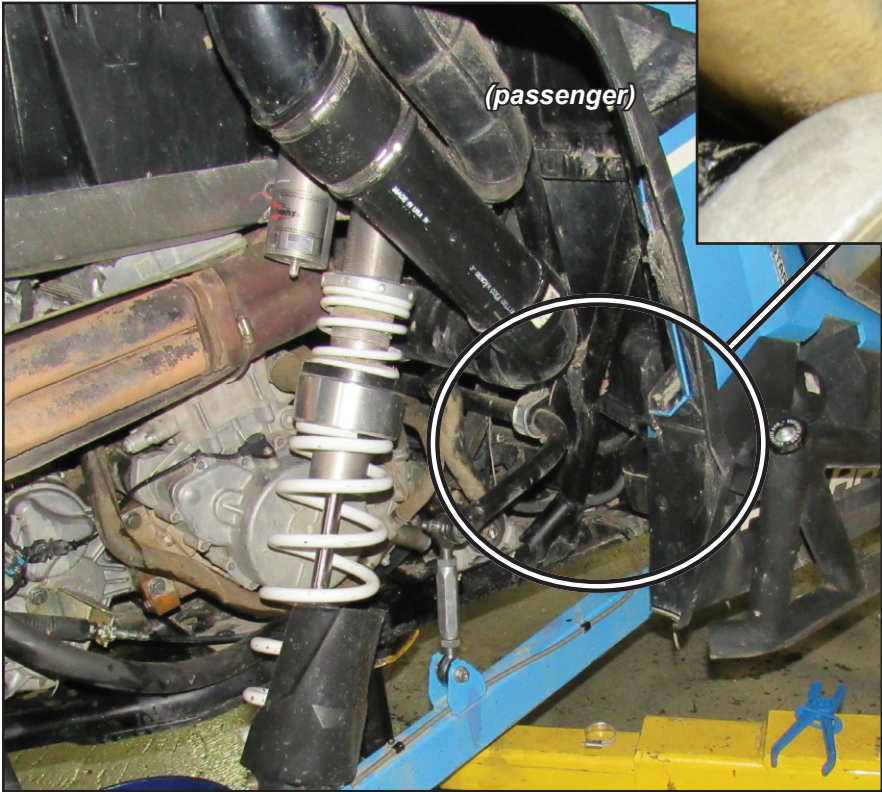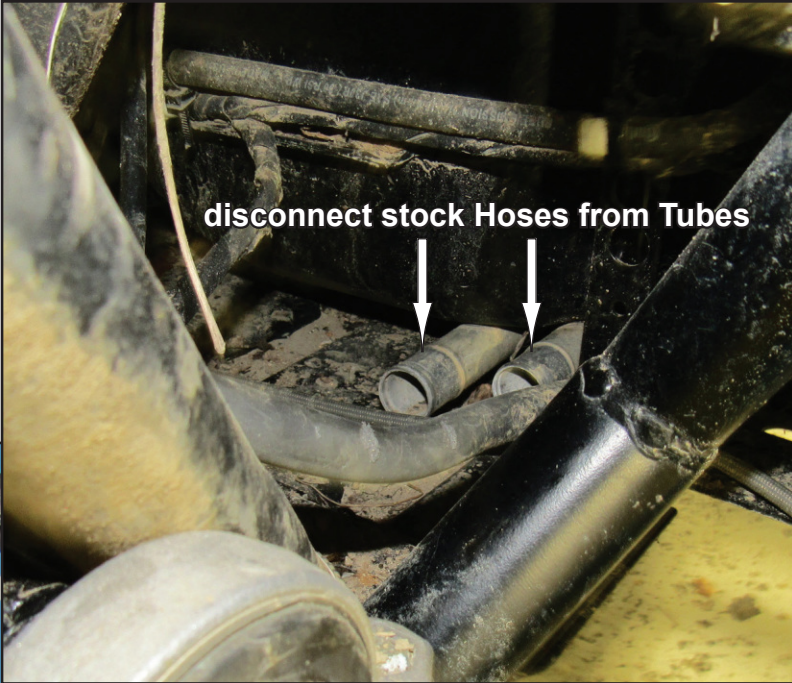


- Remove Radiator from machine.
- Remove Fan from Radiator.

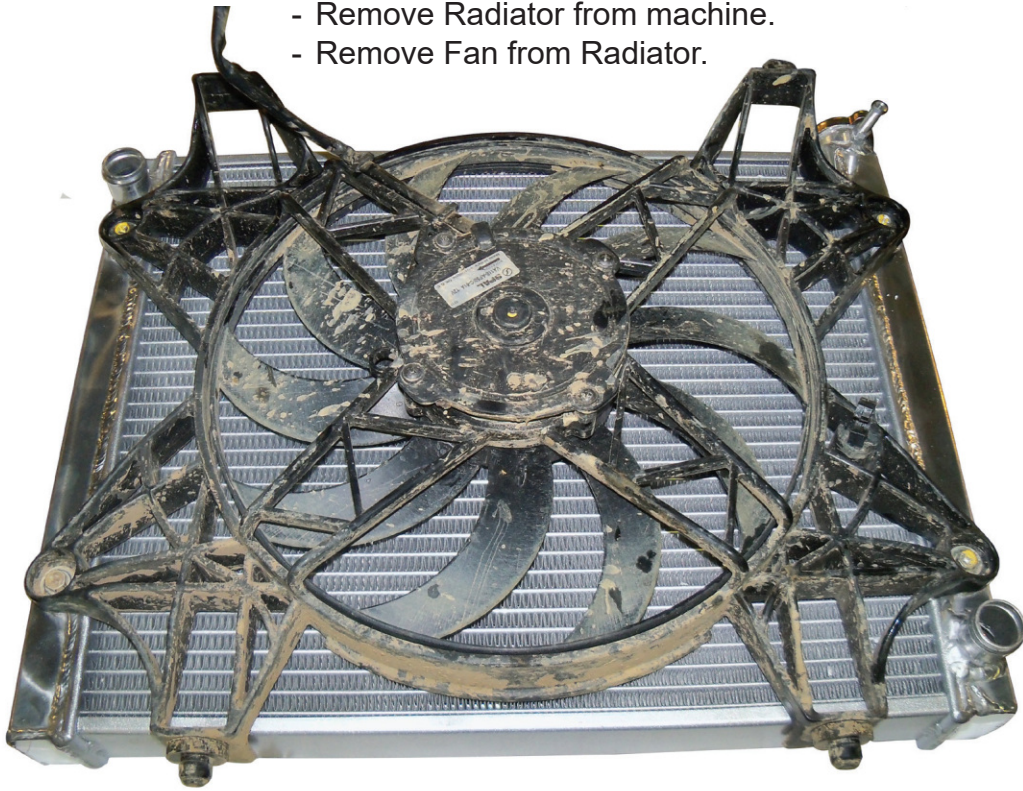



- Use a hole saw and create a Ø2" hole in Cargo Box.
- Insert Hose and route to Water Pump.

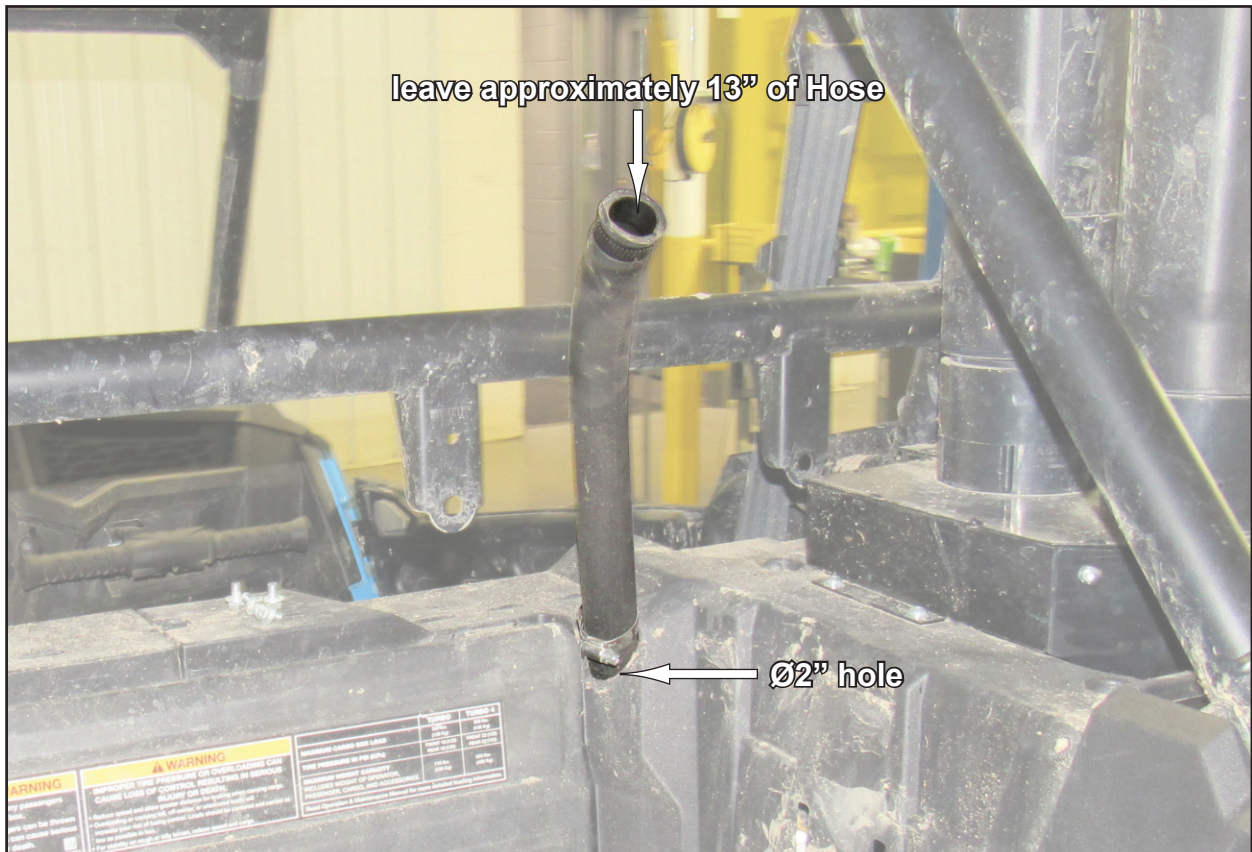


- Cut Hose to fit and secure to Water Pump with Clamp.

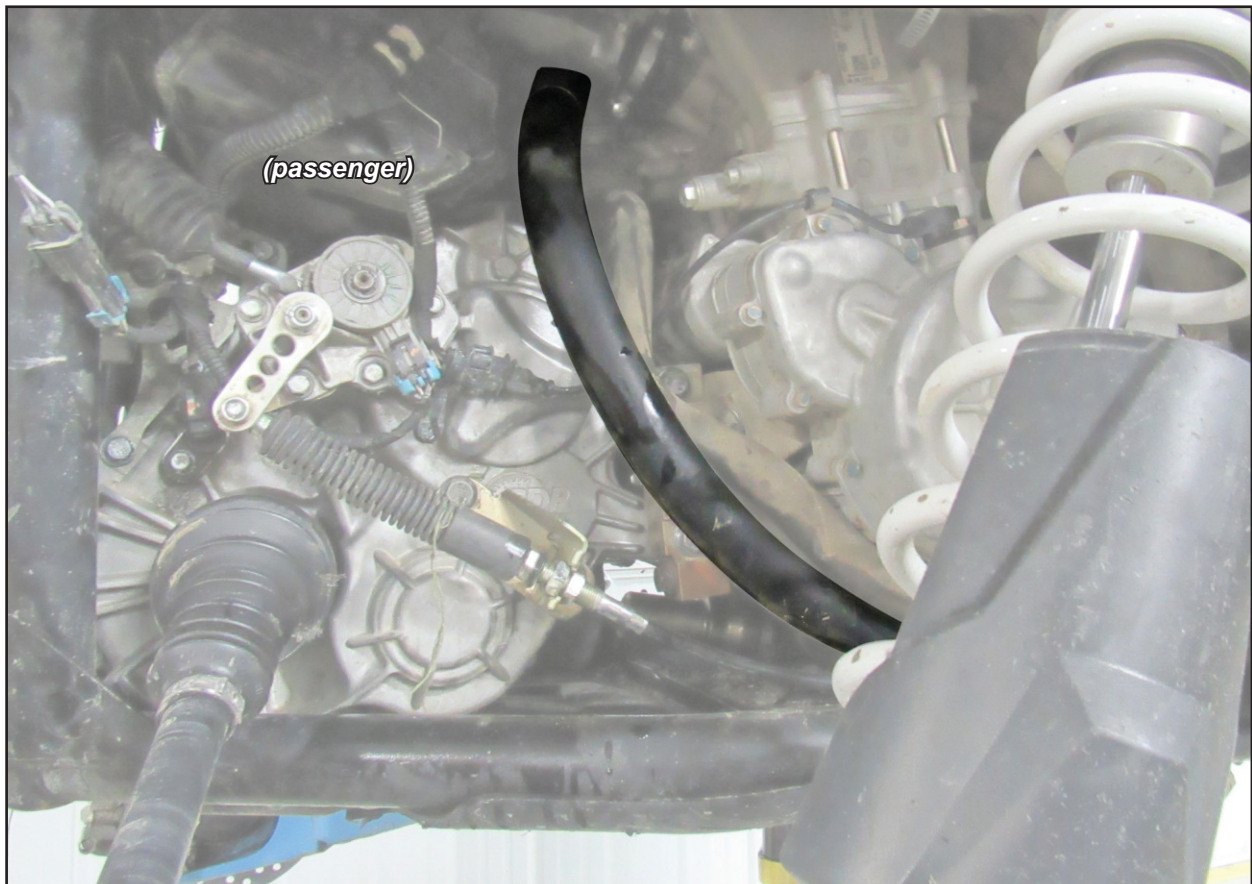

- Use a hole saw and create a Ø2" hole in Cargo Box.
- Insert Hose and route to passenger side of Motor.

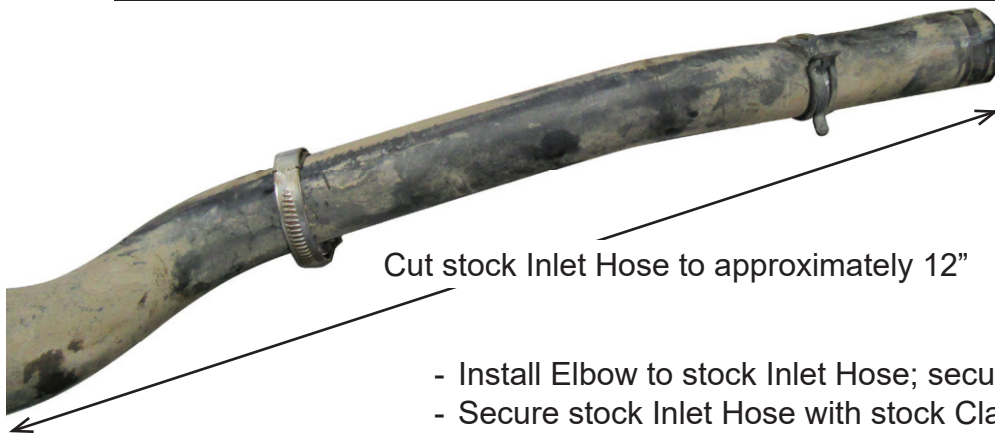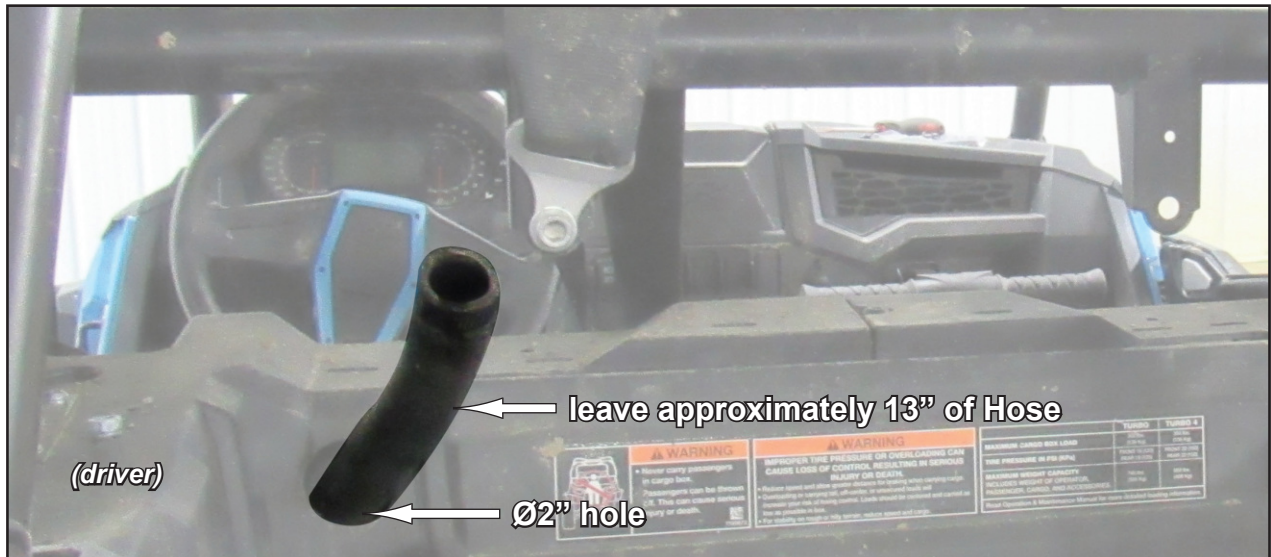

- Install Elbow to stock Inlet Hose; secure with Clamp.
- Secure stock Inlet Hose with stock Clamp.
- Cut previously installed Hose to fit and secure to Elbow with Clamp.

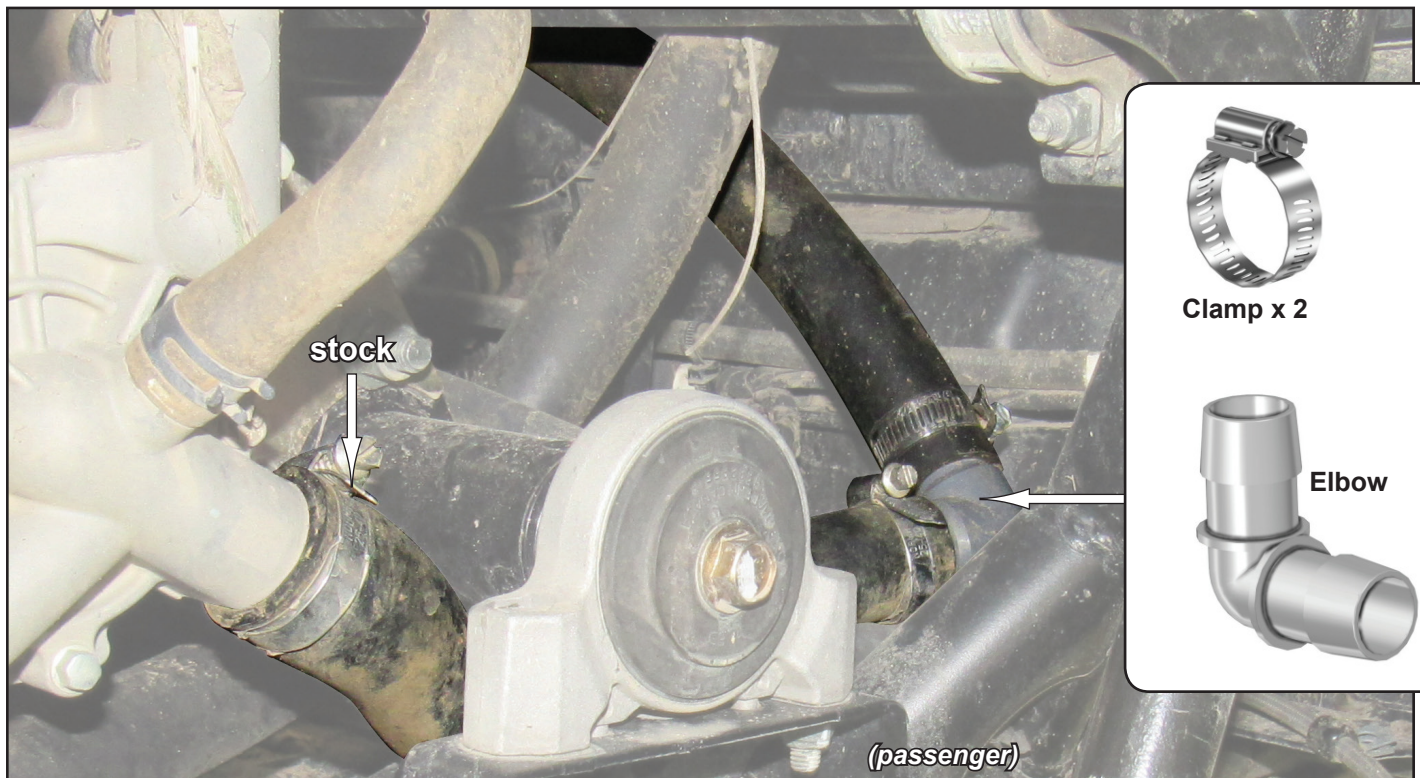


- Remove stock Cage hardware shown; repeat for passenger side.




DO NOT TIGHTEN ANY HARDWARE COMPLETELY WHEN INSTALLING COMPONENTS


- Install Mounts with hardware shown.

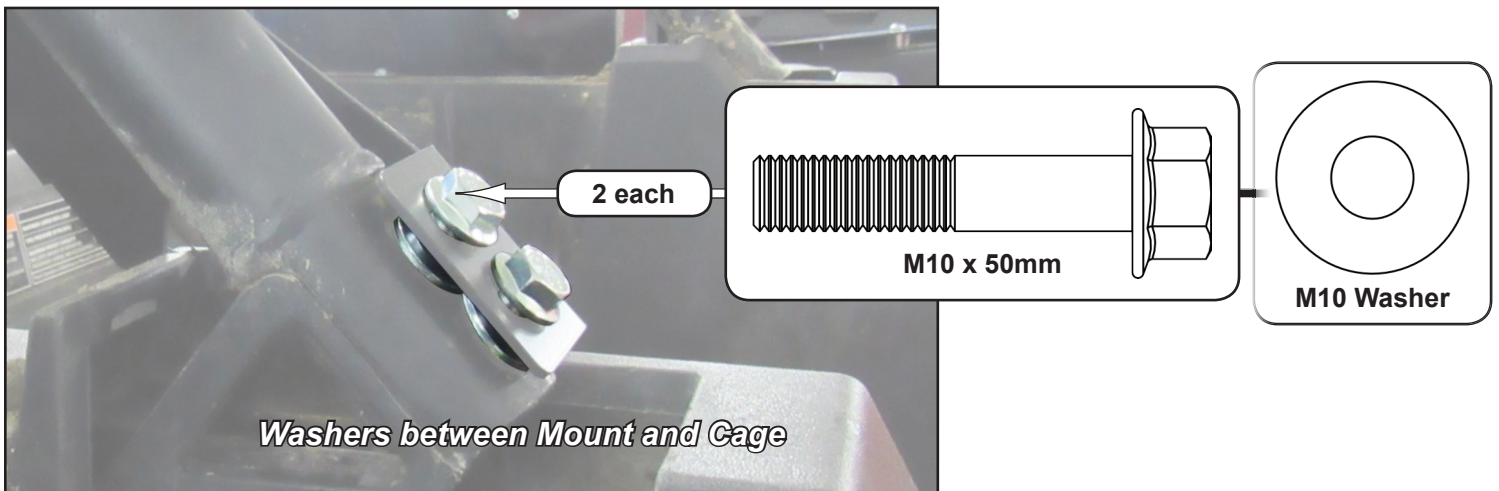


- Install Fan Bracket to Mount - R with hardware shown.

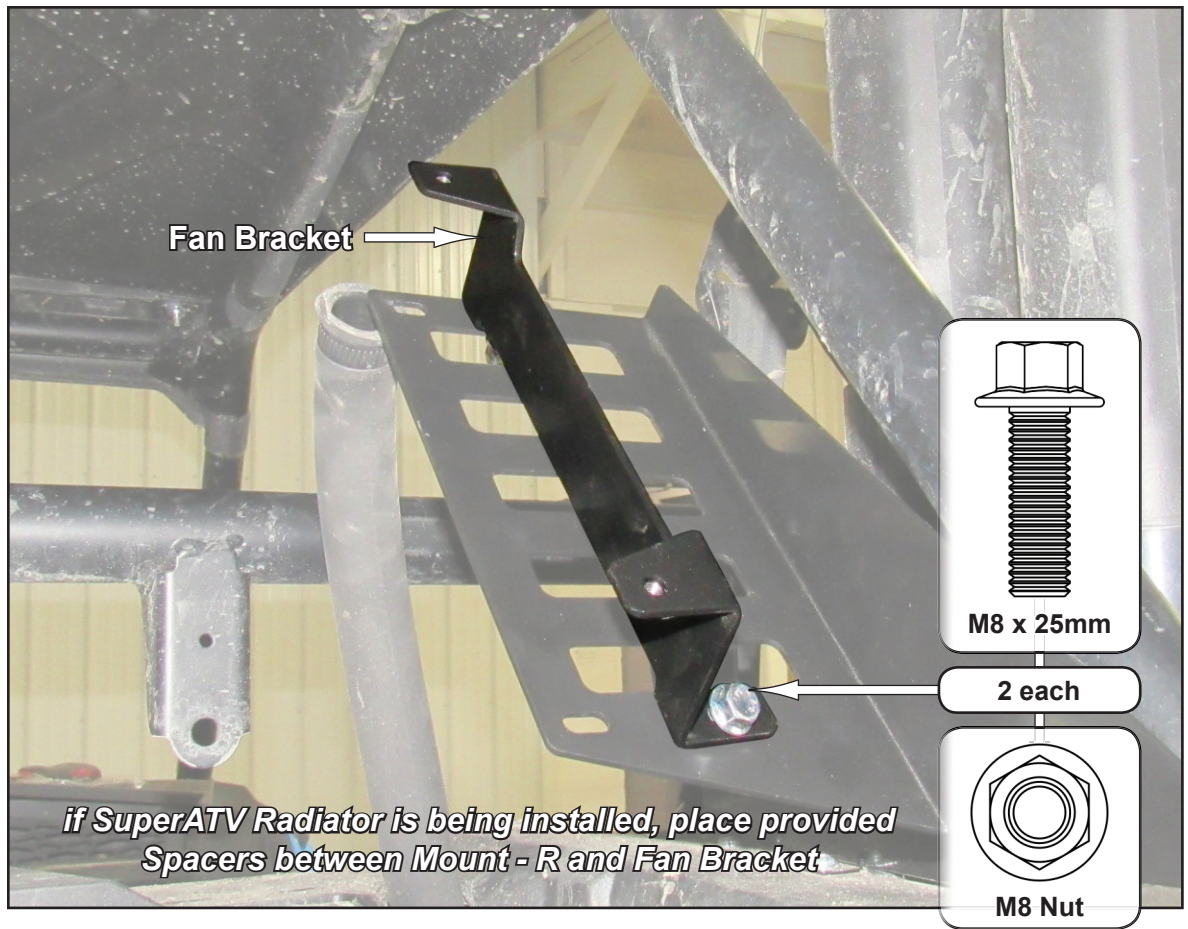


- Secure Radiator to Mounts with hardware shown.

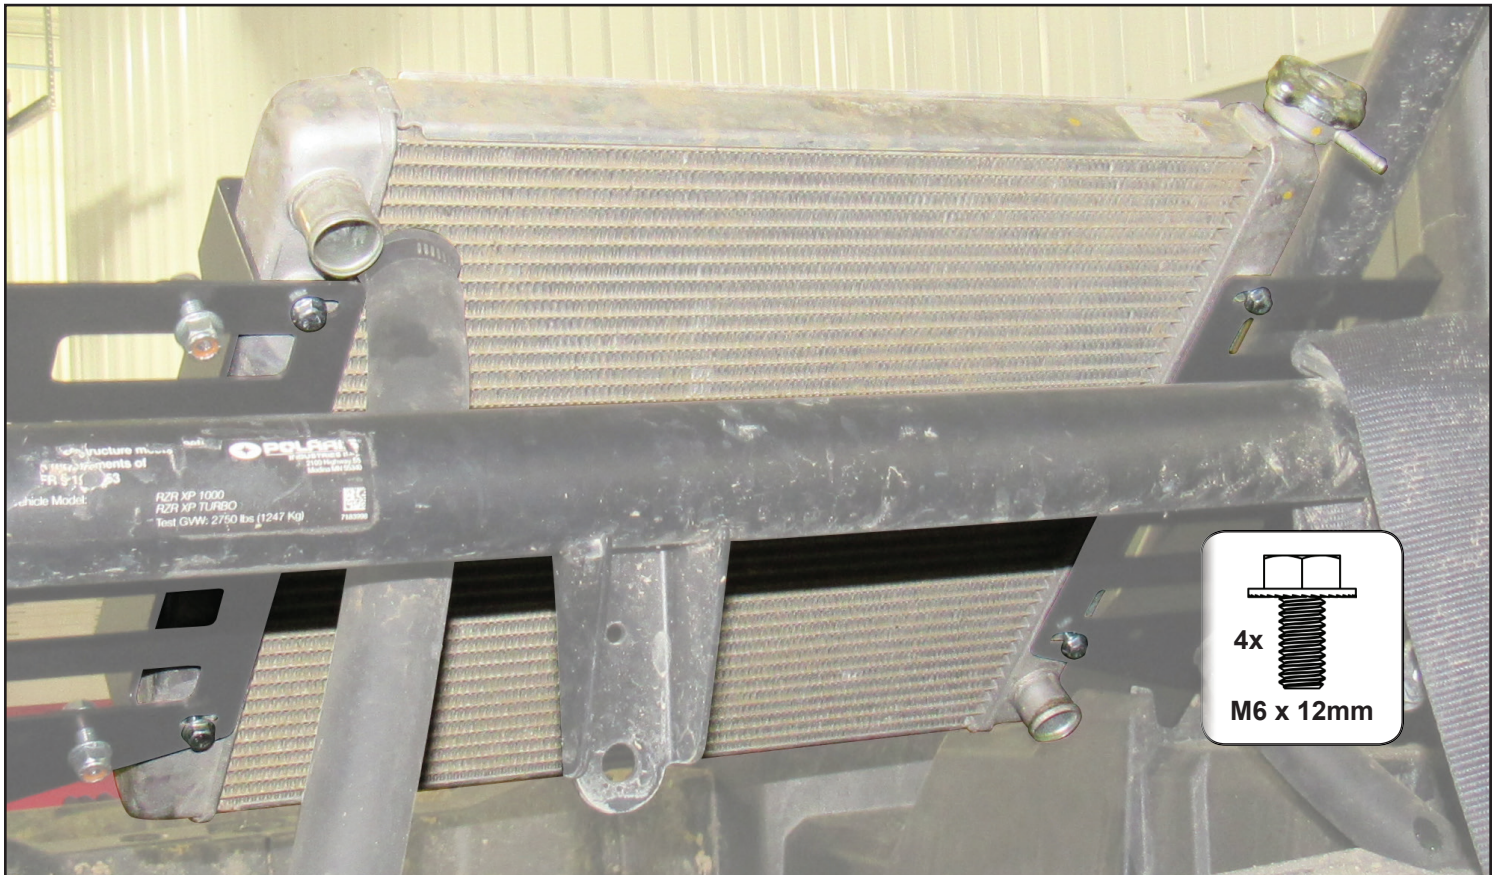

- Install Fan Bracket to Mount - L with hardware shown.

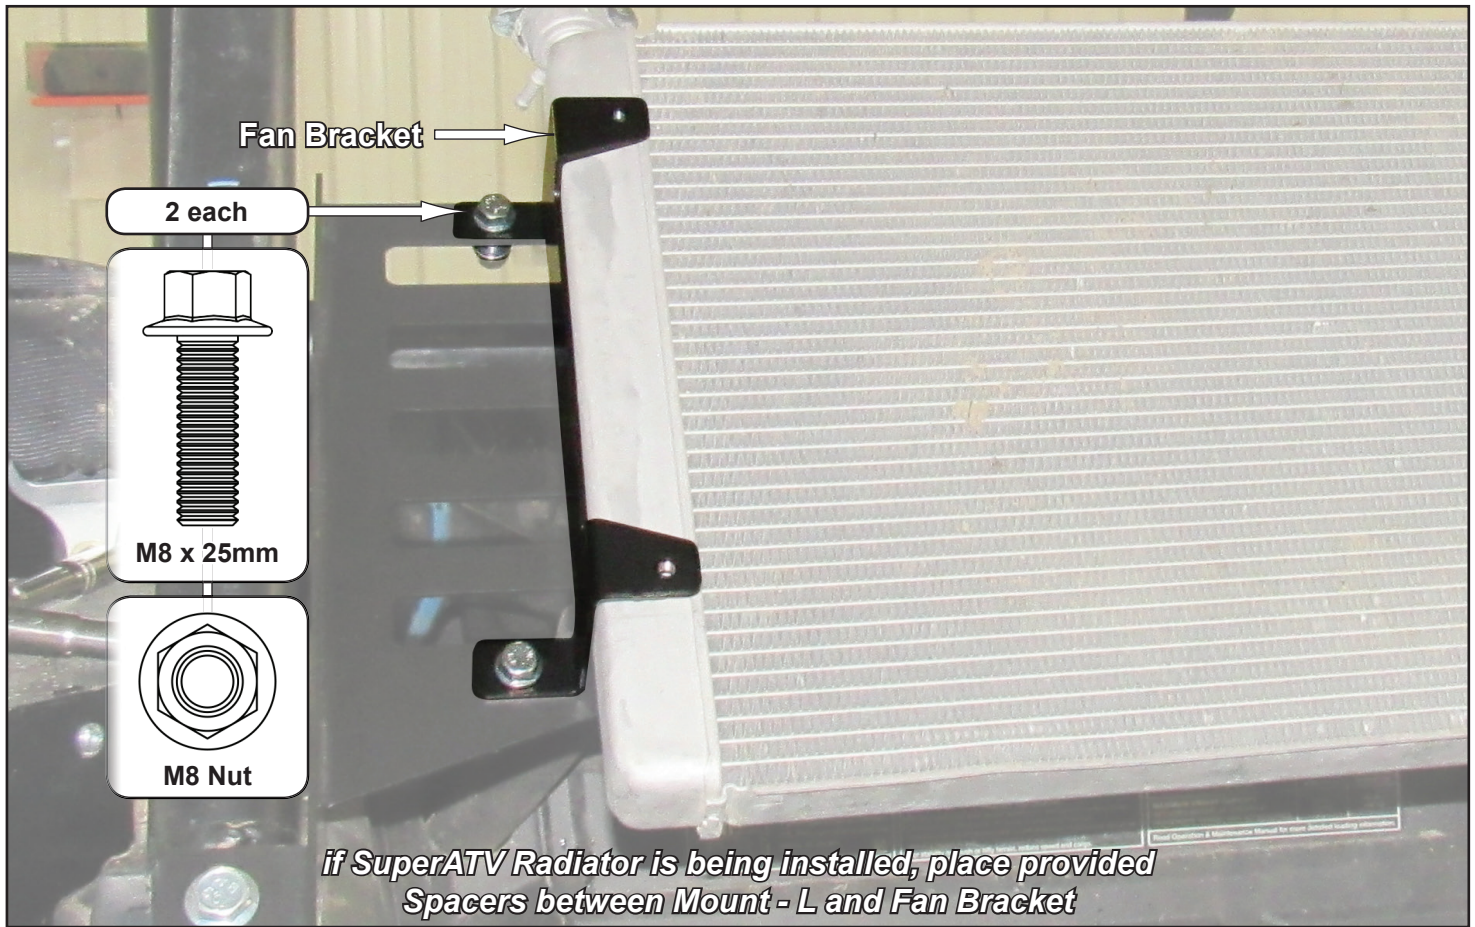


- Install Fan to Fan Brackets with hardware shown.

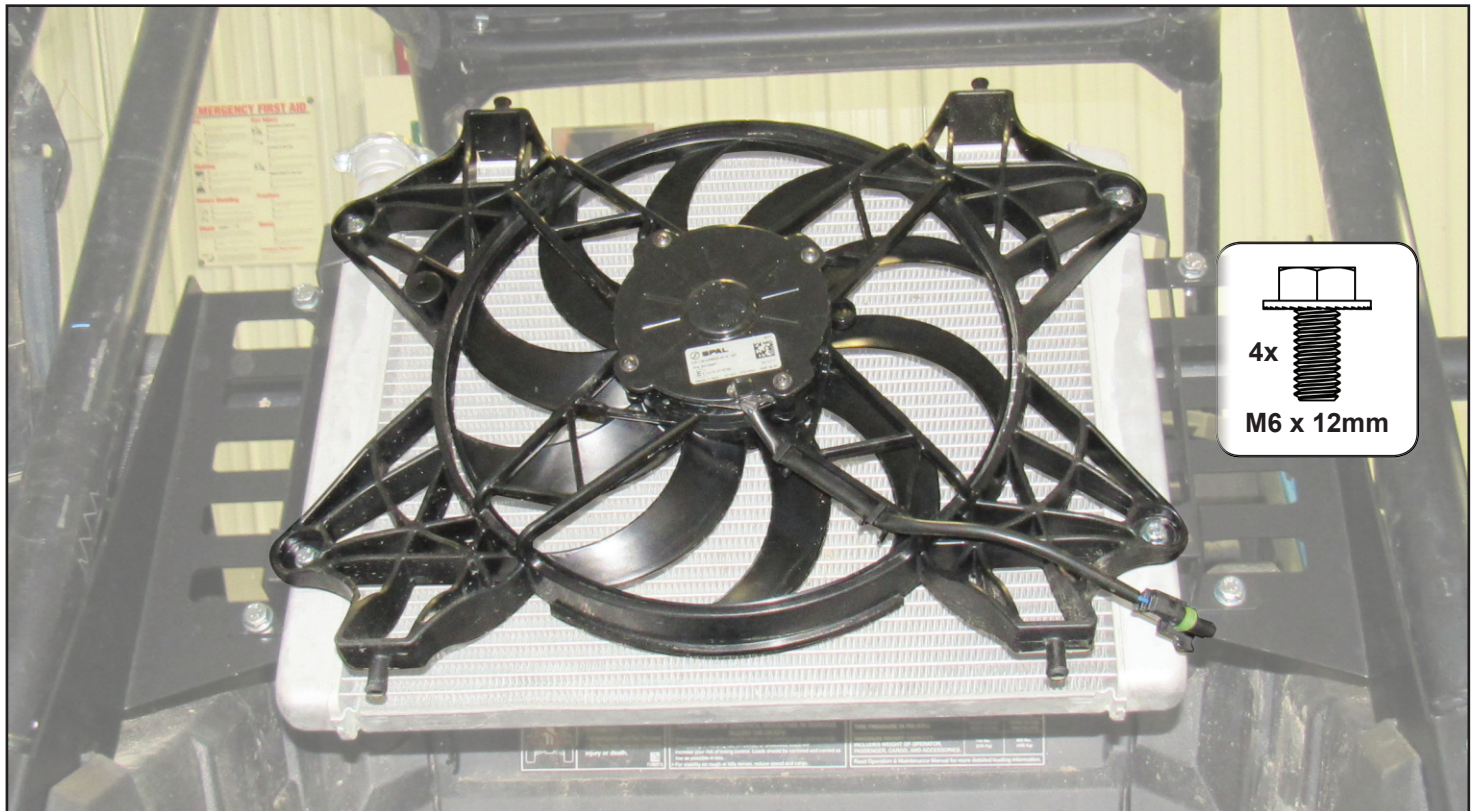


Center assembly between Cage and tighten all hardware completely.

reinstall Front Shocks

- Connect Wiring Extension to stock Fan Harness.
- Route through Firewall.

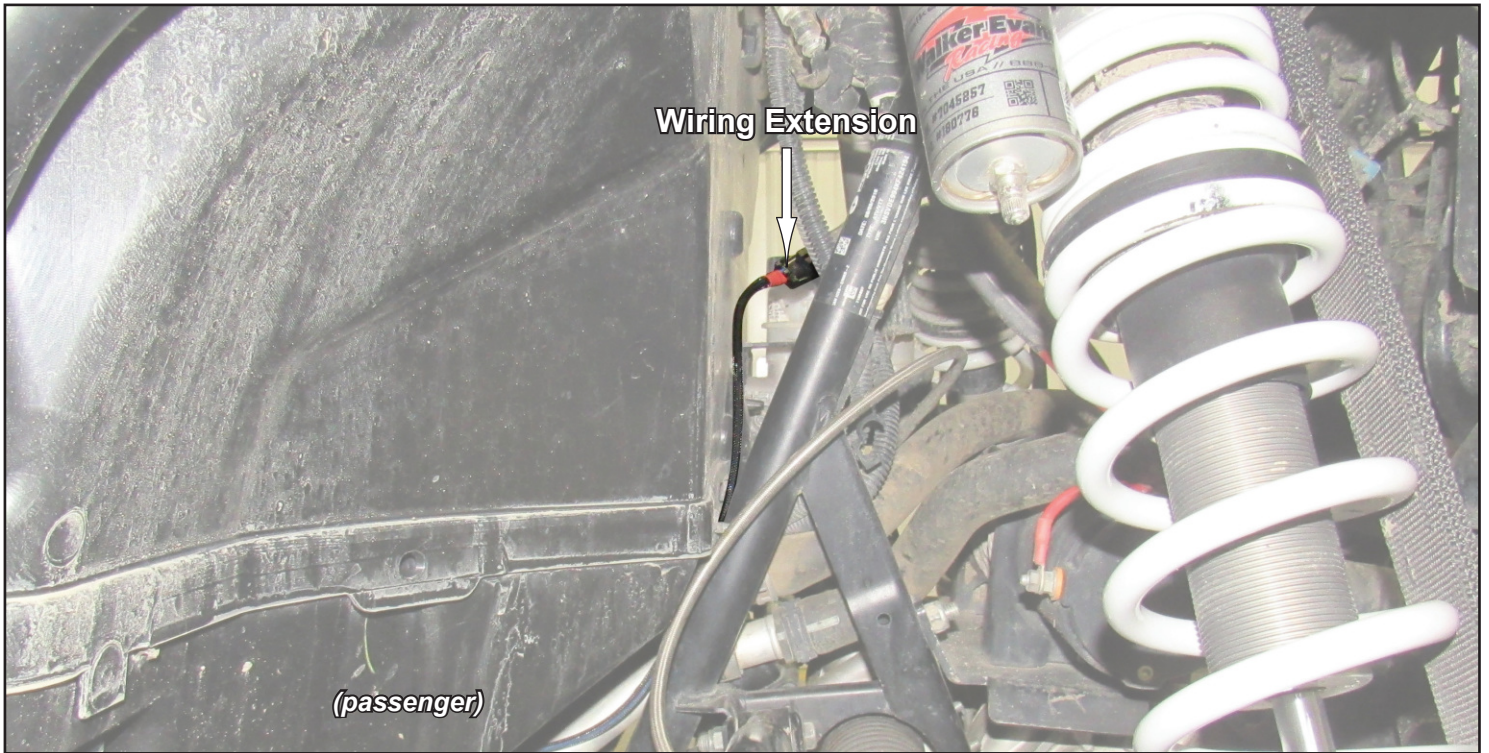


- Route Wiring Extension under Tunnel and to rear of machine.

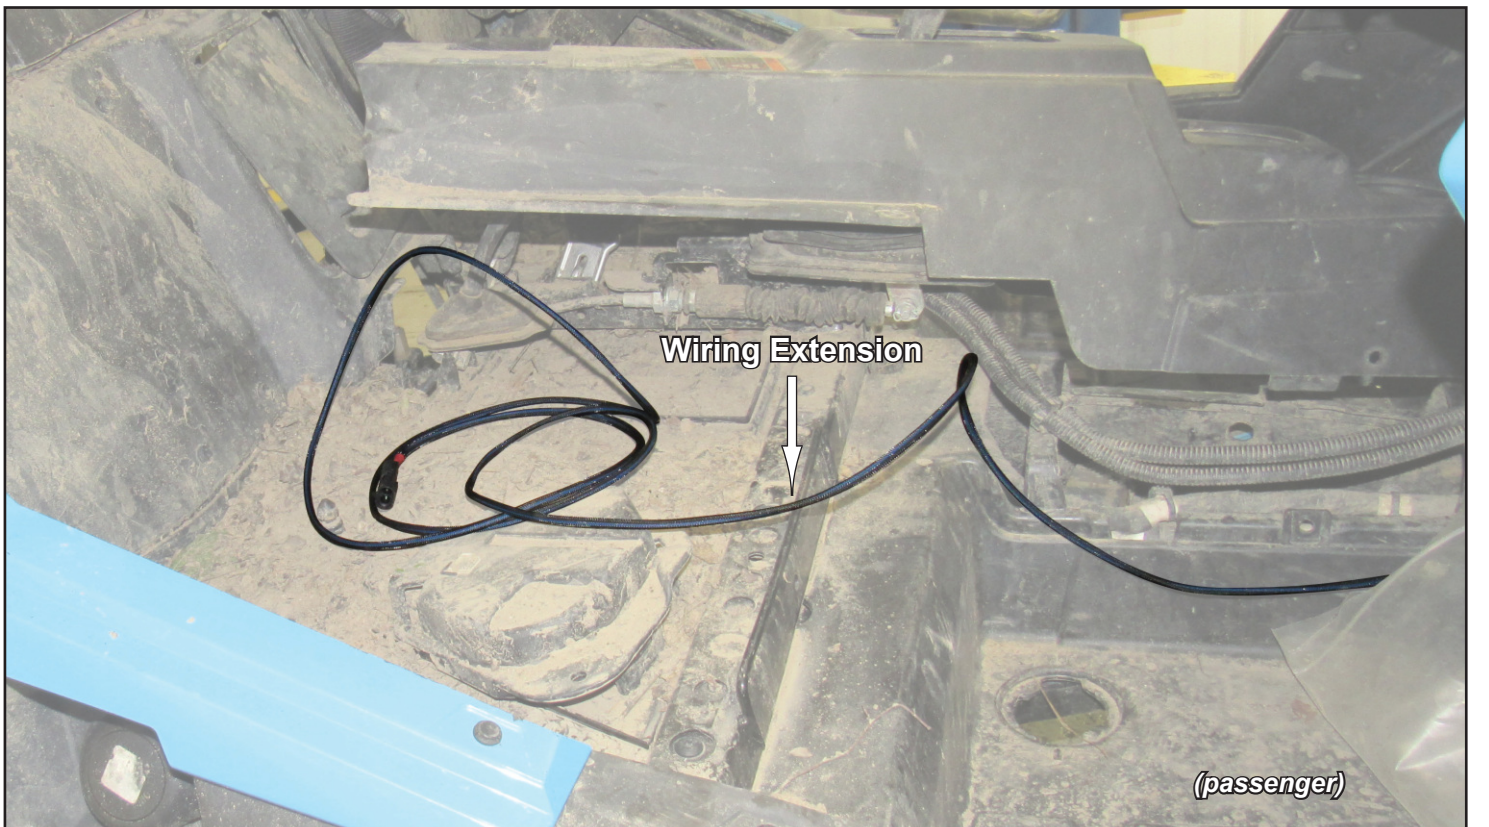




- Route Wiring Extension up and into Cargo Box; connect to Fan.
- Install Surge Tank to Cargo Box with hardware shown. Connect Overflow Tube to Radiator.

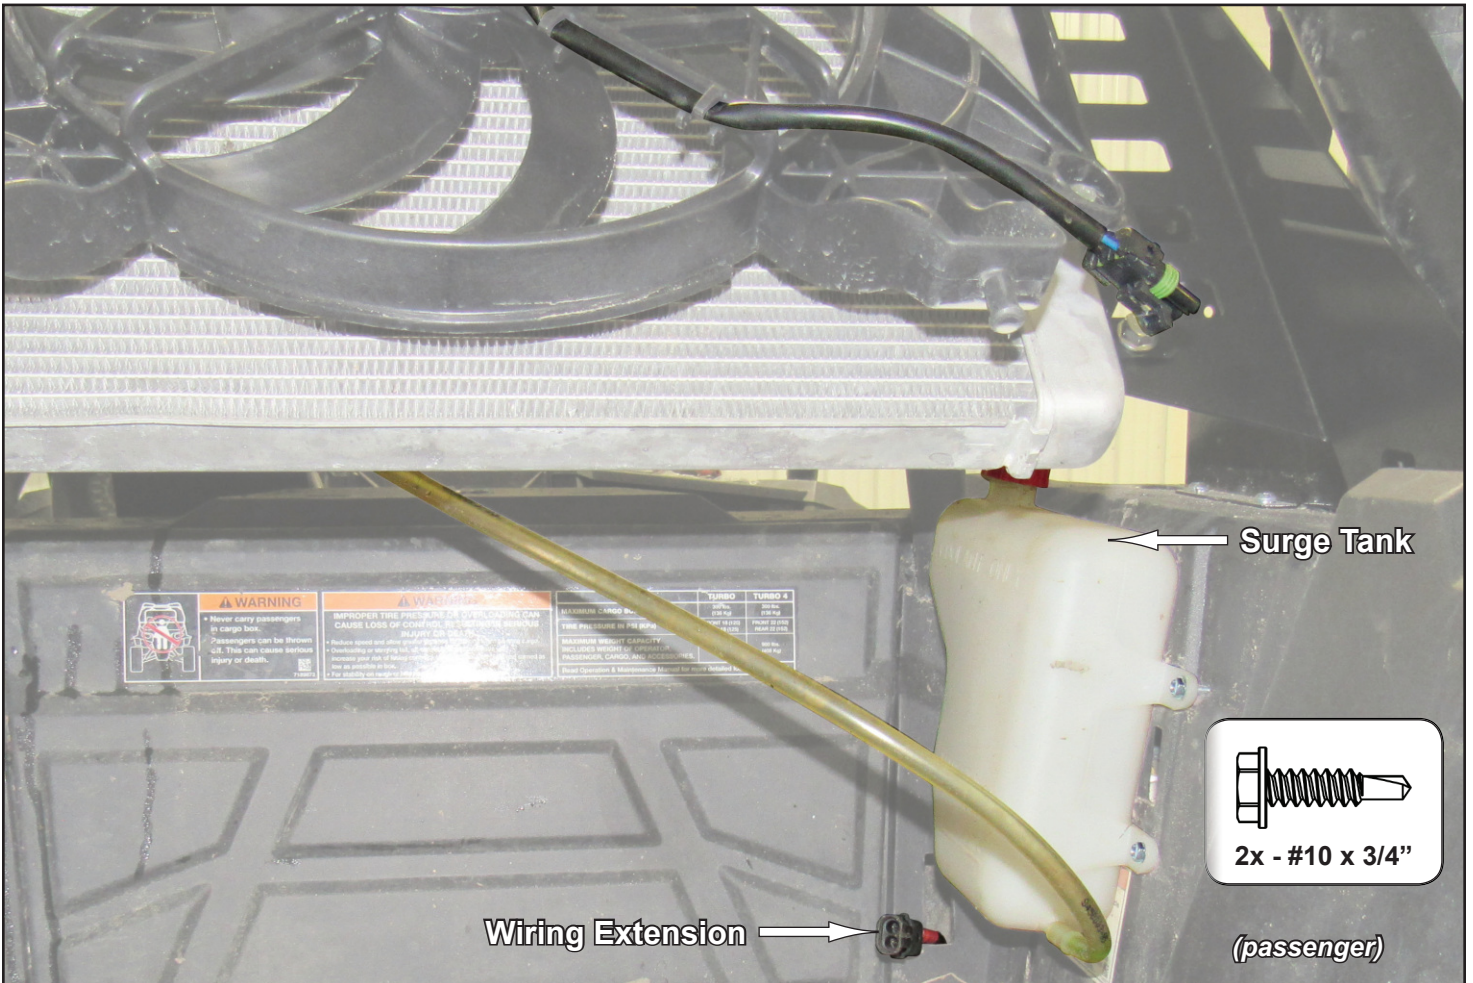

- Connect Hoses to Radiator with Clamps.

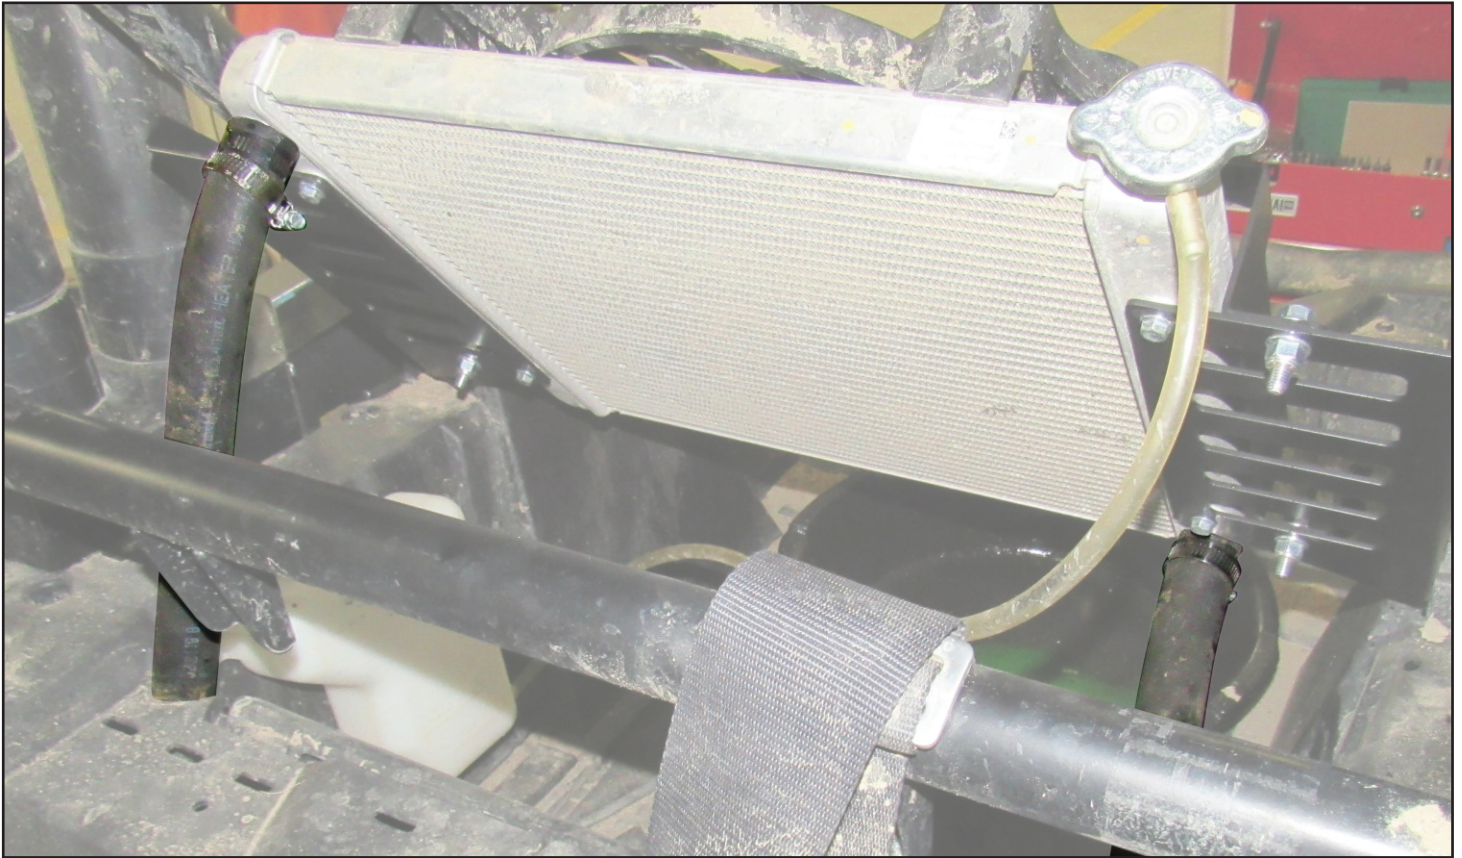

- Follow manufacturers recommendations and add Coolant. Refer to Service Manual and flush Cooling System.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.