


- Do not discard packaging until product has been successfully installed.

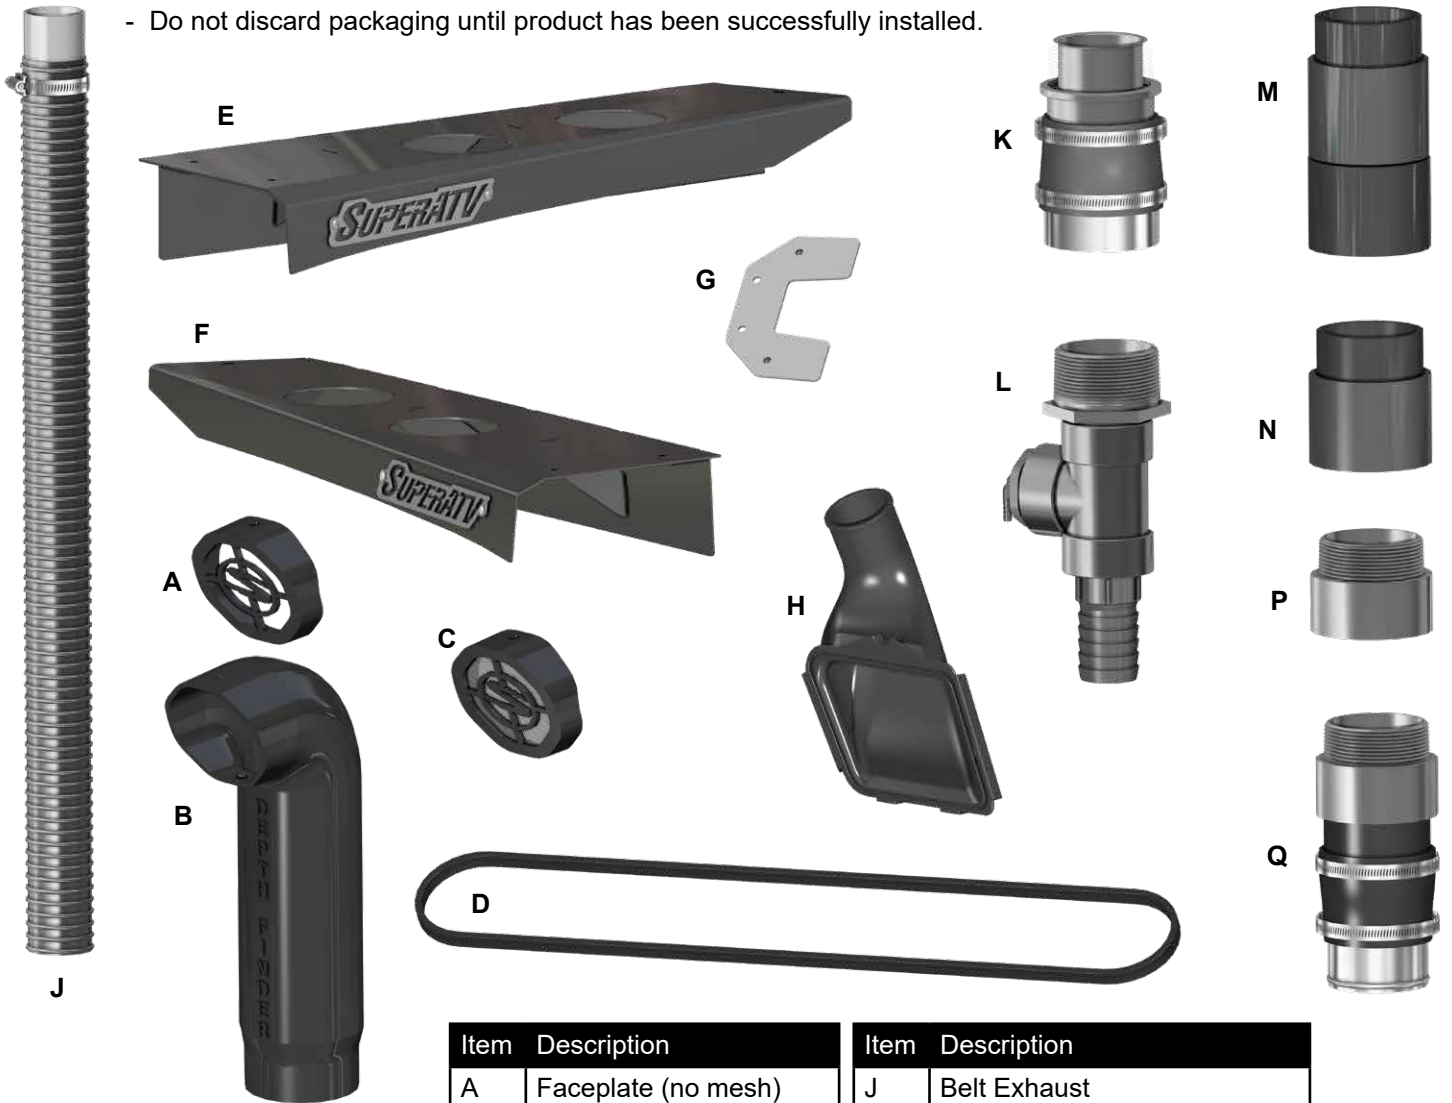

Item	Description
A	Faceplate (no mesh)
B	Snorkle Riser x 4
C	Faceplate Assembly x 3
D	Airbox Gasket
E	Riser Bracket - L
F	Riser Bracket - R
G	Riser Bracket Tab x 2
H	Belt Exhaust Boot

Item	Description
J	Belt Exhaust
K	Inlet Duct Riser
L	Belt Exhaust Riser
M	Tall Riser Pipe Assembly x 2
N	Riser Pipe Assembly x 2
P	Fitting
Q	Outlet Riser

(kit contents continue on following page)

Need help with your installation?

 sales@superatv.com
  www.superatv.com

 1-855-743-3427
  8:00am - 8:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You
 For Choosing
SUPERATV.COM[®]

(kit contents continued)

**Wire Ties
(2 long and 10 short)**



Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.



SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.



reinstall after Snorkel Kit has been installed

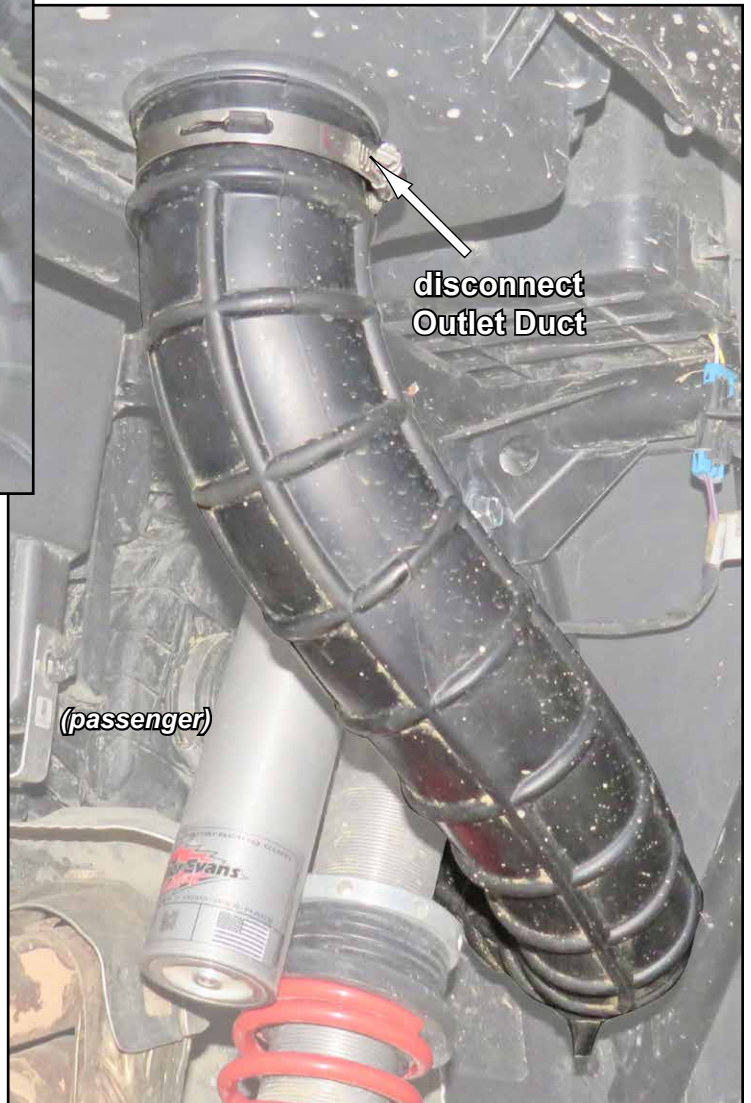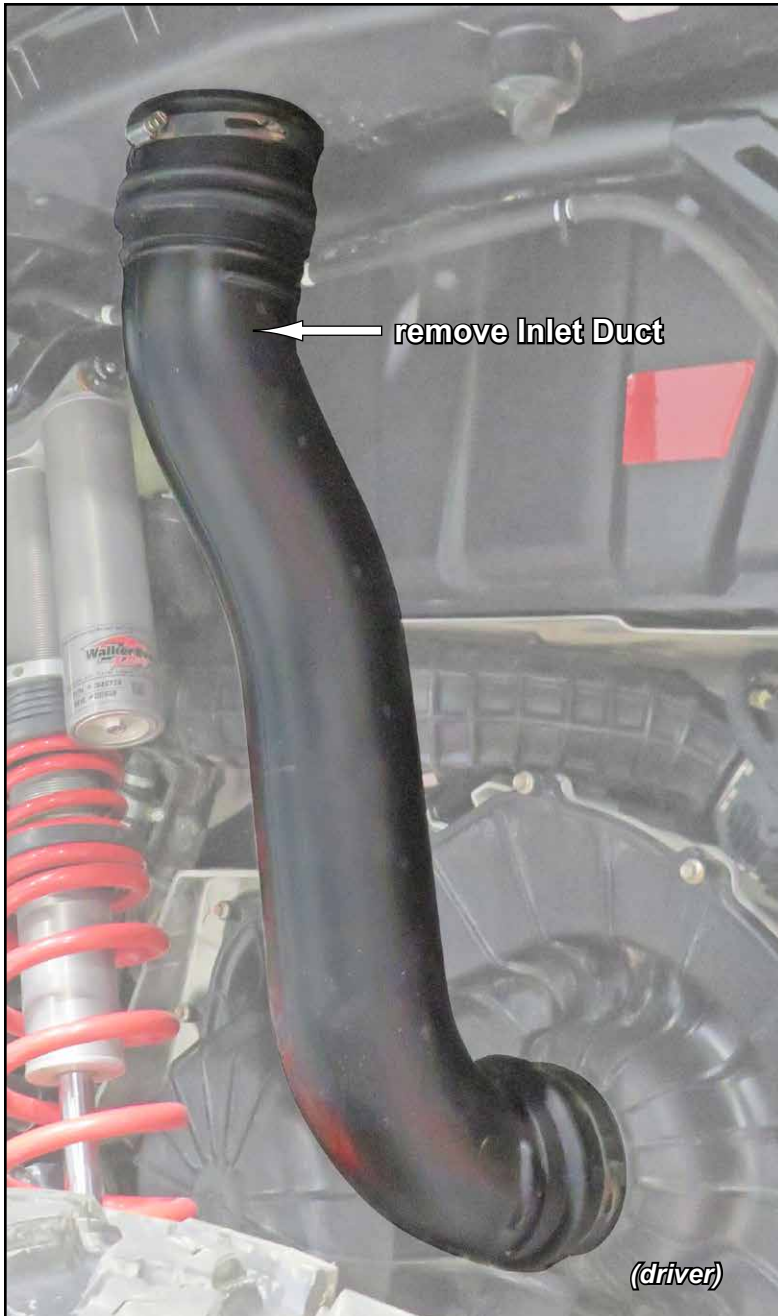





- Repeat for driver side.
- Reinstall after Snorkel Kit has been installed.




- Replace stock Airbox Gasket with provided Airbox Gasket (D).
- Reinstall Airbox Lid.




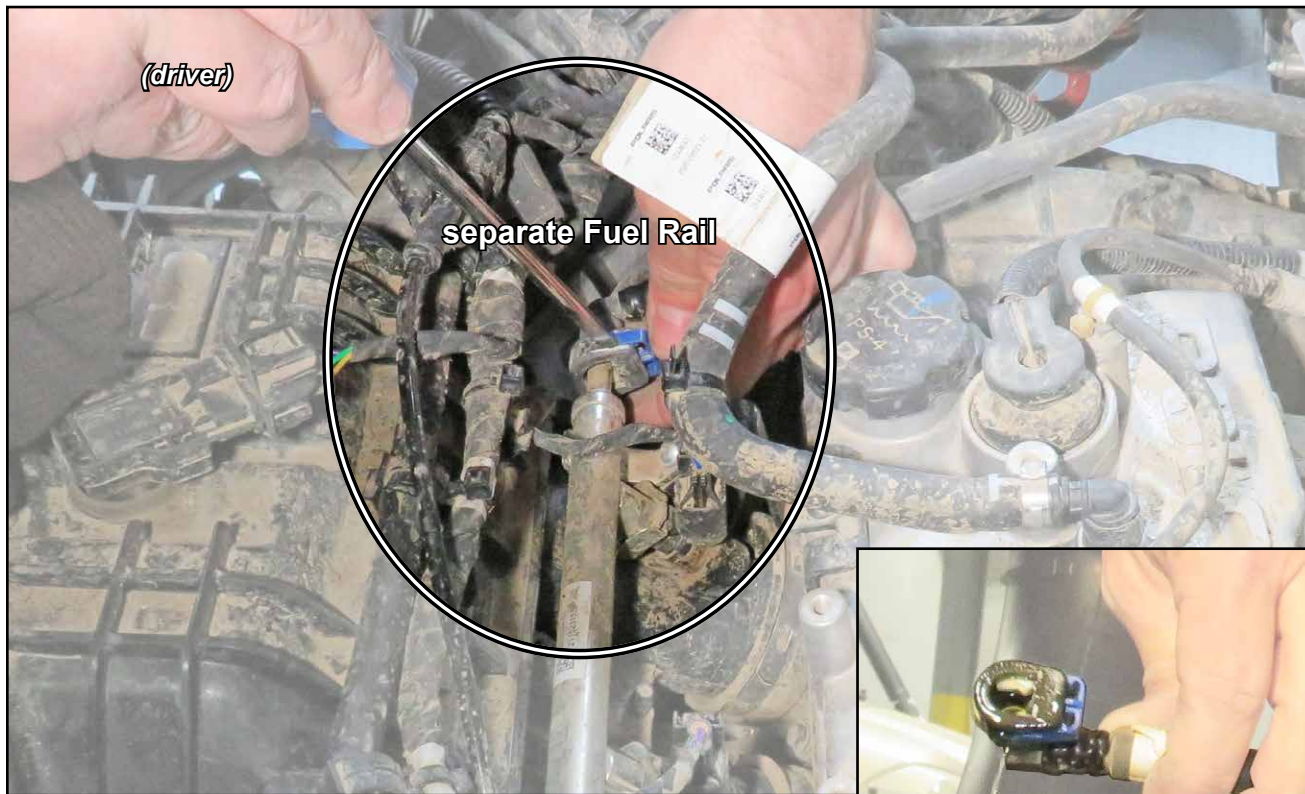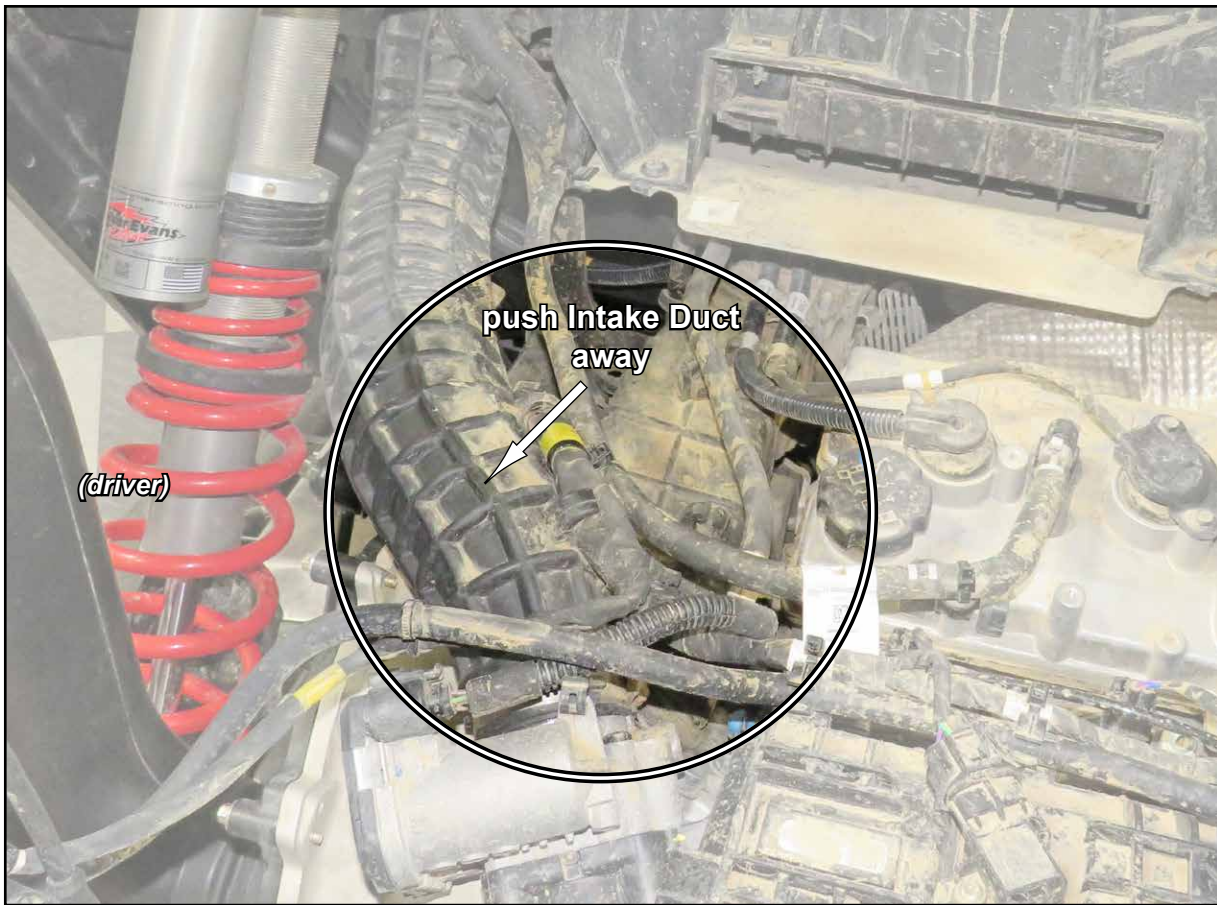

- Reinstall Fuel Rail after Belt Exhaust Boot (H) has been installed.

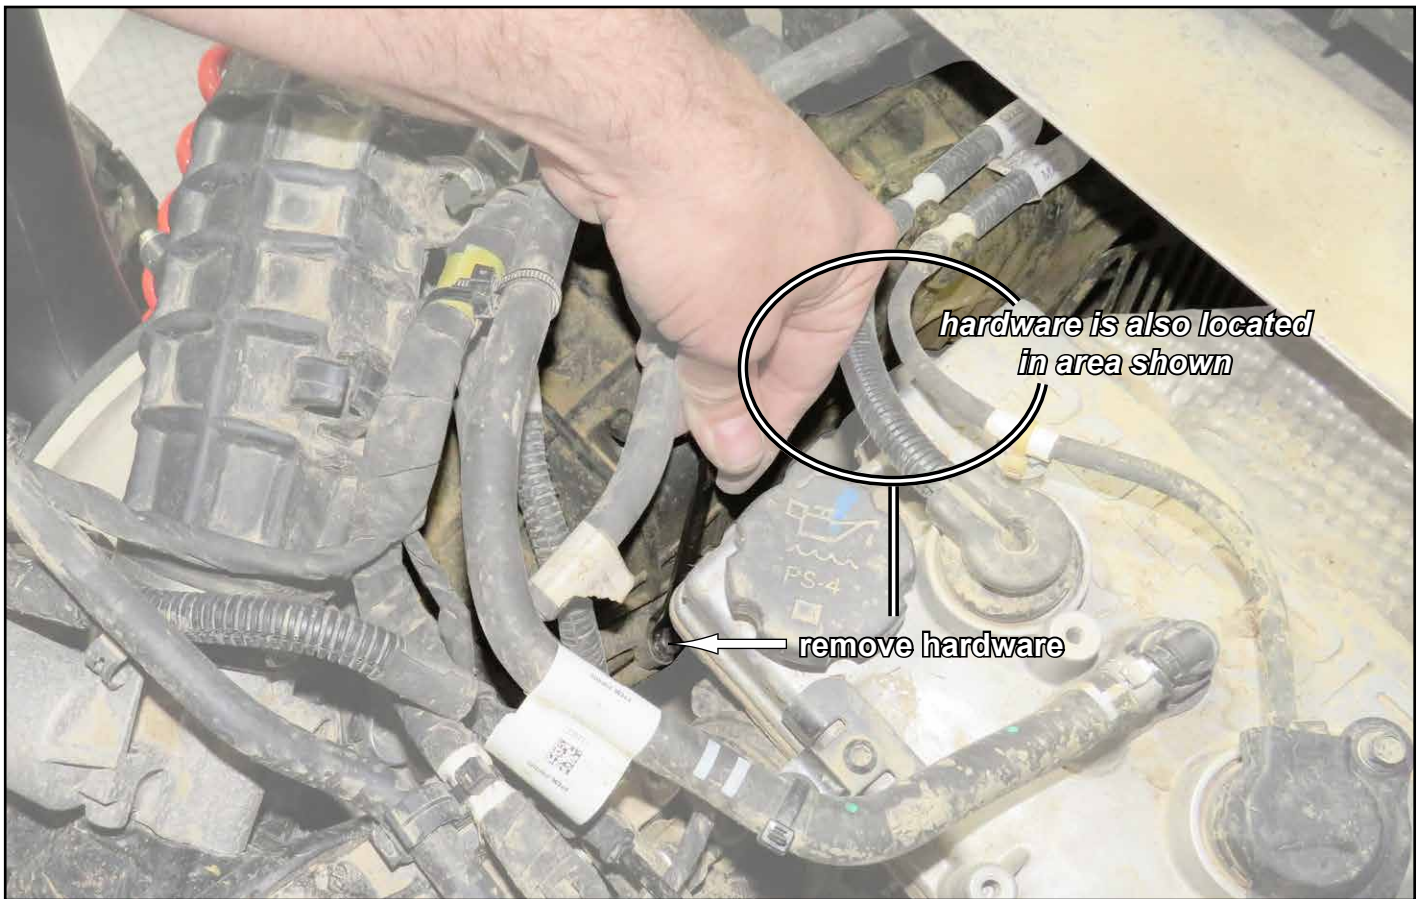


- Remove Clutch Outlet Duct from machine.

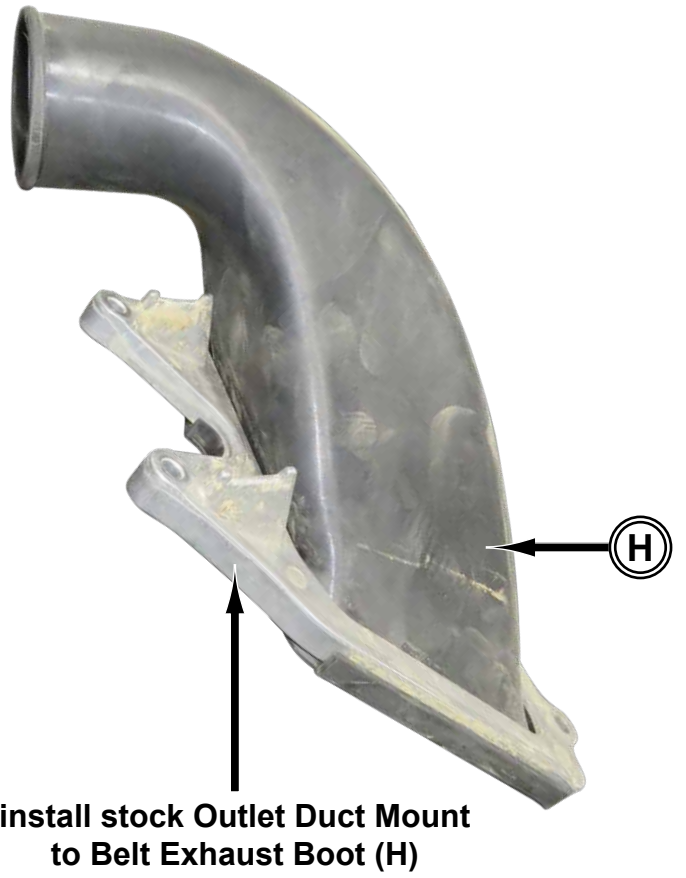


- Reinstall assembly with stock hardware; tighten.




- Install Bumpers to Riser Bracket Tabs (G).

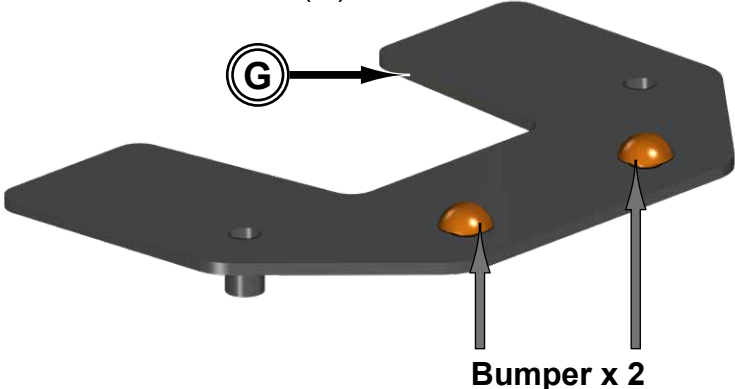


- Install Riser Bracket Tabs (G) to Riser Brackets (E)(F) with hardware shown; tighten.

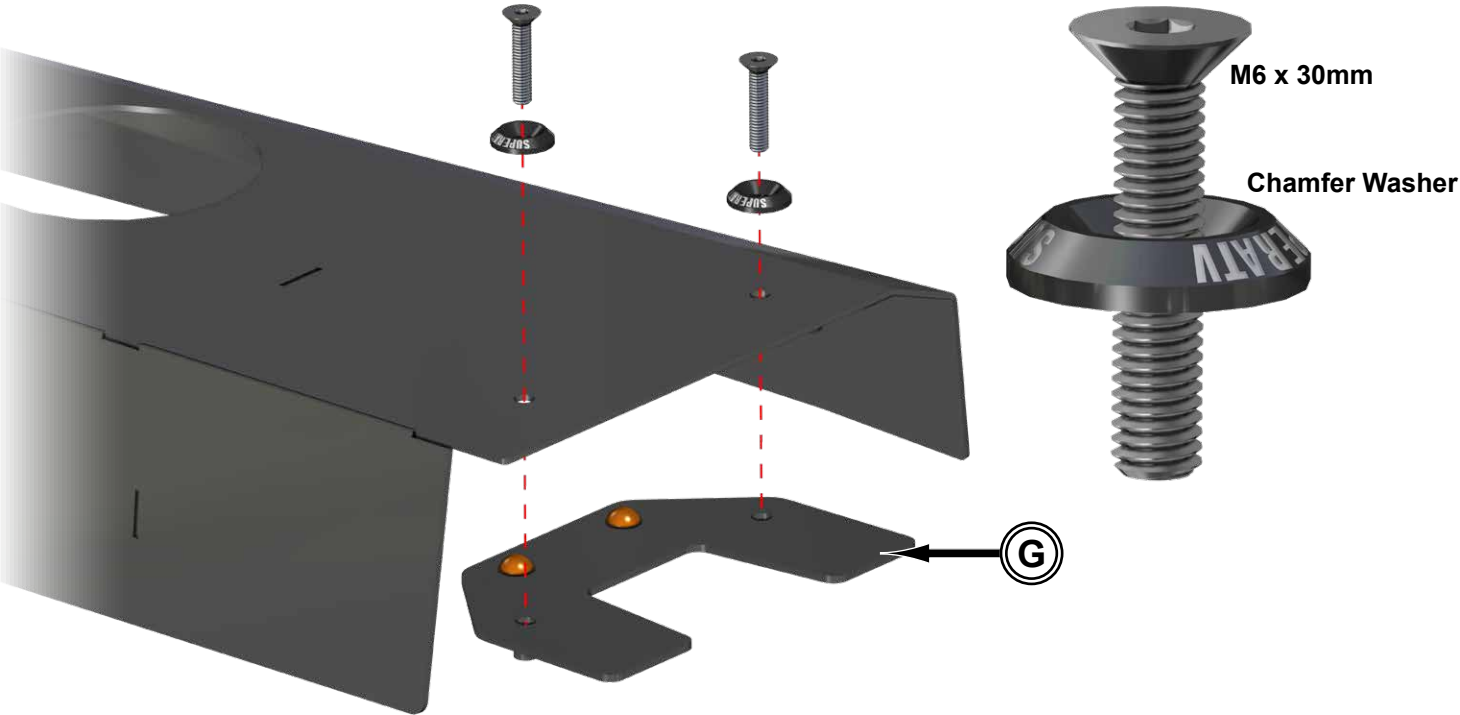


- Place Spacers into locations shown.

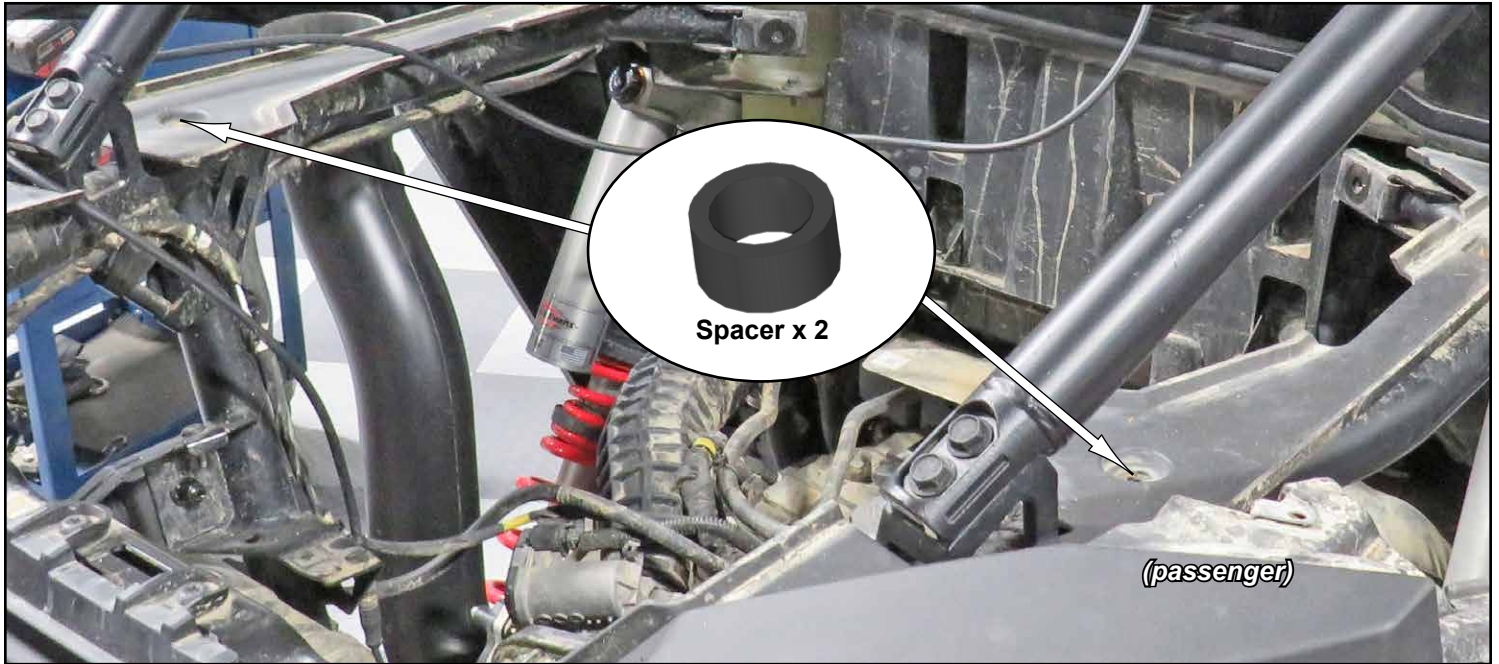

- Install Riser Bracket - R (F) with hardware shown; tighten.
- Repeat for Riser Bracket - L (E).

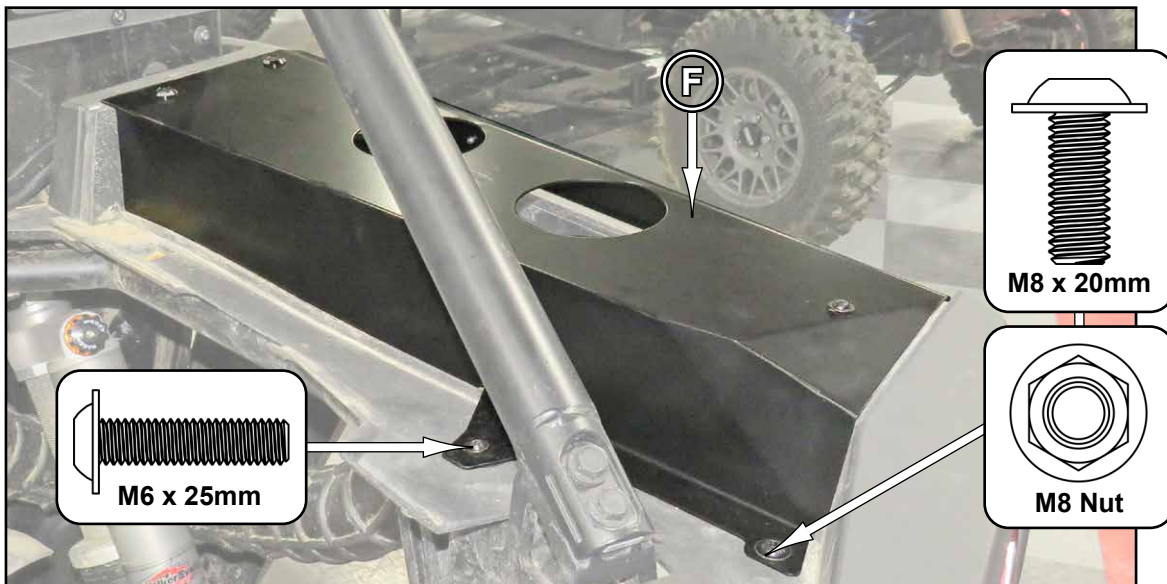

- Install provided Locknut to Outlet Riser (Q).

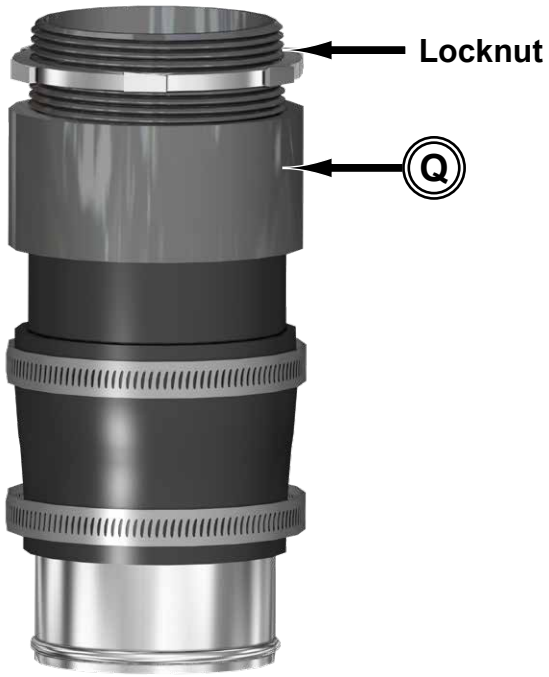


- Insert Outlet Riser (Q) into Riser Bracket - R (F) .



apply black RTV 100% Silicone
evenly to threads



- Install Tall Riser Pipe Assembly (M) to Outlet Riser (Q).

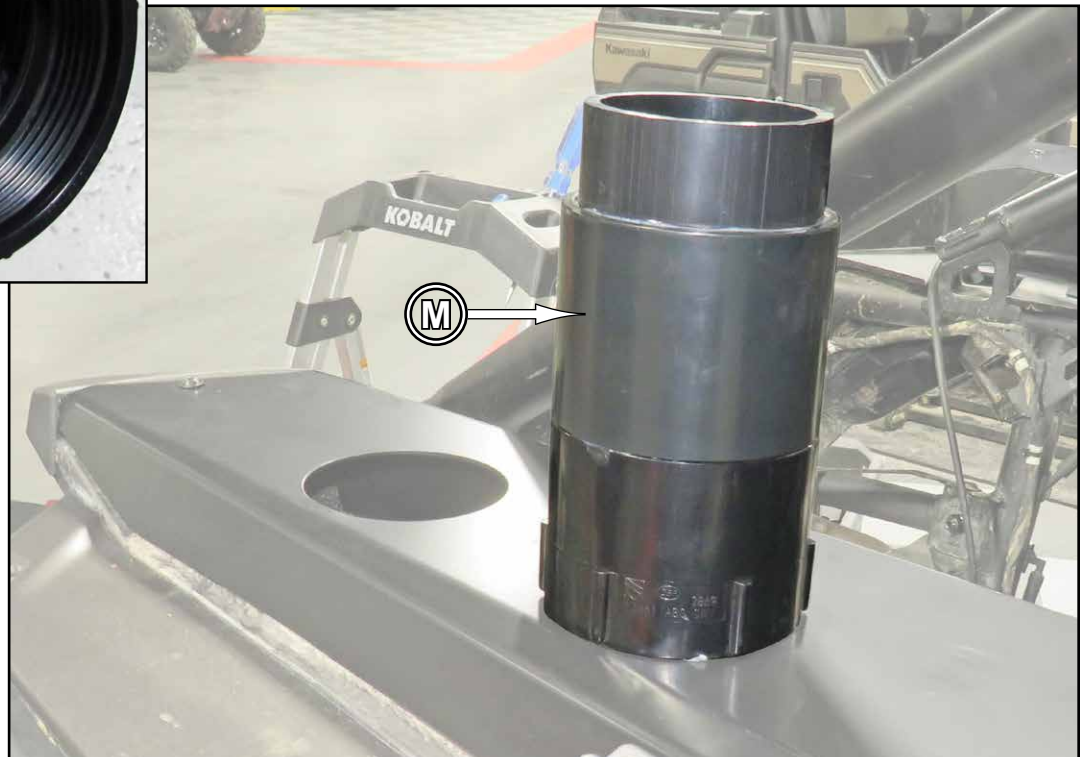


- Remove any remaining slack by rotating Locknut up until tight against Riser Bracket - R (F) .


- Reconnect stock Outlet Duct to Airbox Riser (Q).



- Install provided Locknut to Fitting (P).

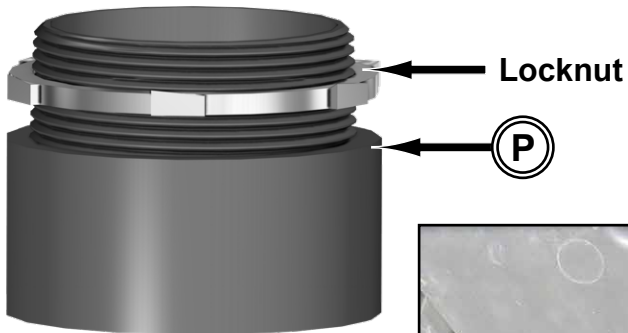


- Insert Fitting (P) into Riser Bracket - R (F) .

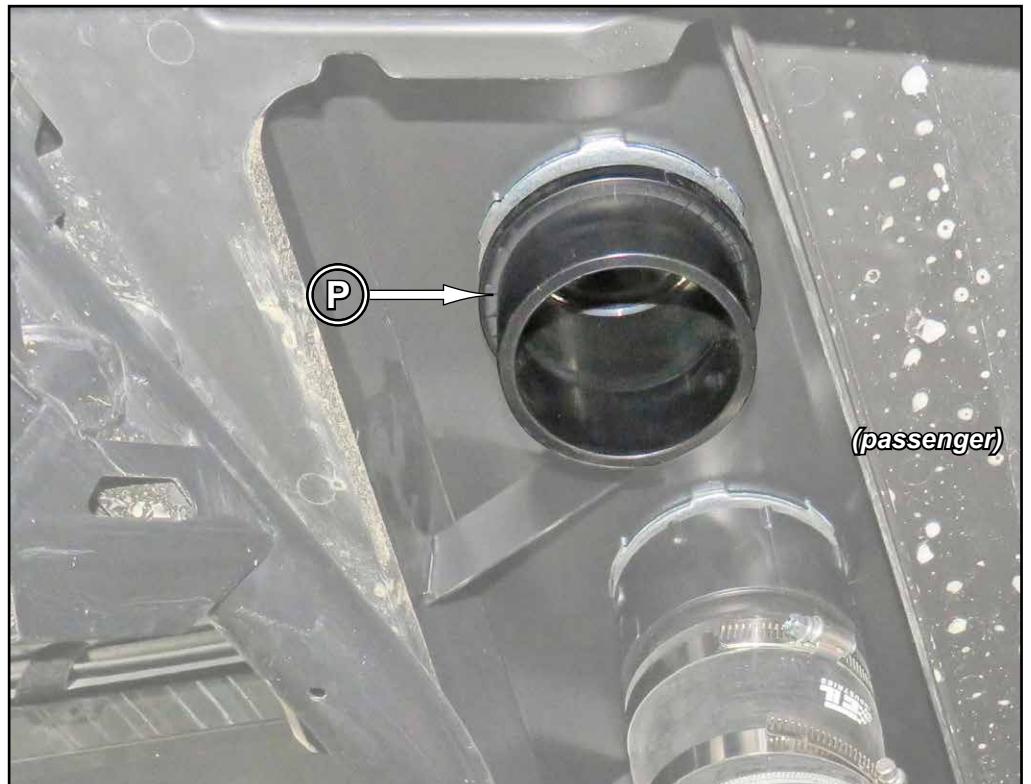

apply black RTV 100% Silicone
evenly to threads




- Install Riser Pipe Assembly (N) to Fitting (P).

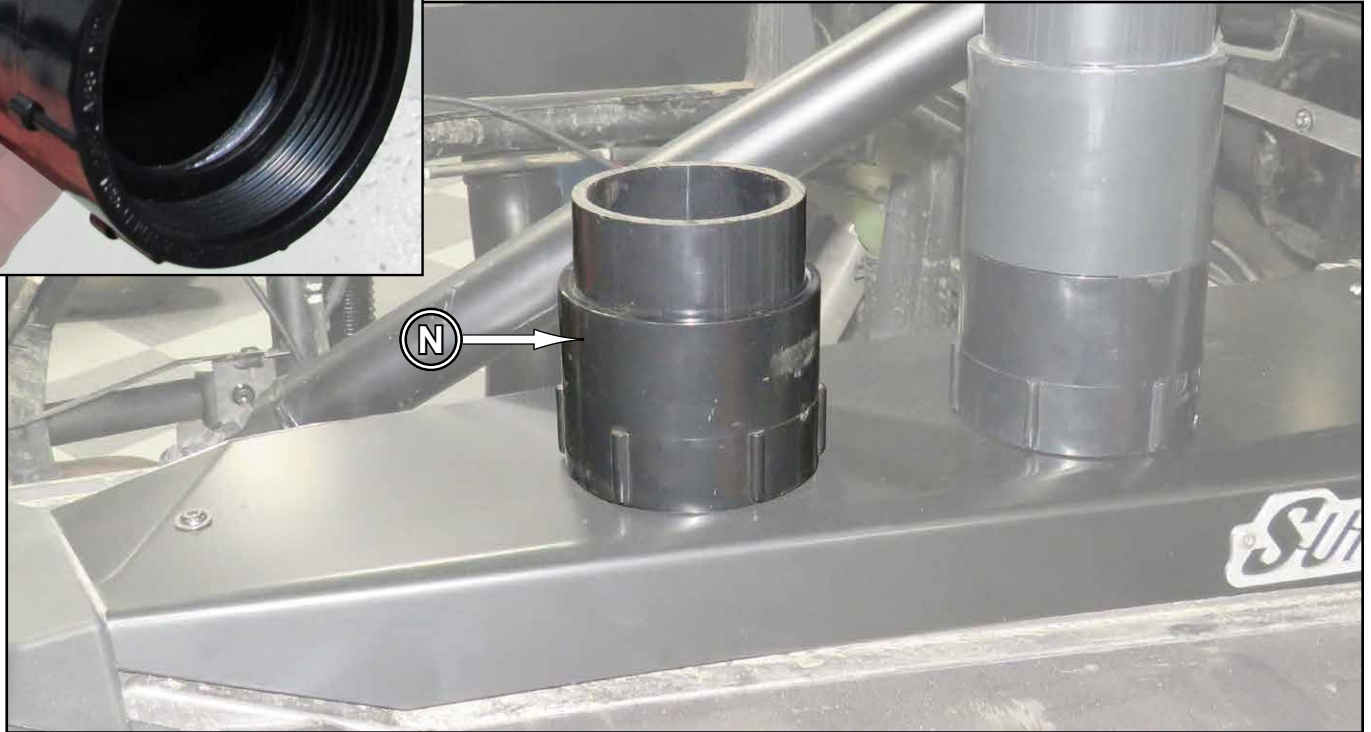

- Remove any remaining slack by rotating Locknut up until tight against Riser Bracket - R (F) .

- Install provided Locknut to Inlet Duct Riser (K).

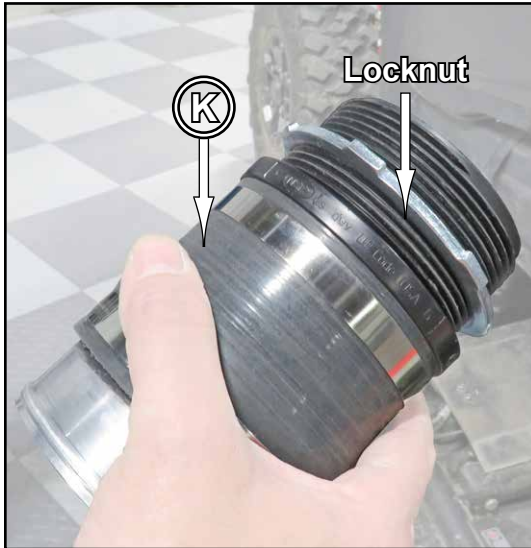

- Insert Inlet Duct Riser (K) into Riser Bracket - L (E) .




- Install Tall Riser Pipe Assembly (M) to Inlet Duct Riser (K).



- Remove any remaining slack by rotating Locknut up until tight against Riser Bracket - L (E) .

- Install provided Locknut to Belt Exhaust Riser (L).

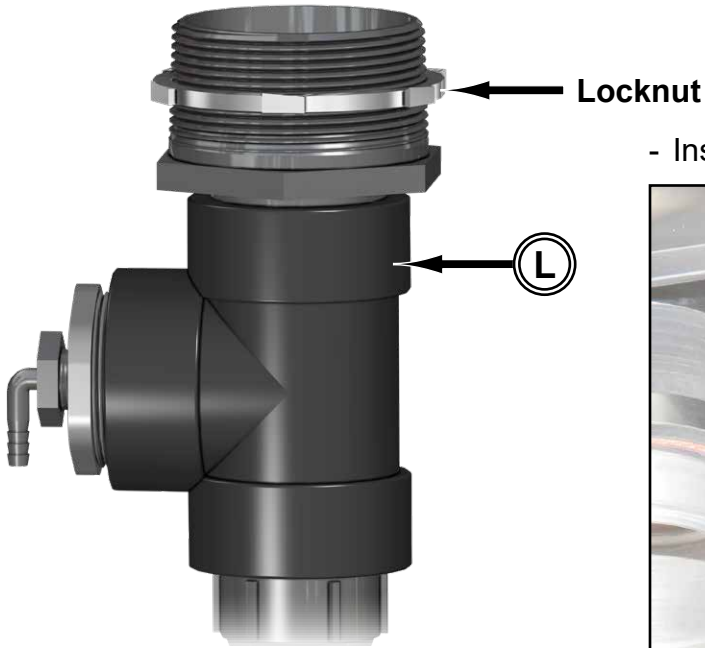

- Insert Belt Exhaust Riser (L) into Riser Bracket - L (E) .



apply black RTV 100% Silicone evenly to threads



- Install Riser Pipe Assembly (N) to Belt Exhaust Riser (L).



- Remove any remaining slack by rotating Locknut up until tight against Riser Bracket - L (E) .


- Reconnect stock Inlet Duct to Inlet Duct Riser (K).



- Install Belt (J) to Belt Exhaust Riser (L) and Belt Exhaust Boot (H) with Clamps shown; tighten.




- install Faceplates to Snorkel Risers (B) with hardware shown.

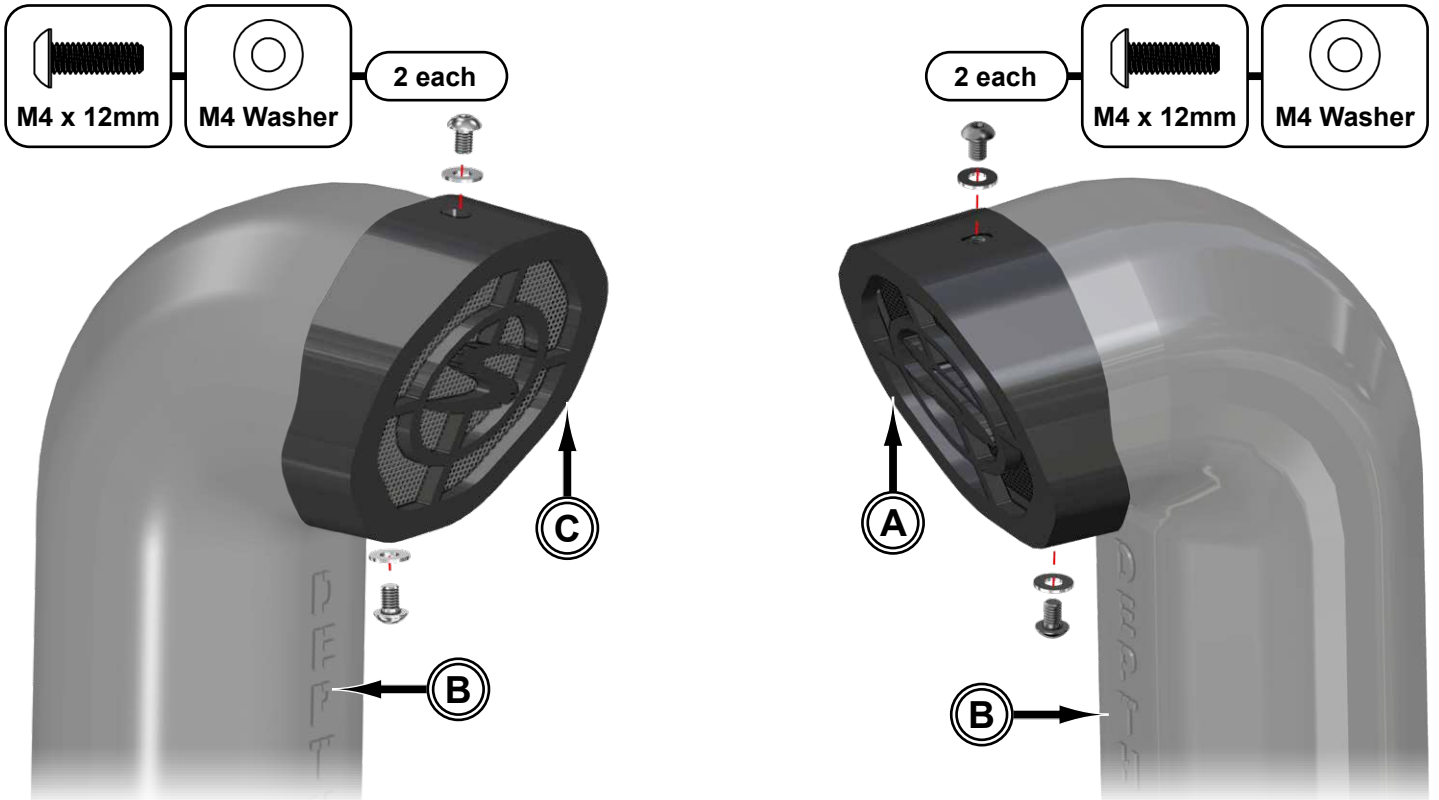


- Apply black RTV 100% Silicone to Riser Pipes.
- Install Snorkel Risers.



Rear location for Bellow installation:

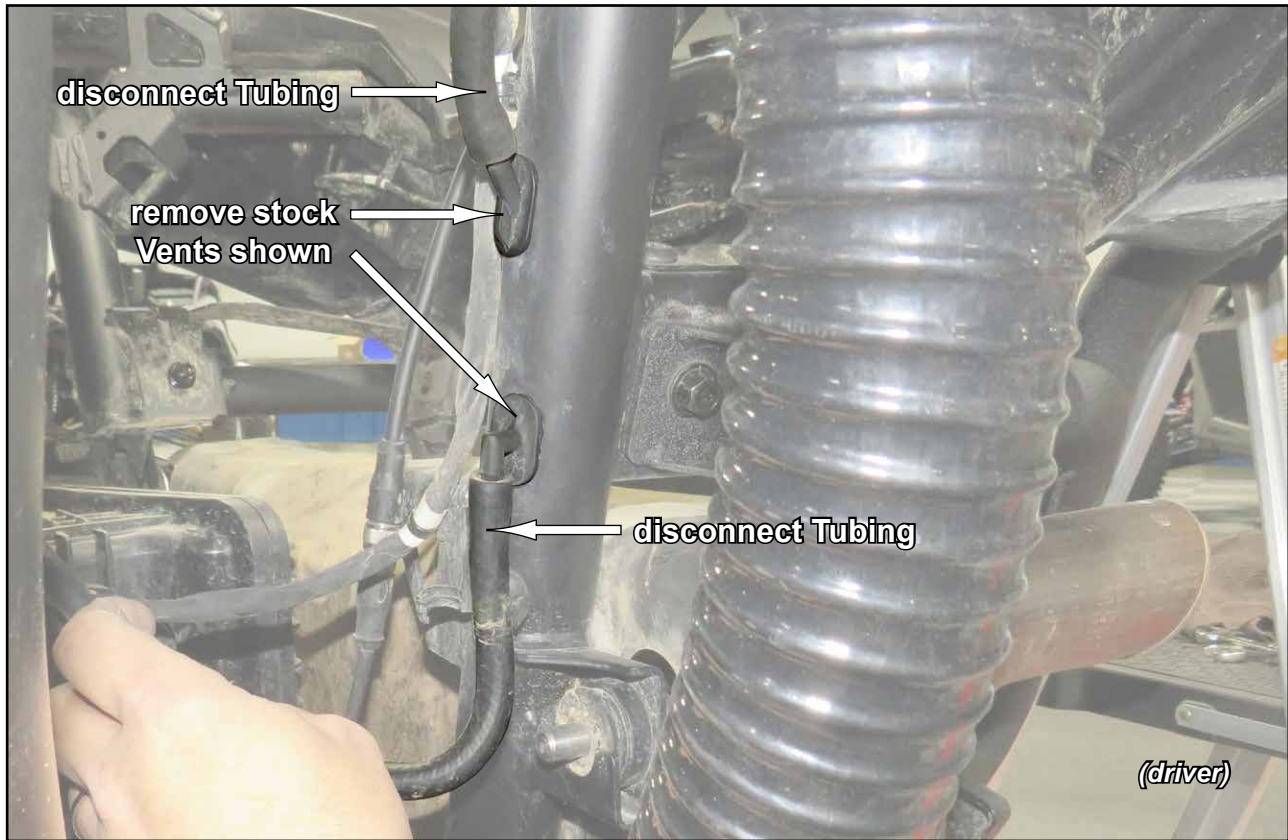


- Install Bellow to Straight Connector.
- Connect assembly to previously removed stock Tubing.
- Wire Tie to Frame.

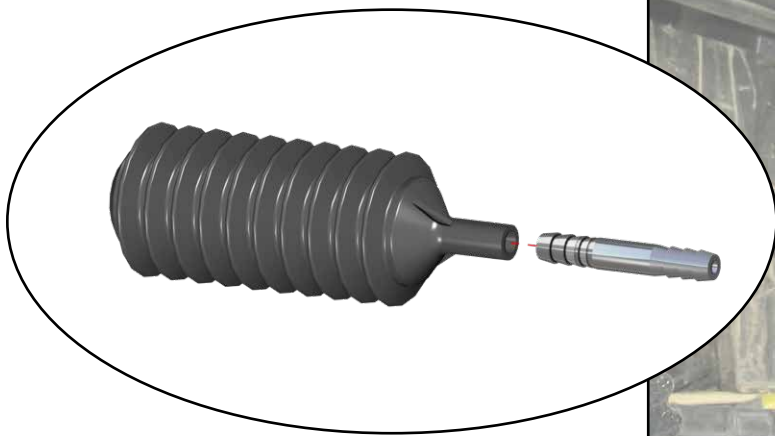

- Connect Fuel Tank Vent Hose to Belt Exhaust Riser (L).



Front location for Bellow installation:

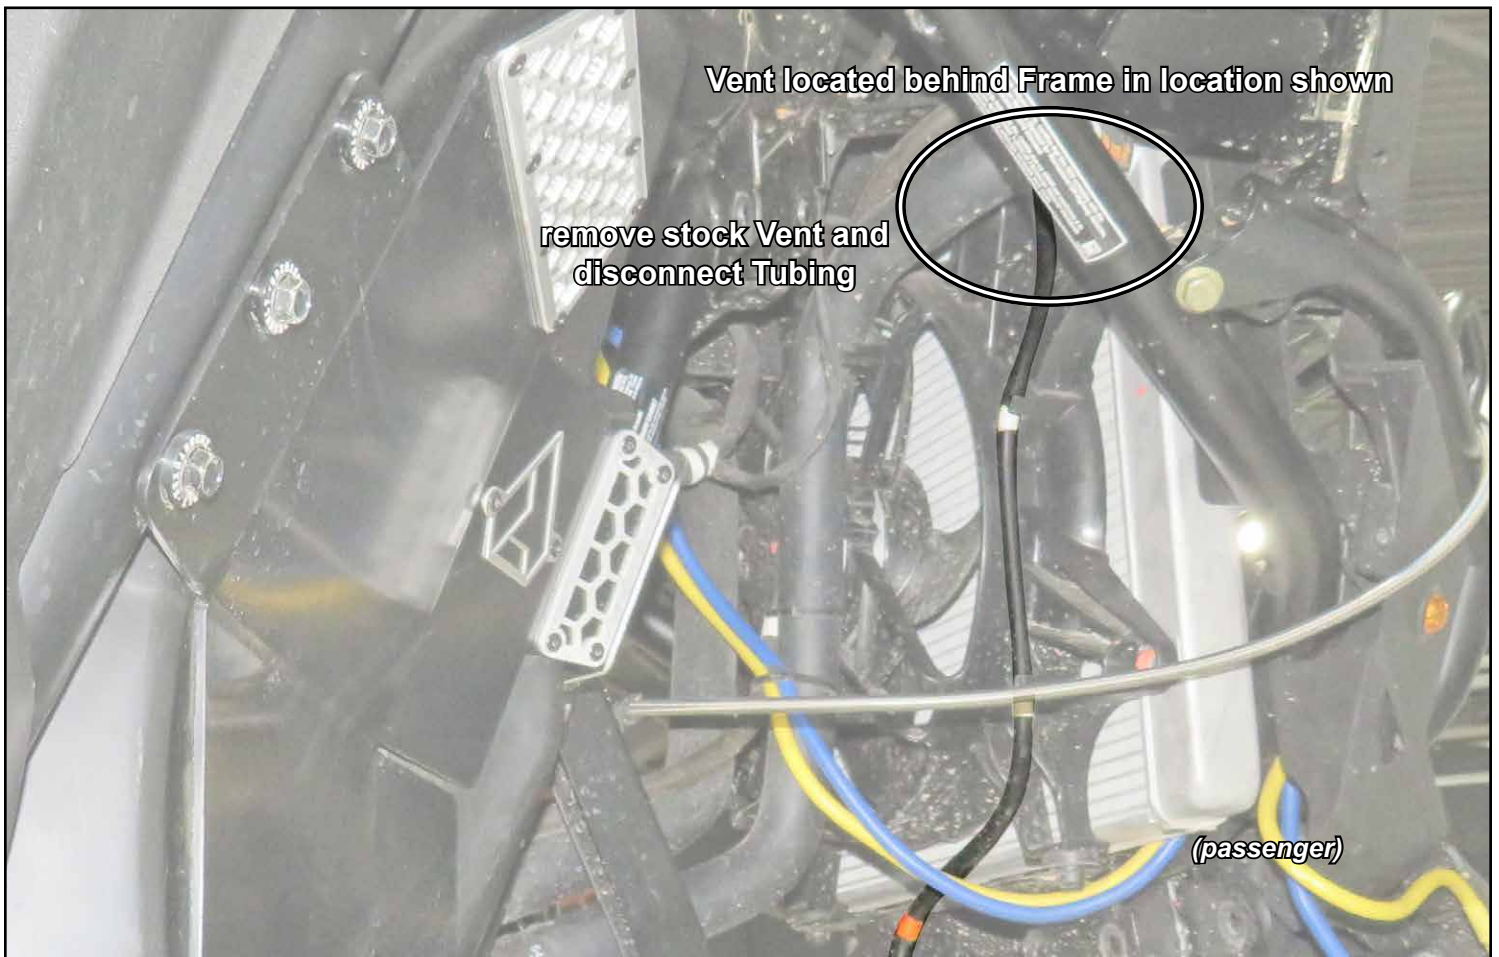

- Install Bellow to Reducer.
- Connect assembly to previously removed stock Tubing.
- Wire Tie to Frame.

