

SG-HARNESS INSTRUCTIONS

KIT CONTENTS



PREPARE

1. Remove windshield/ speaker grilles/ outer fairing.
2. Remove OEM headlamp and disconnect headlamp connector.
3. Remove seat.
4. Remove oil tank.
5. Remove the harness box cover.

NOTE: Make sure fuse IS NOT in the fuse holder before making connection.

INSTALL

1. Install the wire harness into the wire harness box. See Fig 1. and Fig 2.

CONNECT BATTERY "+"

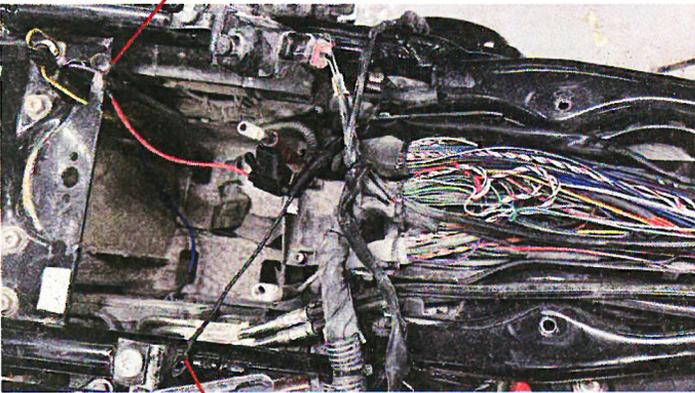


Fig 1

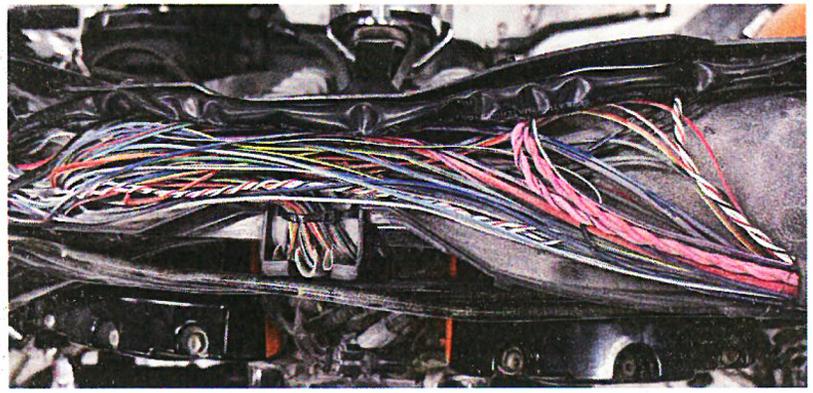


Fig 2

CONNECT BATTERY "-"

2. Reinstall all the parts back.