
2753 Michigan Road • Madison, Indiana 47250 • 855-743-3427

INSTALLATION INSTRUCTIONS
Power Flip Windshield
for Polaris® General™

- SuperATV does not recommend keeping Windshield installed while transporting on an open air trailer. Remove or secure with straps.
- This item is not returnable if the protective film has been removed.
- Test fit to the cage to confirm fitment before removing film.
- Do not discard packaging until product has been successfully installed.

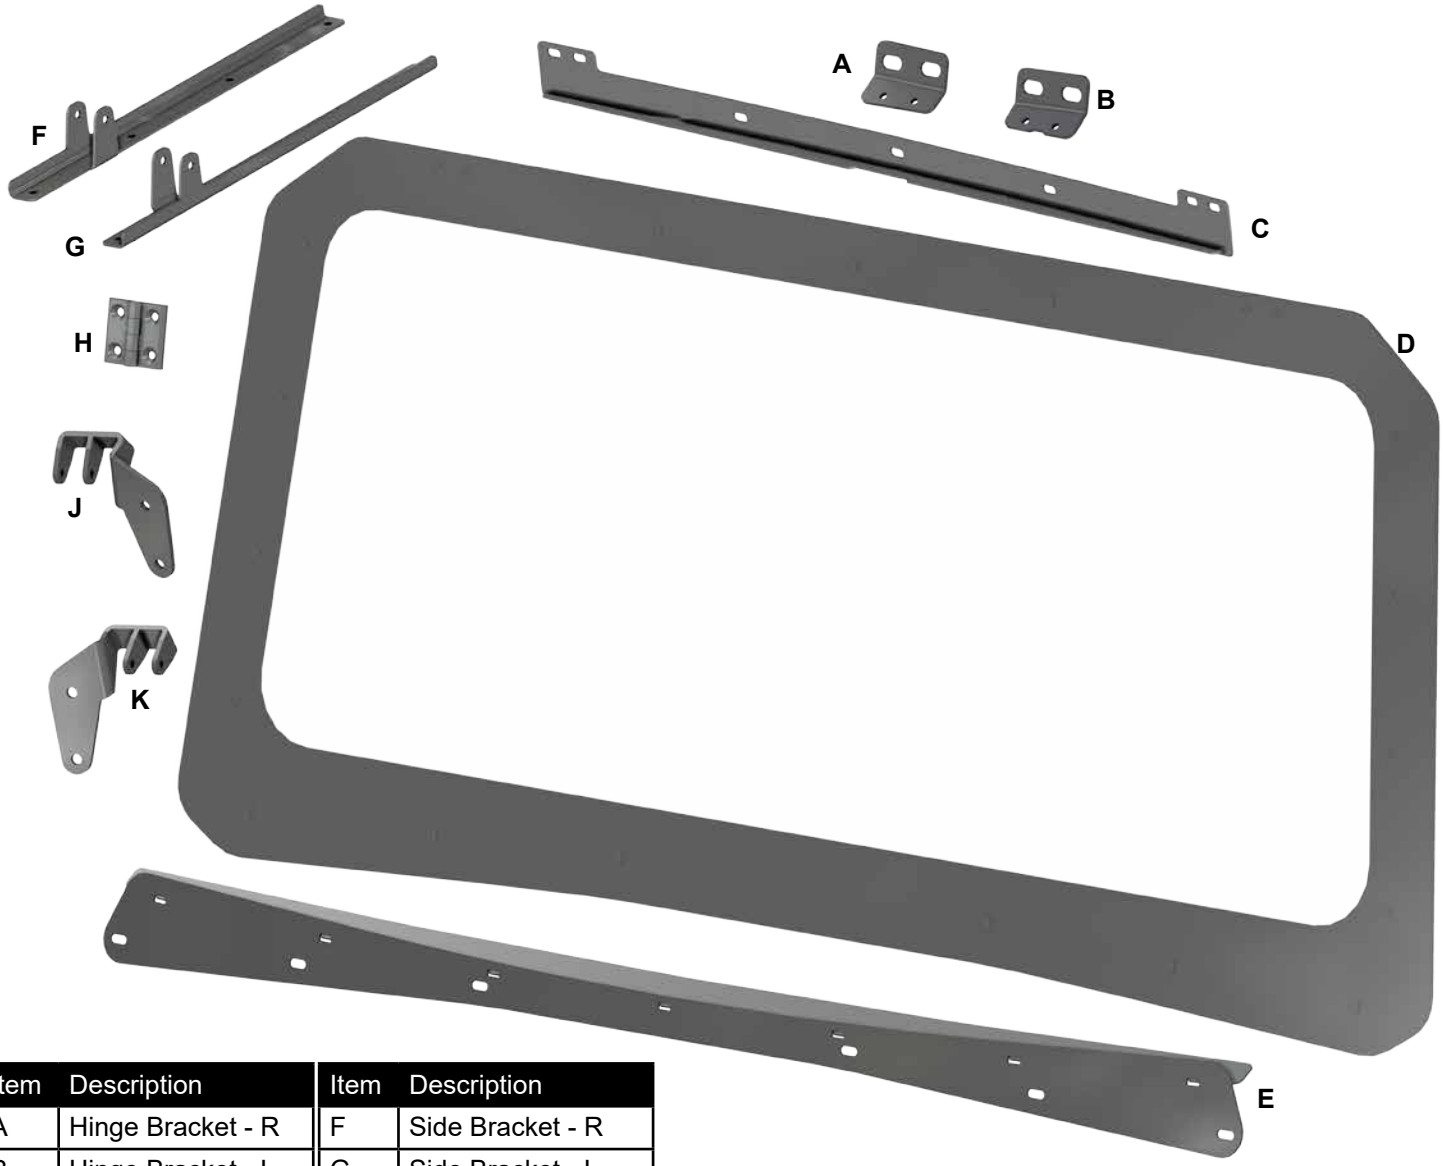

Item	Description	Item	Description
A	Hinge Bracket - R	F	Side Bracket - R
B	Hinge Bracket - L	G	Side Bracket - L
C	Top Frame	H	Hinge x 2
D	Windshield	J	Actuator Mount - L
E	Lower Frame	K	Actuator Mount - R

(kit contents continue on following page)

Need help with your installation?

sales@superatv.com

www.superatv.com

1-855-743-3427


8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You For Choosing SUPERATV.COM®

© 2023 SuperATV.com®. All Rights Reserved.

(kit contents continued)

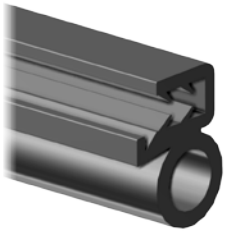


90° Seal




Clamp x 4
(loosen hardware)



Actuator x 2

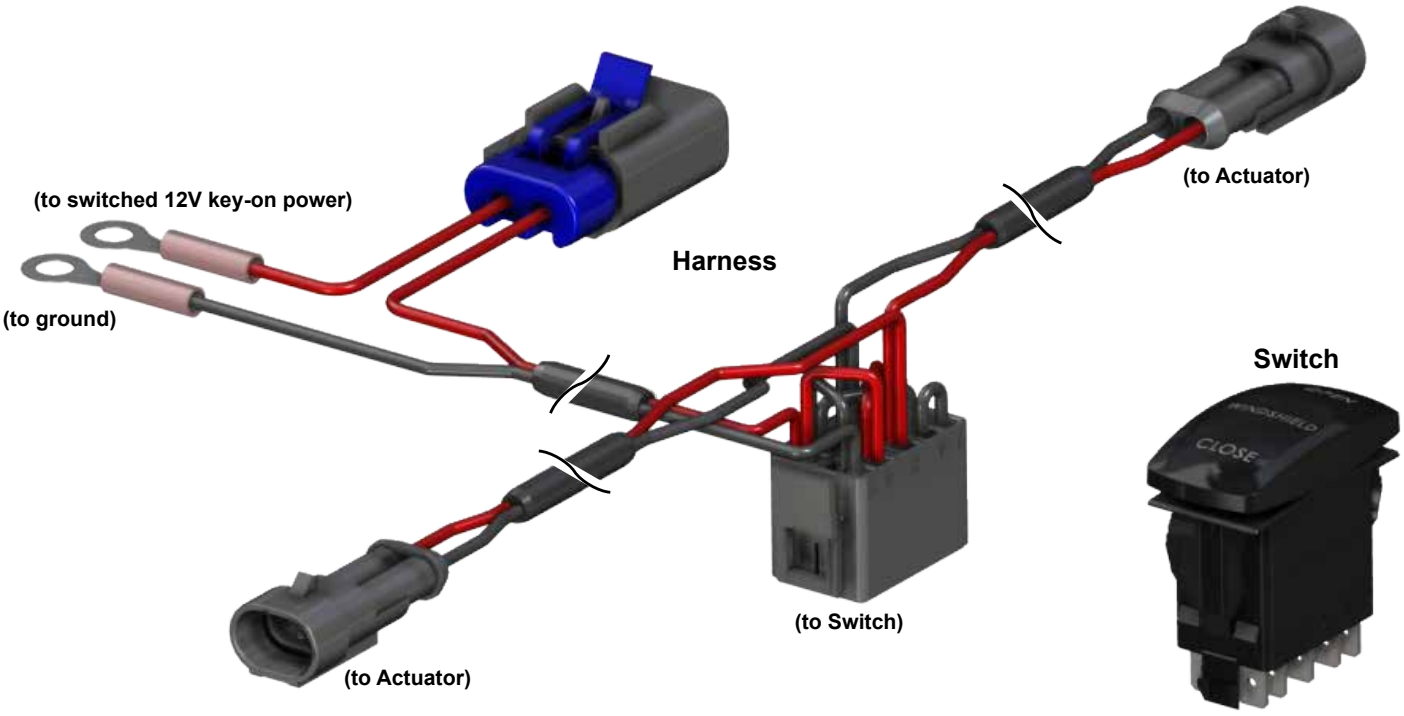

Switch

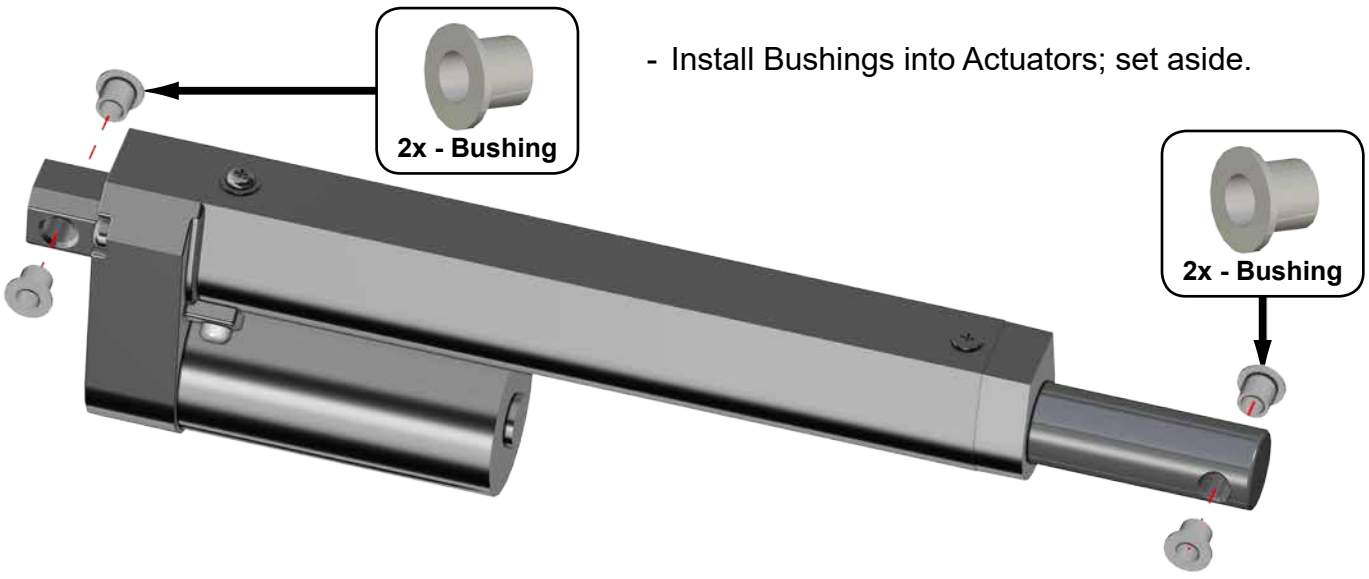

- Install Bushings into Actuators; set aside.


remove Roof
(driver side)


(passenger side)
remove Sound Bar


remove Visor Panel

- Locate depressions in stock Visor Panel as shown.




- Drill Ø1/2" holes in stock Visor Panel as shown.



reinstall Visor Panel and Sound Bar to machine



- Route Actuator connections up to locations shown.

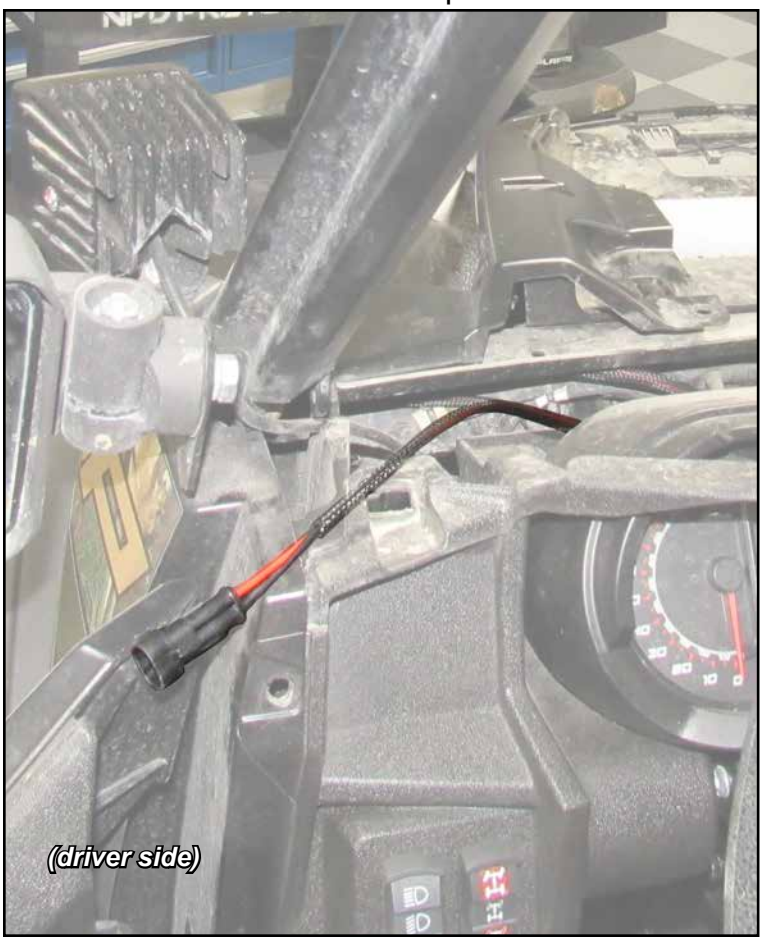




Before drilling any holes, check behind area to be drilled for any interference.


Switch Mounting:

- User may install Switch in location different than shown.
- Verify that Harnesses will reach Switch before mounting.
- Remove stock Knockout or cut a new location.
- Connect wiring and secure Switch.


Mounting Slot:

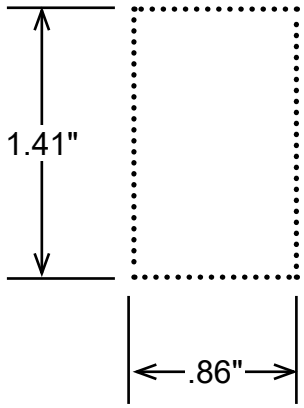




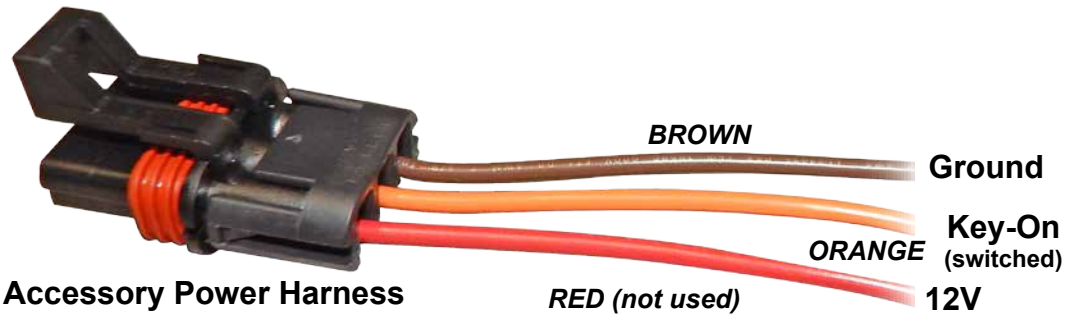


- Connect RED from Harness to ORANGE on Accessory Power Harness.
- Connect BLACK from Harness to BROWN on Accessory Power Harness.

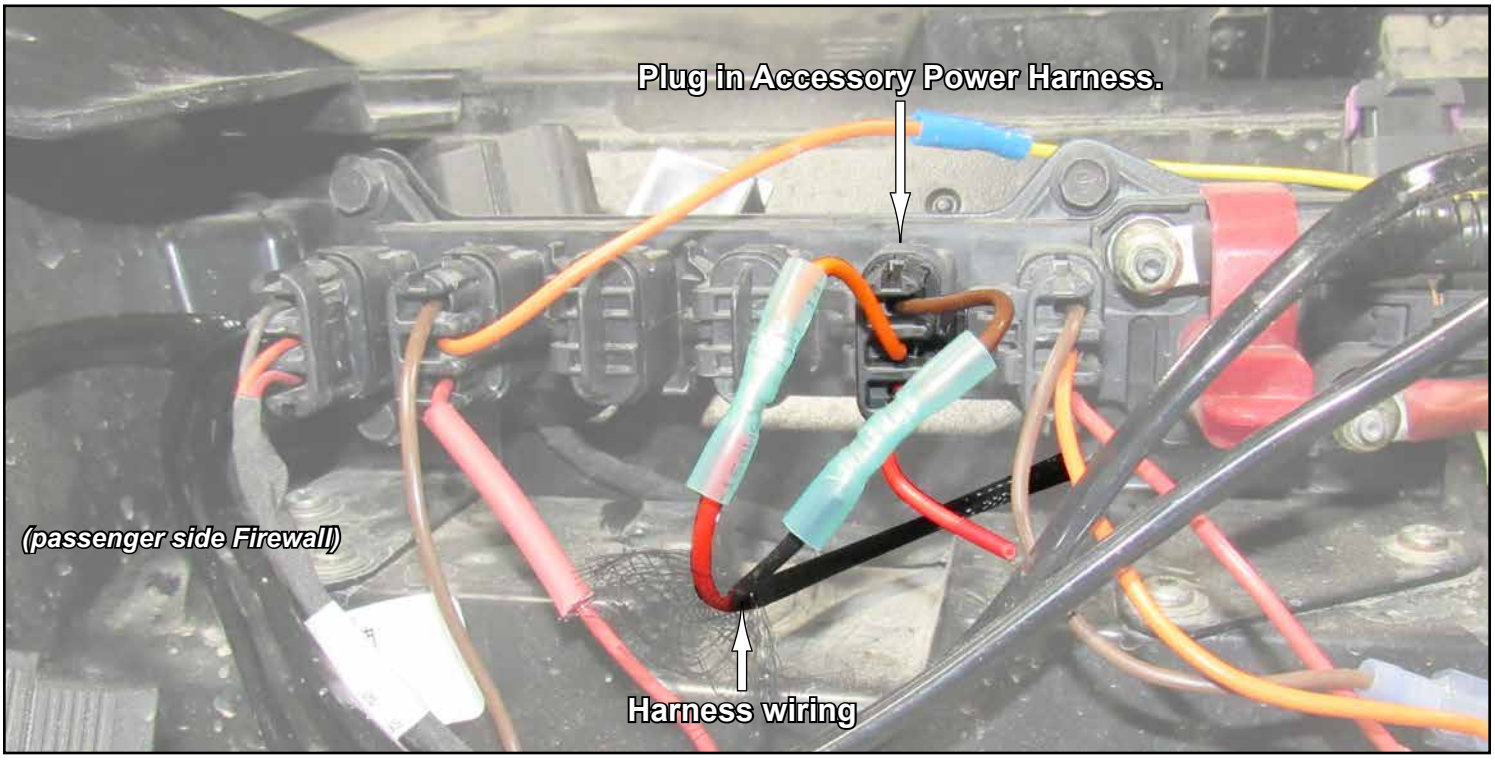


Older models will have stock Power Supply shown.

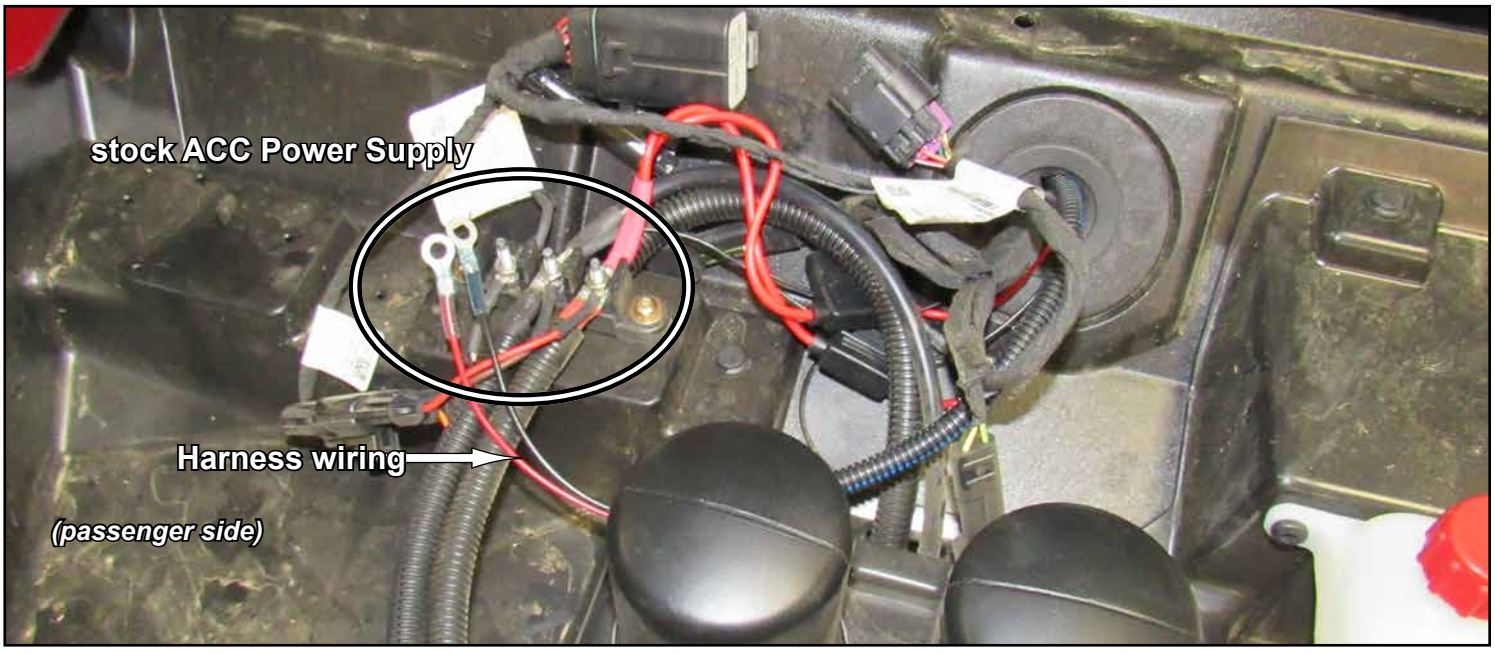

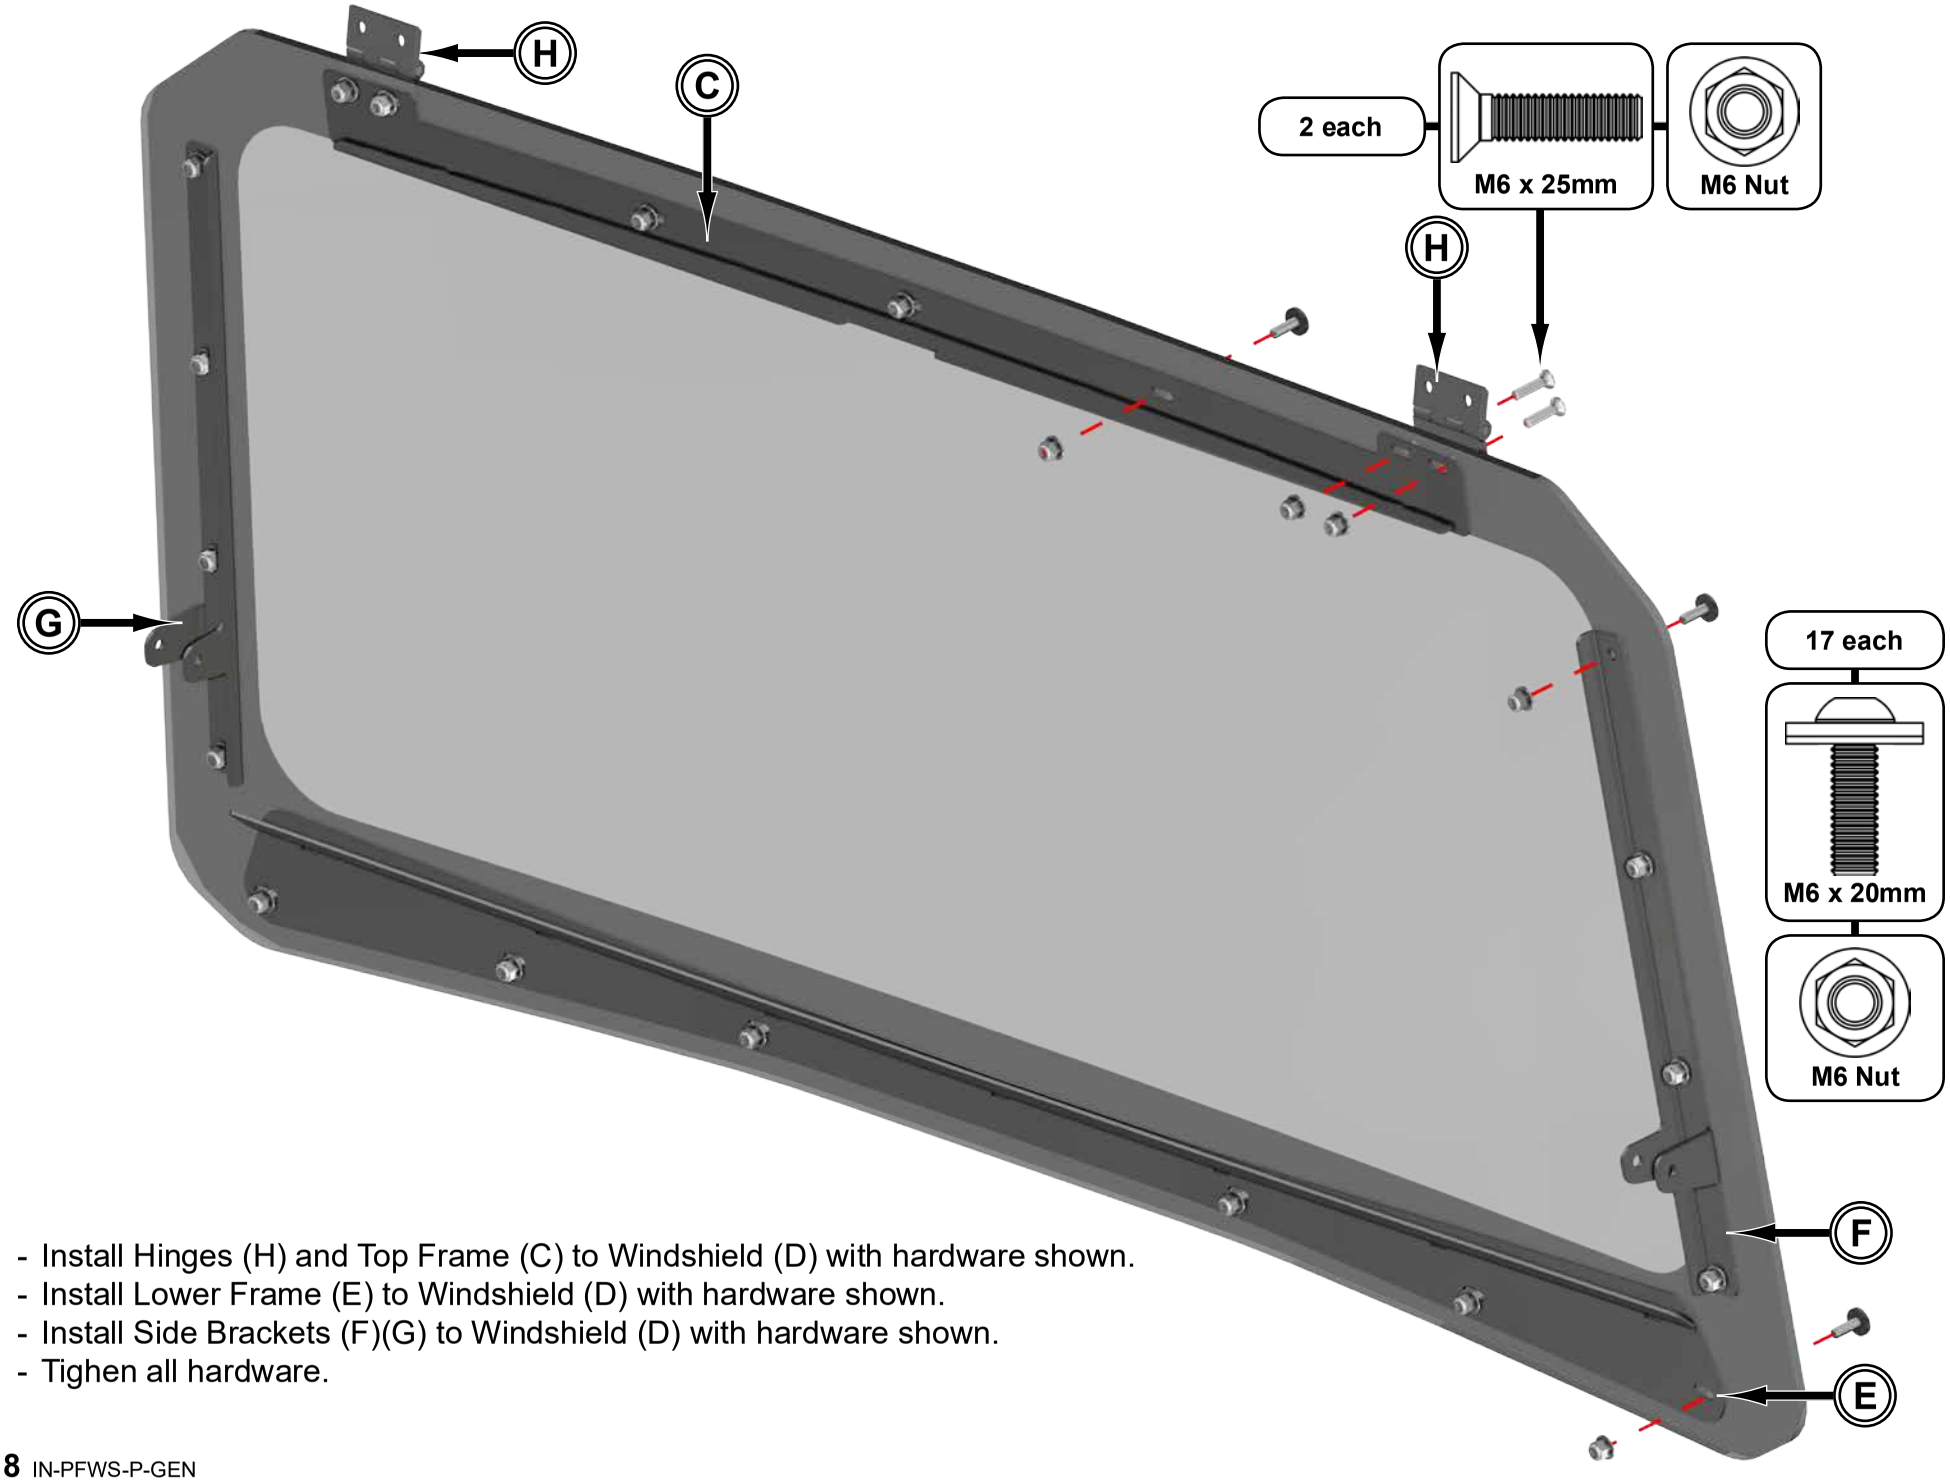

- Install Hinges (H) and Top Frame (C) to Windshield (D) with hardware shown.
- Install Lower Frame (E) to Windshield (D) with hardware shown.
- Install Side Brackets (F)(G) to Windshield (D) with hardware shown.
- Tighen all hardware.


- Install Hinge Brackets (A)(B) to Hinges (H) with hardware shown; tighten.

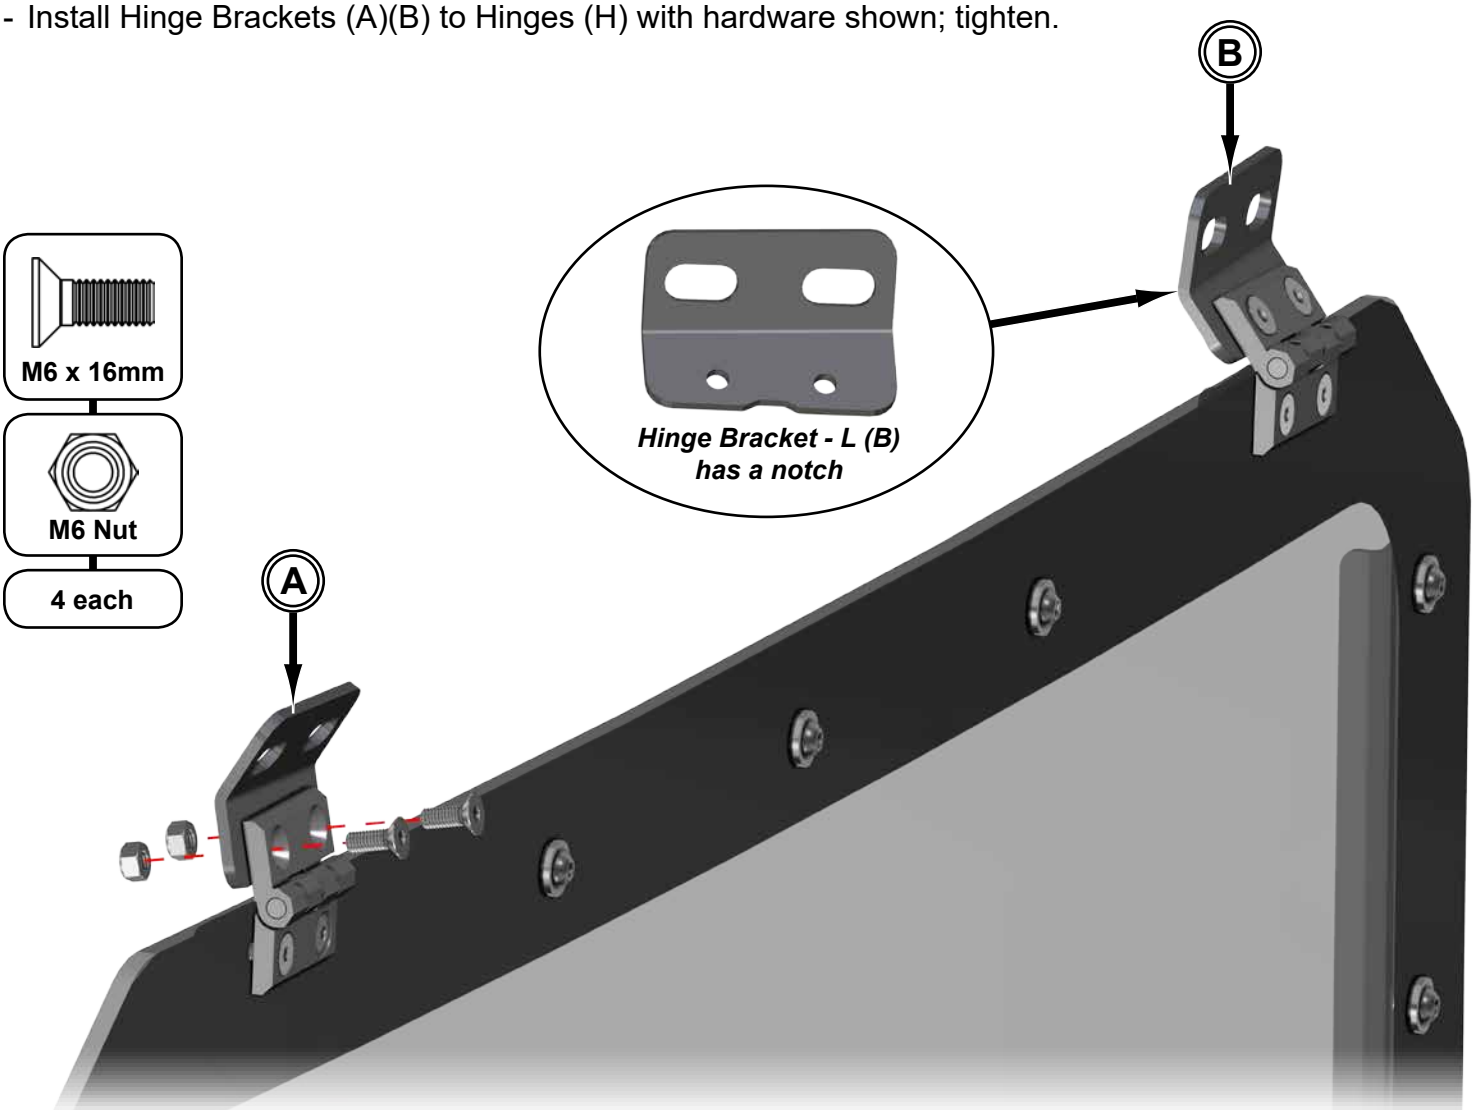

- Install Seal to Windshield in locations shown.

no Seal where Hinges (H) are located




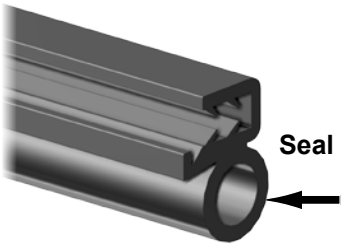

Seal

Bulb portion to always face towards vehicle.

- Install Clamps to Cage; do not tighten.
- Install Actuator Mount - L (J) to Clamps; tighten.
- Repeat for passenger side.

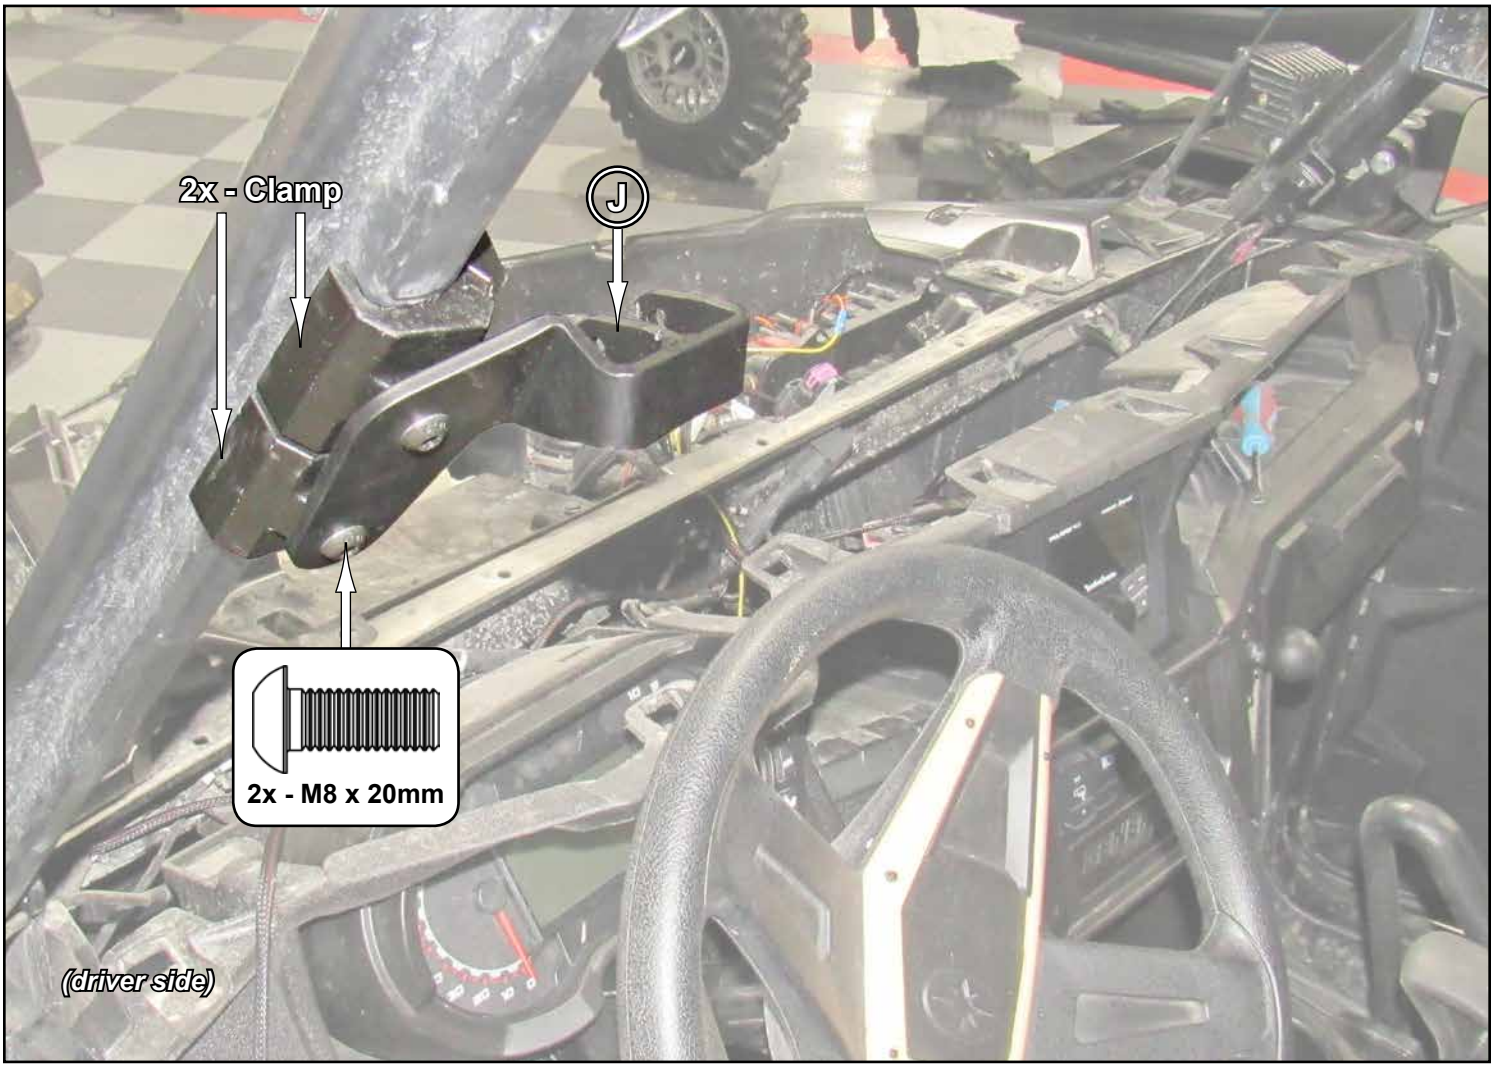

- Place Windshield onto machine.
- Secure Hinge Brackets (A)(B) to Frame with hardware shown.





- Align to machine and tighten all hardware.

- Install Actuator to Side Bracket - L (G) and Actuator Mount - L (J) with hardware shown; tighten.
- Repeat for passenger side.



- Secure wiring with wire-ties.
- Reinstall Upper Dash and Hood.