2753 Michigan Road • Madison, Indiana 47250 • 855-743-3427

INSTALLATION INSTRUCTIONS

Power Steering Kit: for 2022+ Polaris Ranger 570 SP

Item	Description
A	Motor Mount
B	Upper Shaft
C	Lower Shaft
D	ECU Mount
F	Support

Do not discard packaging until product has been successfully installed.

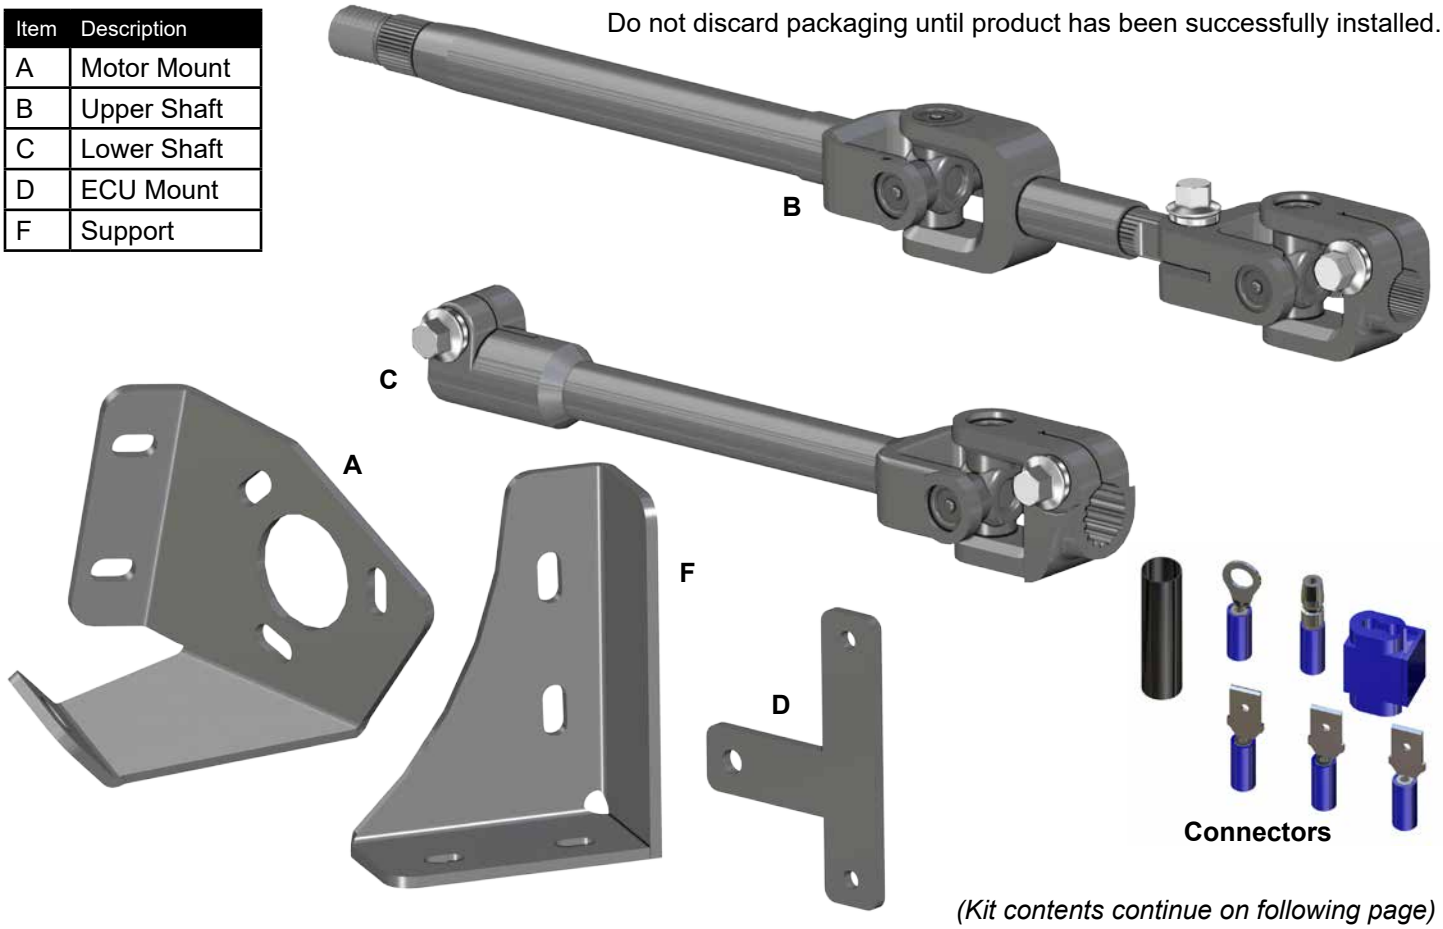

(Kit contents continue on following page)

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?

sales@superatv.com

www.superatv.com

1-855-743-3427

8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You For Choosing

© 2022 SuperATV.com®. All Rights Reserved.

*Connections

- Before installing, ensure that all Gaskets in electrical connections are properly seated.
- If Gaskets are not seated use a Flathead Screwdriver to seat.



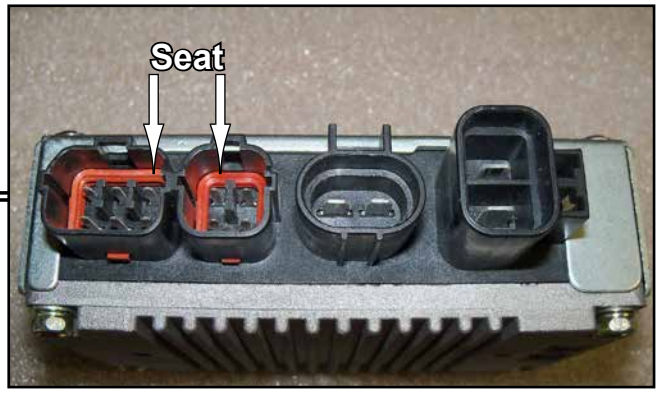

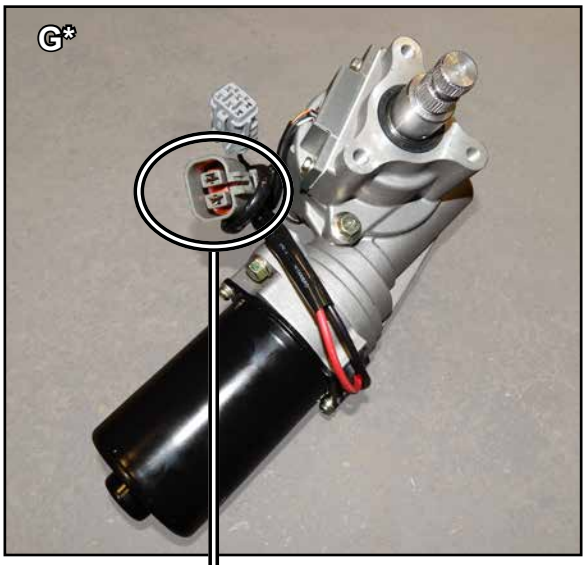

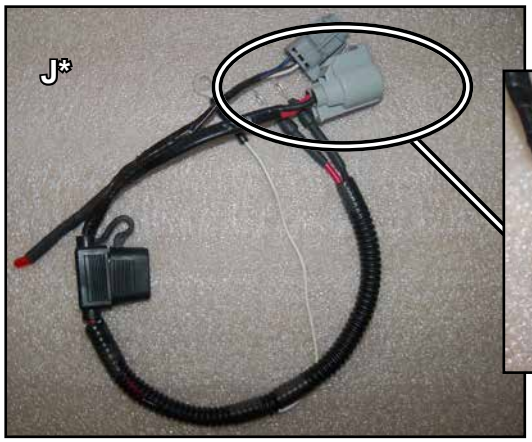



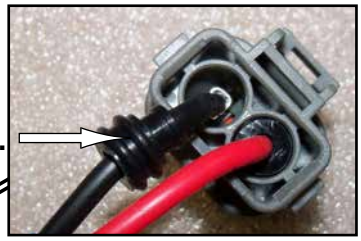

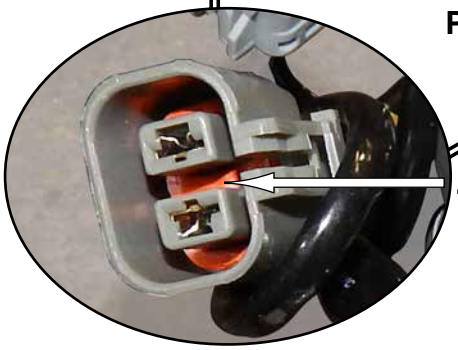

Item	Description
H	ECU
G	Motor
J	Wire Harness

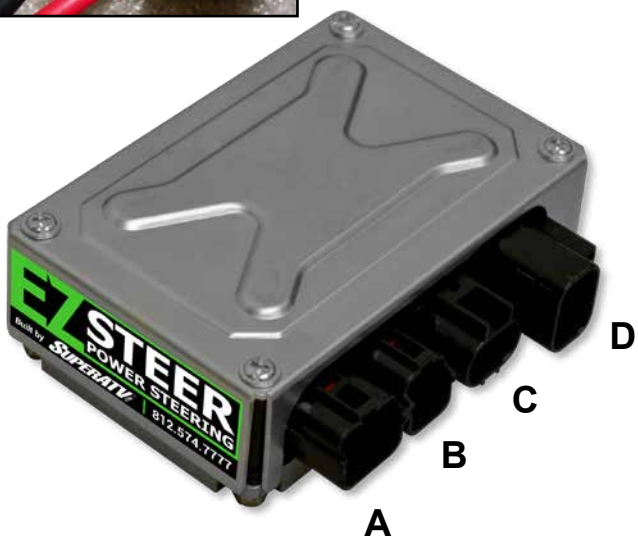

Secure in a visible location.



When activated, Diagnostic Light will flash once for about (1) second before turning off indicating proper function. Should different patterns occur, contact SuperATV.

Plug	Function
A	Torque Sensor
B	Switched 12V Source

Plug	Function
C	Power
D	Motor

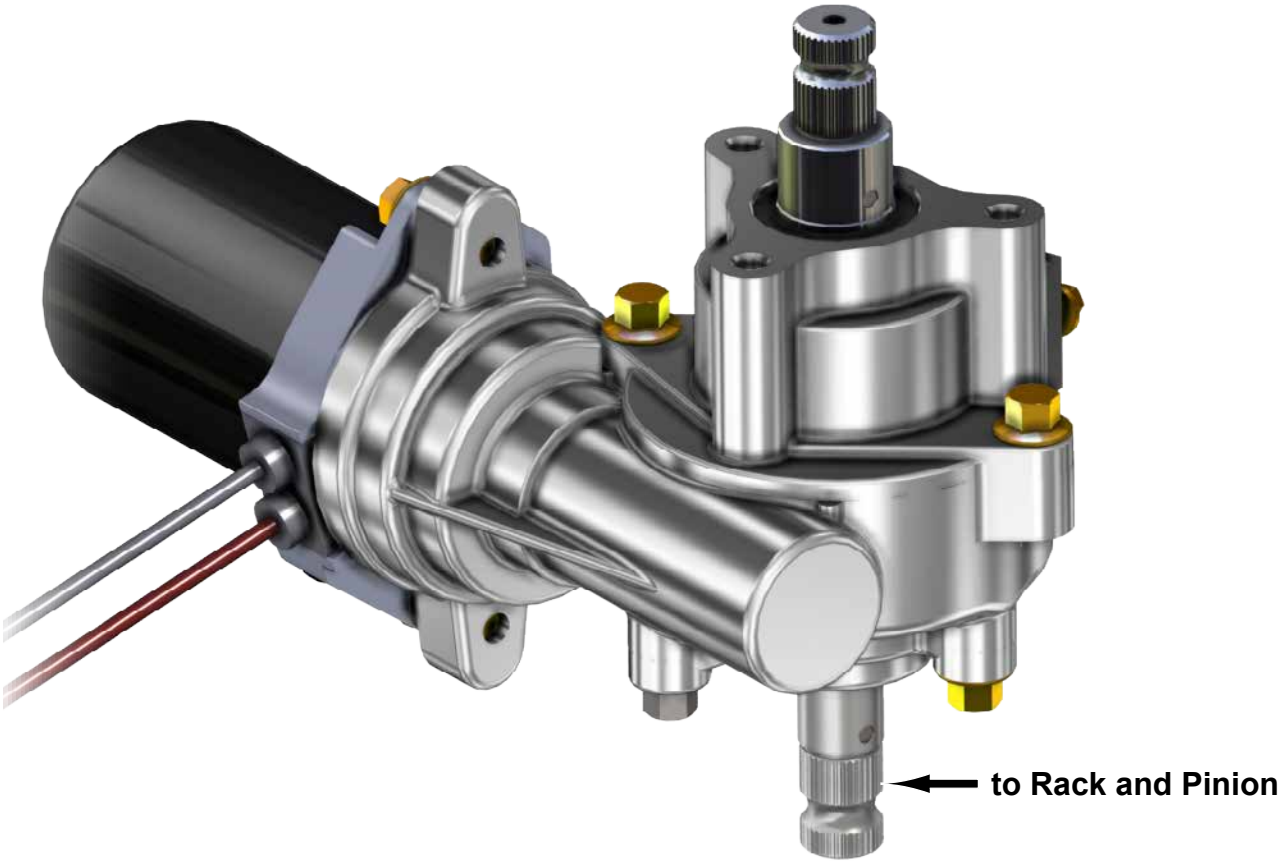
to Rack and Pinion

Removal: *keep all components removed from machine.*





Removal continued:

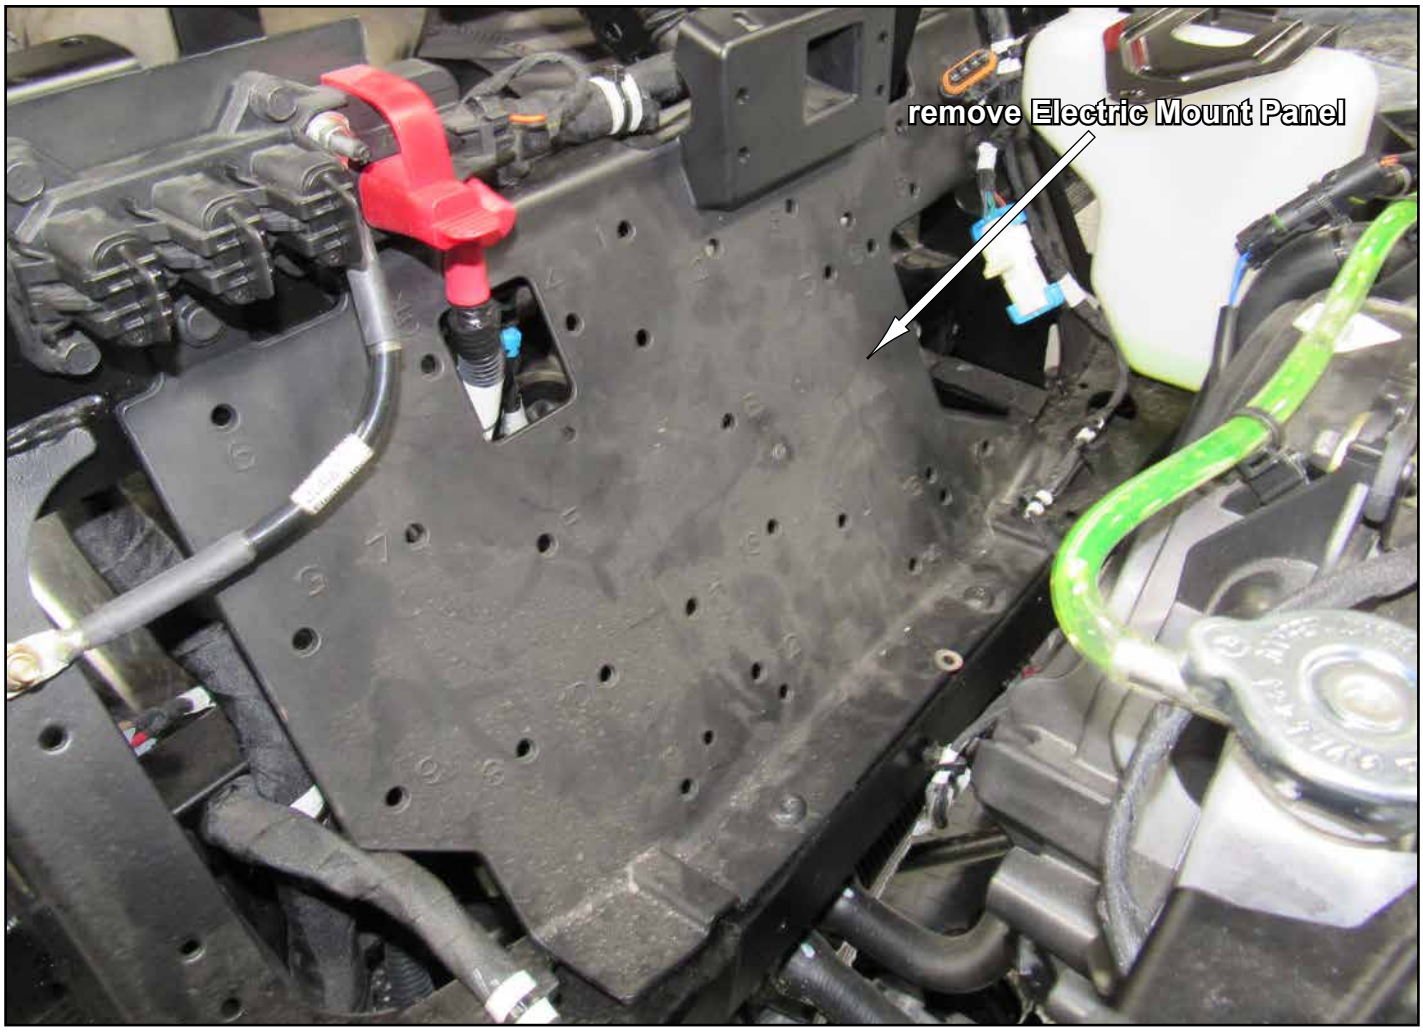



Removal continued:

DISCONNECT ALL CONNECTIONS ATTACHED TO DASH PANEL



Removal continued:

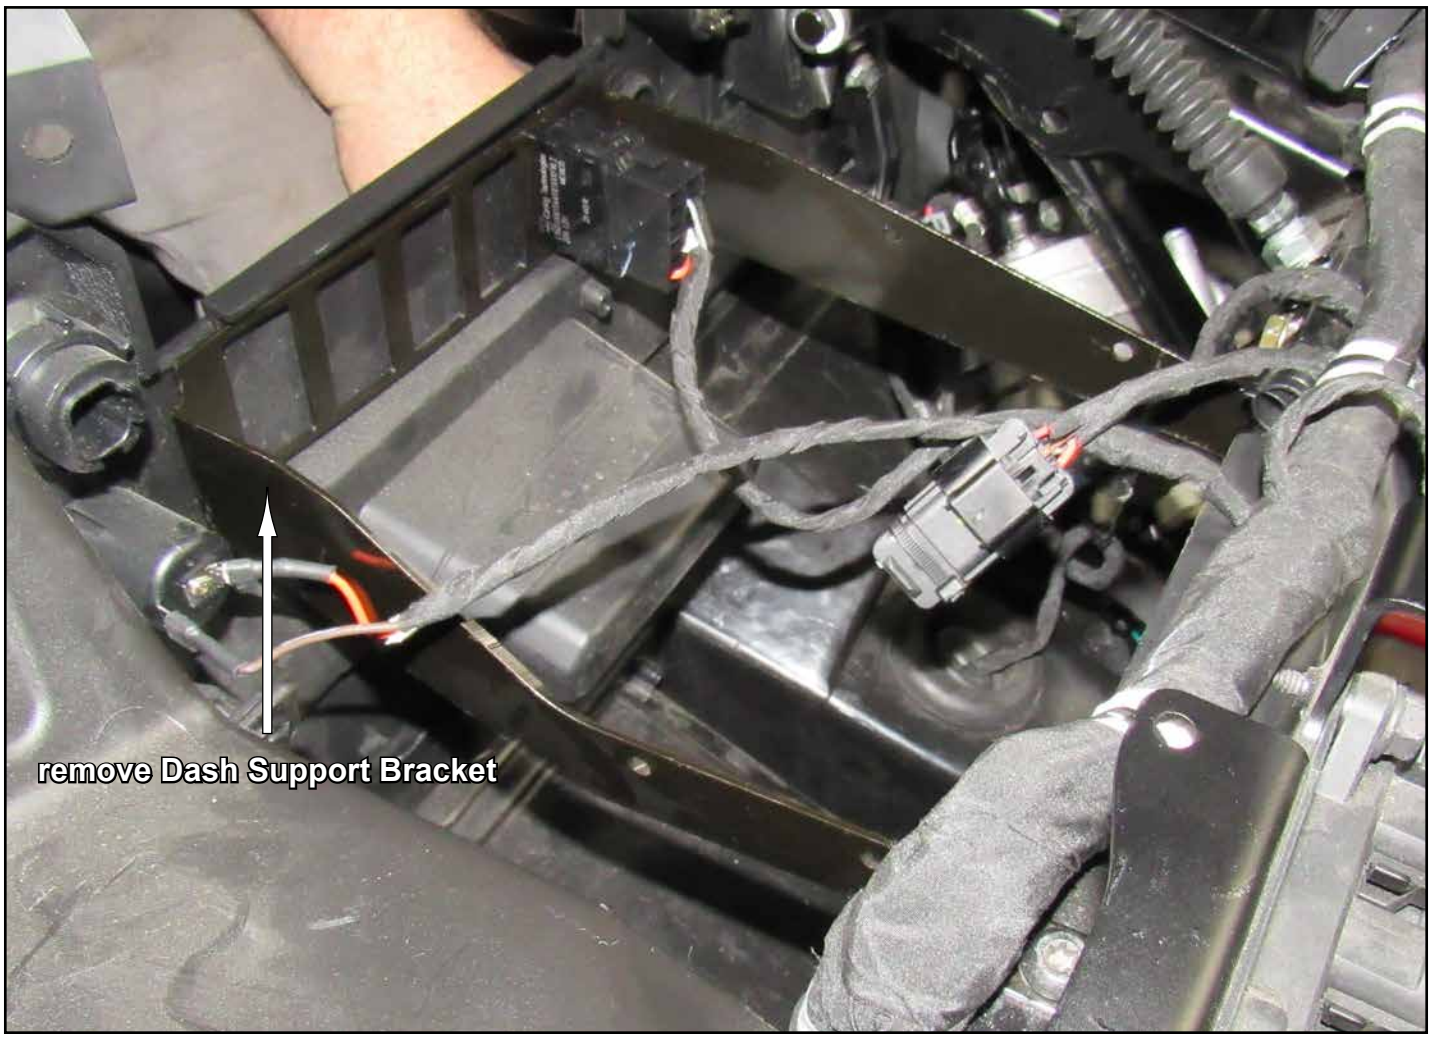

Removal continued:

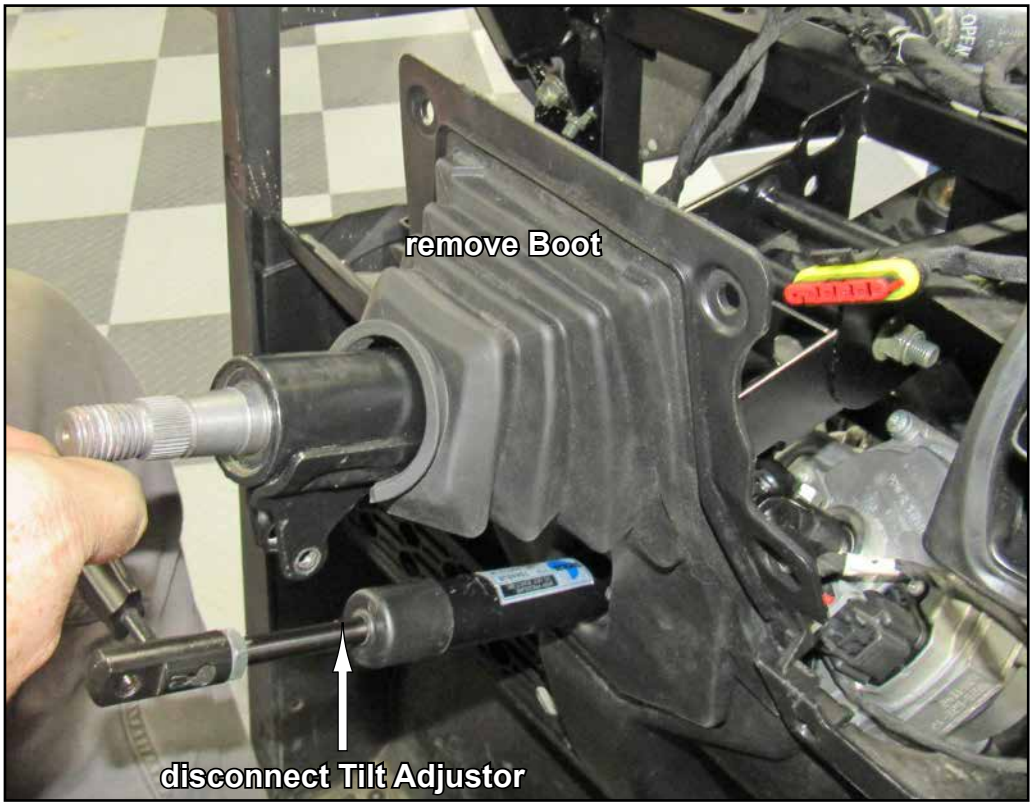



Removal continued:

DISCONNECT ALL CONNECTIONS ATTACHED TO POWER STEERING



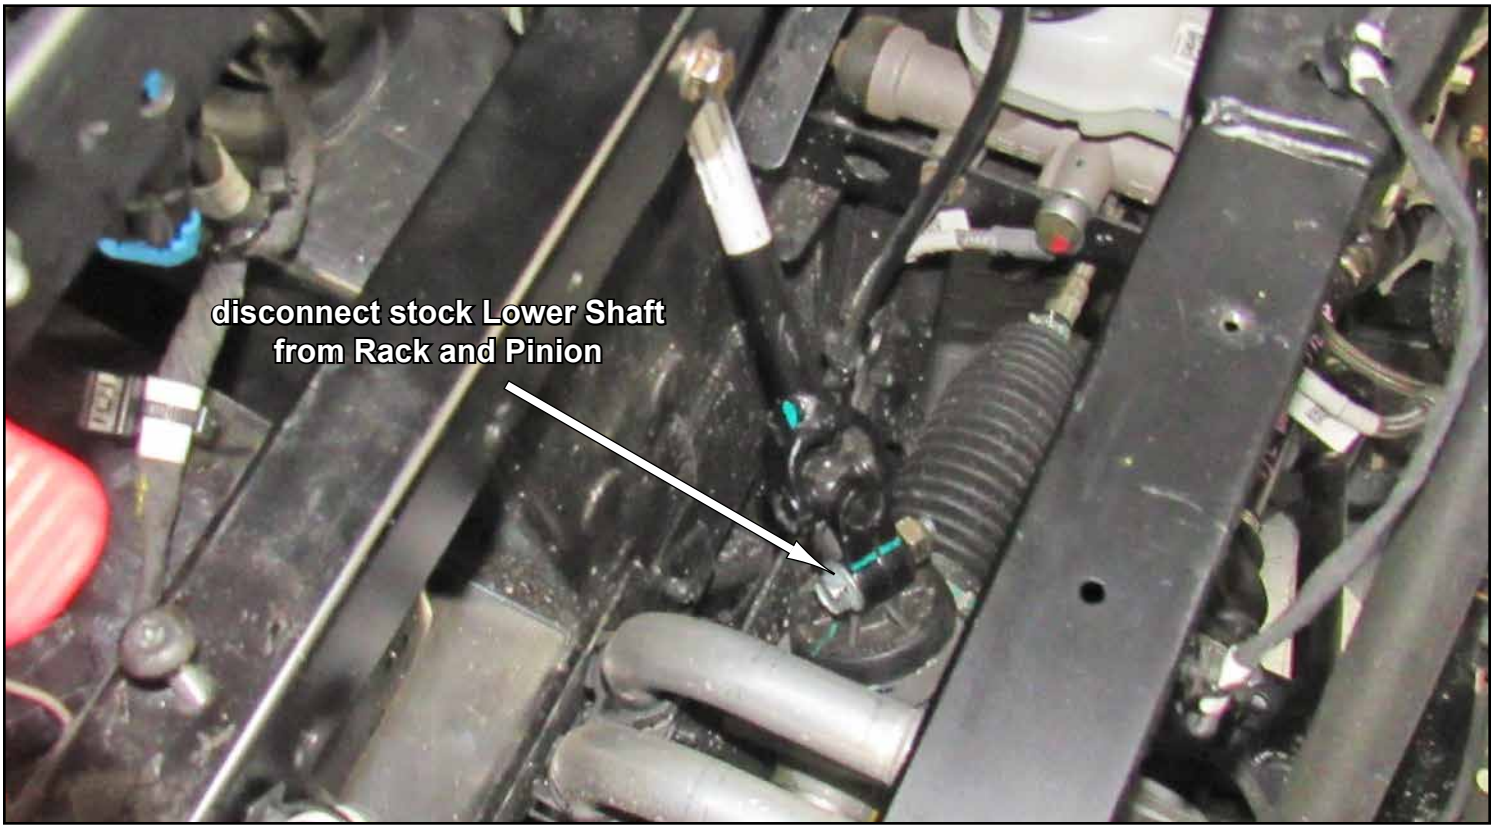

Removal continued:



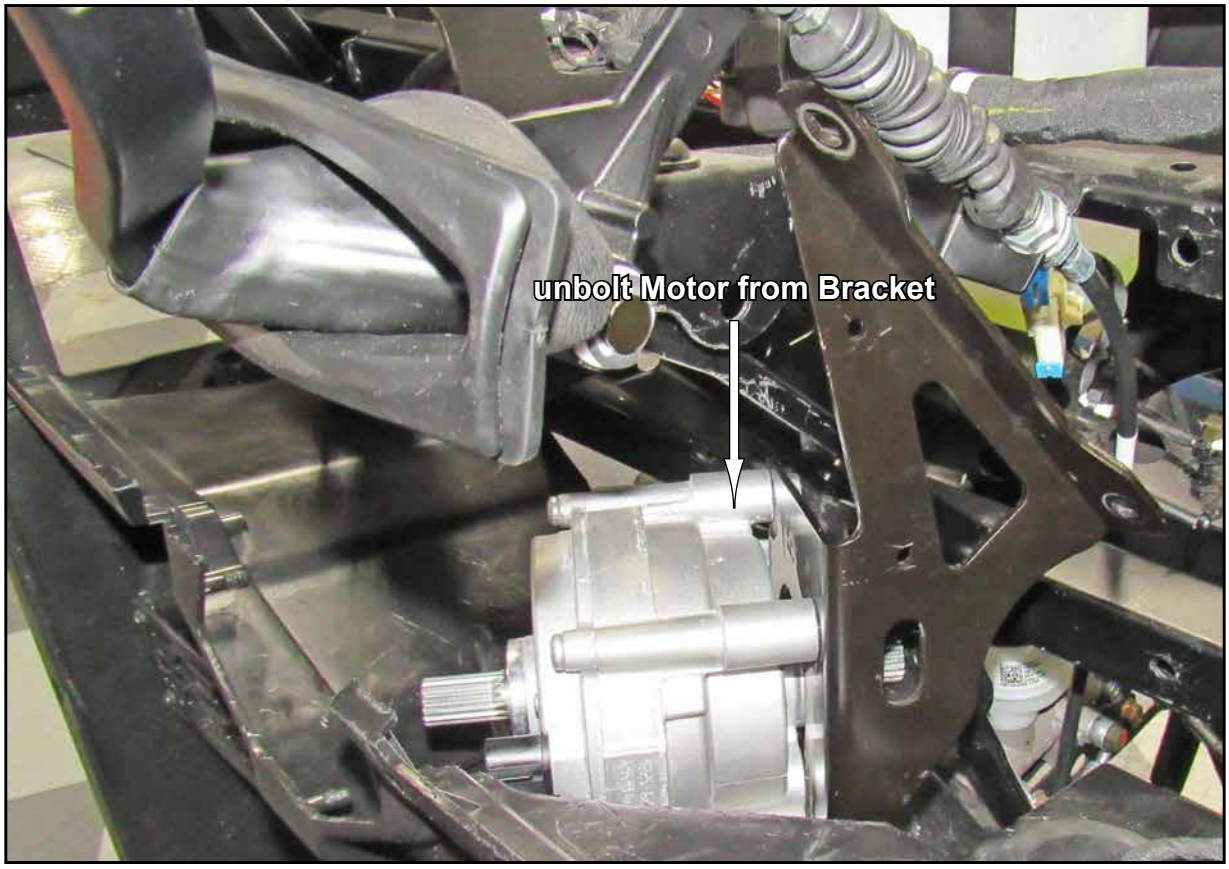

PULL POWER STEERING UP AND OUT OF MACHINE

Installation: *Do not tighten hardware completely unless noted.*

- Install Lower Shaft (C) to Motor (G) with hardware shown.

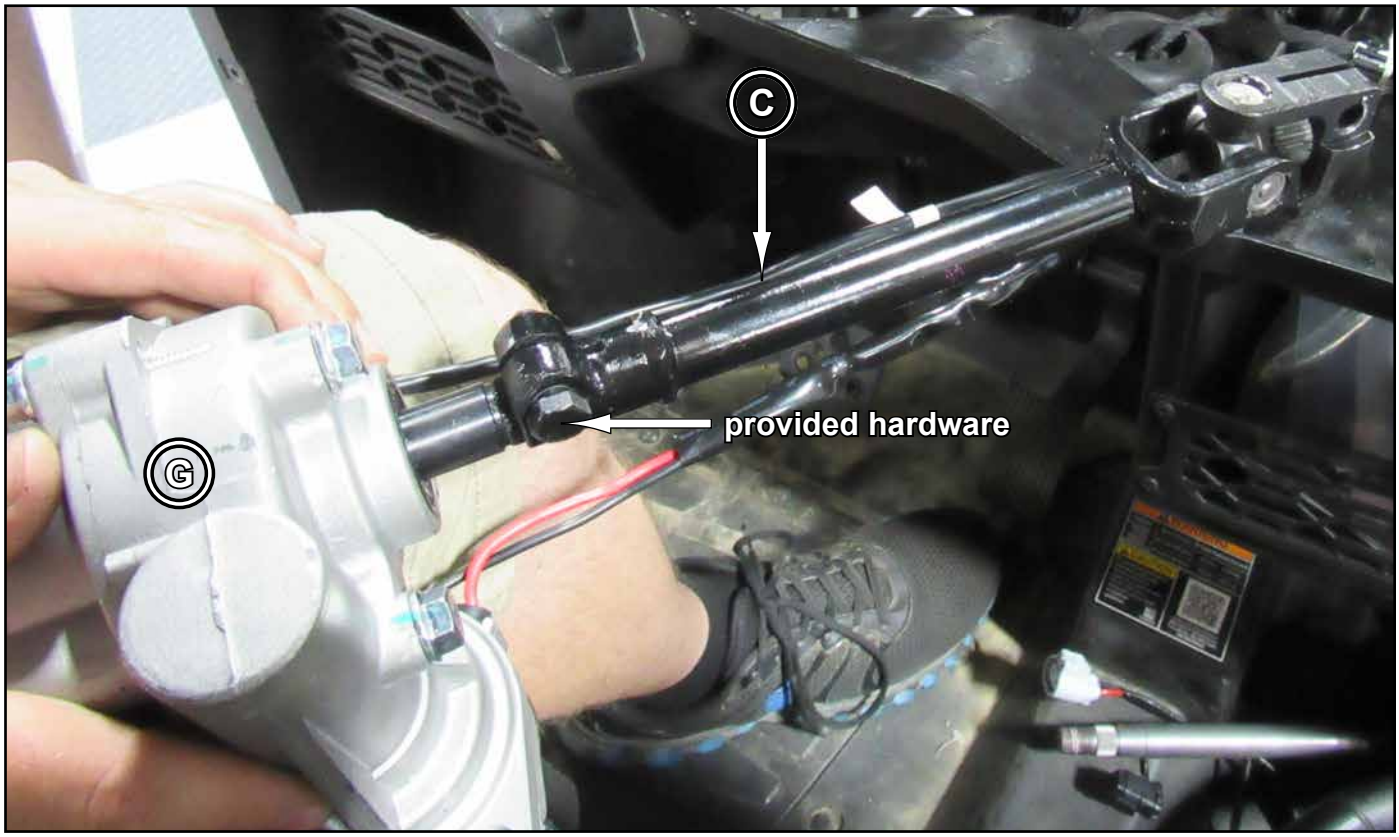

- Secure Lower Shaft (C) to Rack and Pinion with hardware shown.



- Install Support (F) to Frame with hardware shown.

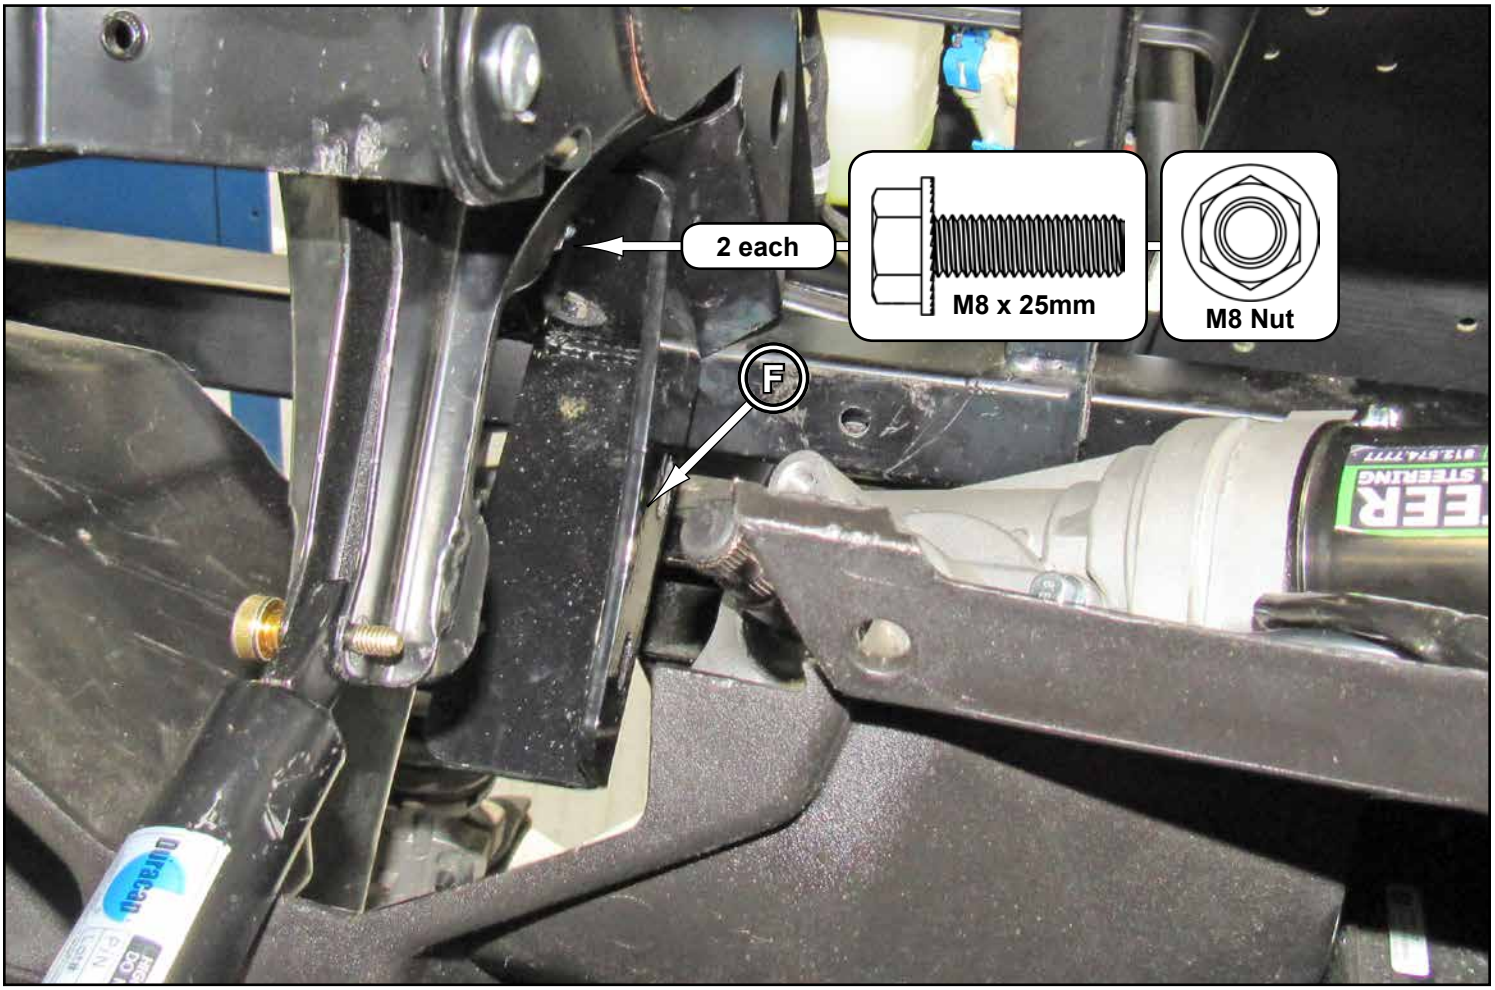

- Place Motor Mount (A) onto Motor (G). Secure to Frame with hardware shown.

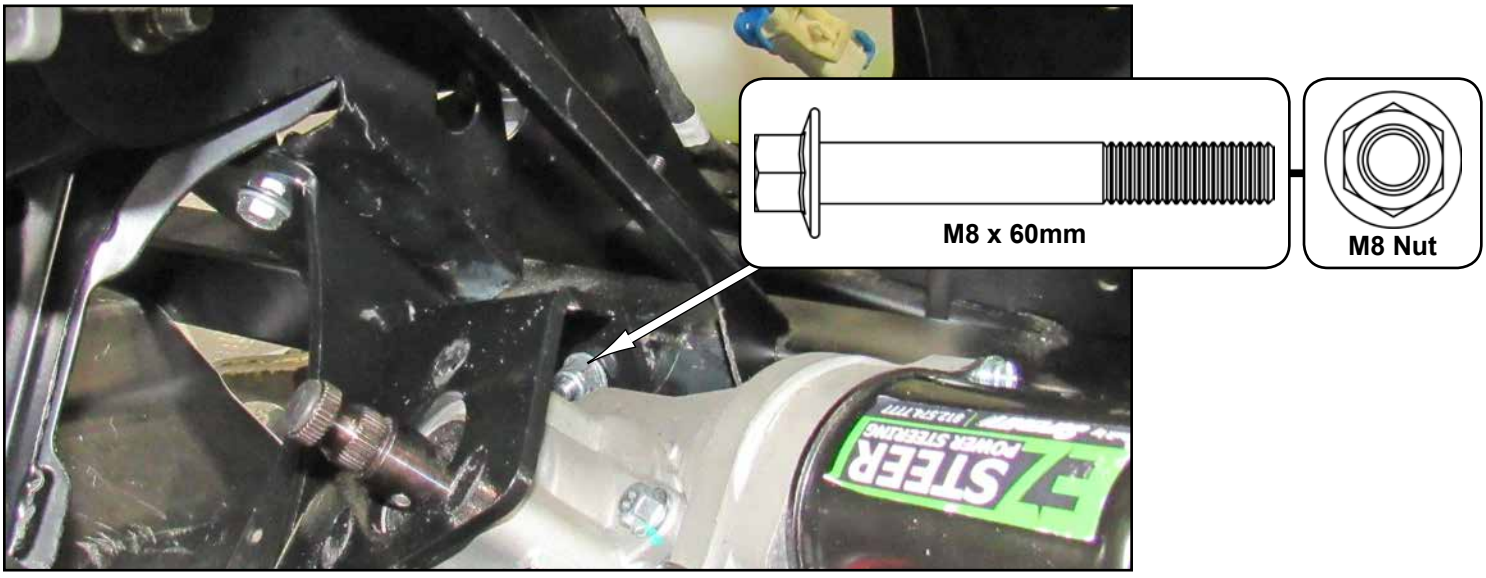

- Secure Motor Mount (A) to Motor (G) with hardware shown.

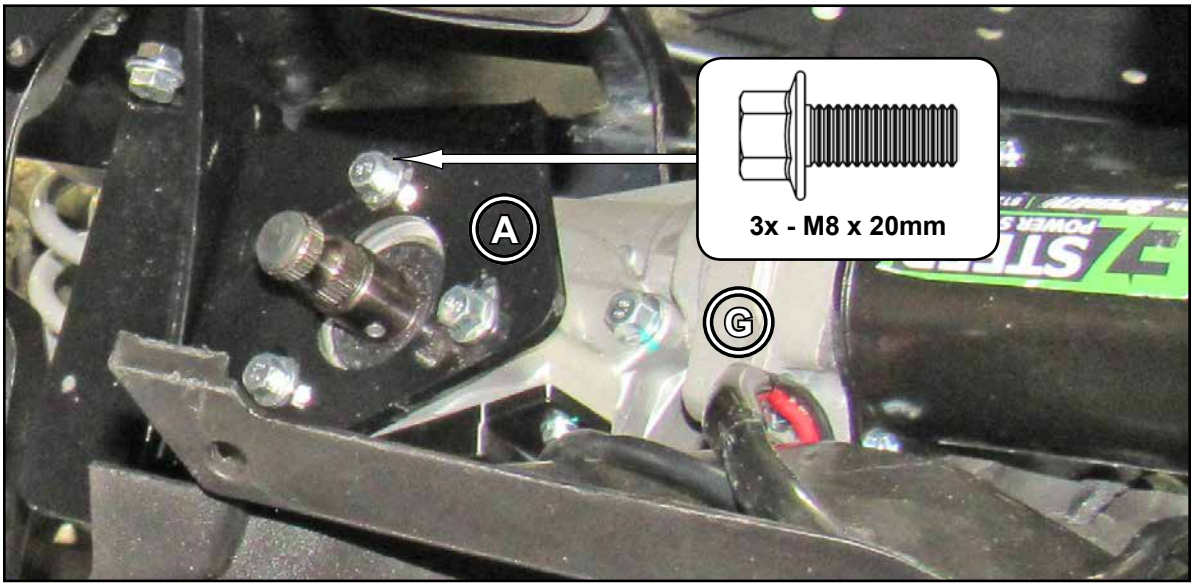

- Secure Motor Mount (A) to Support (F) with hardware shown.

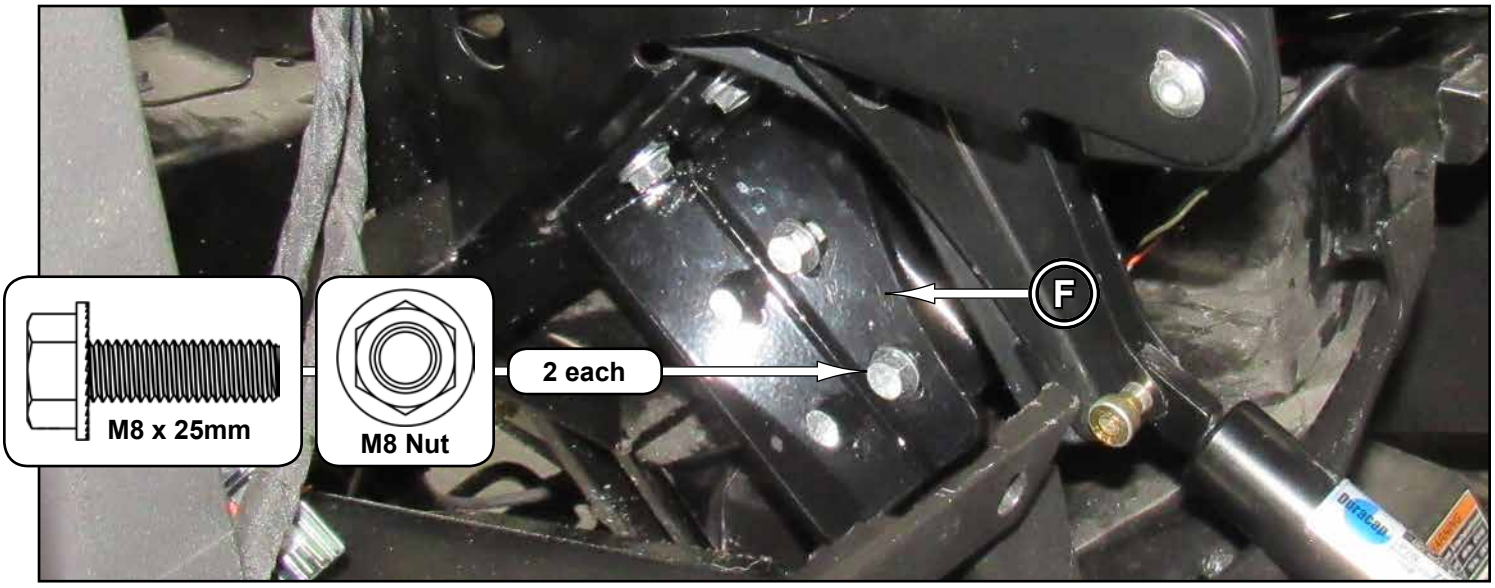

TIGHTEN ALL HARDWARE.

- Insert Upper Shaft (B) into Column. Secure Column to Frame with stock hardware.

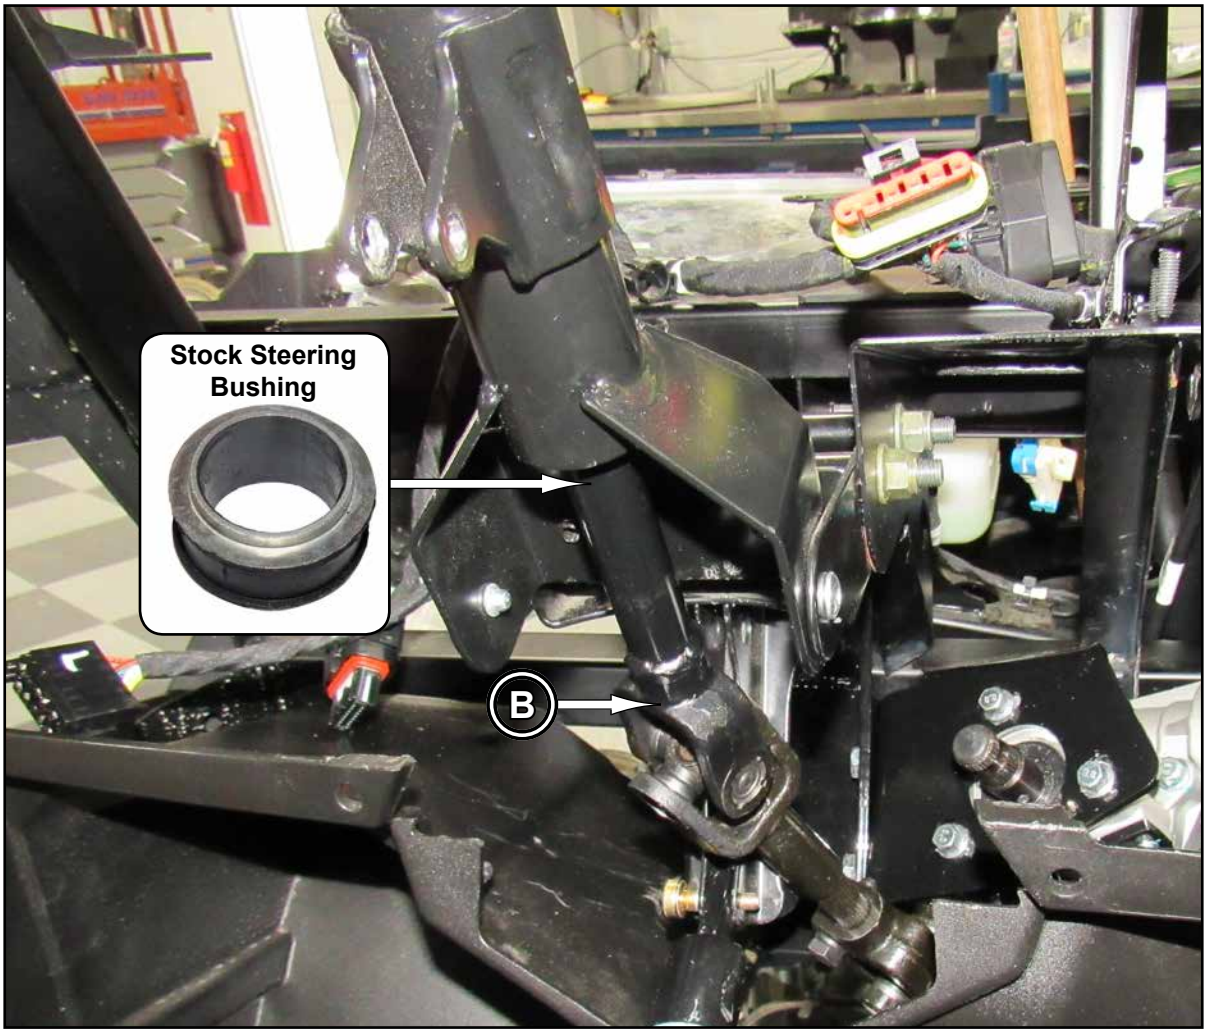

- Secure Upper Shaft (B) to Motor (G) with hardware shown.

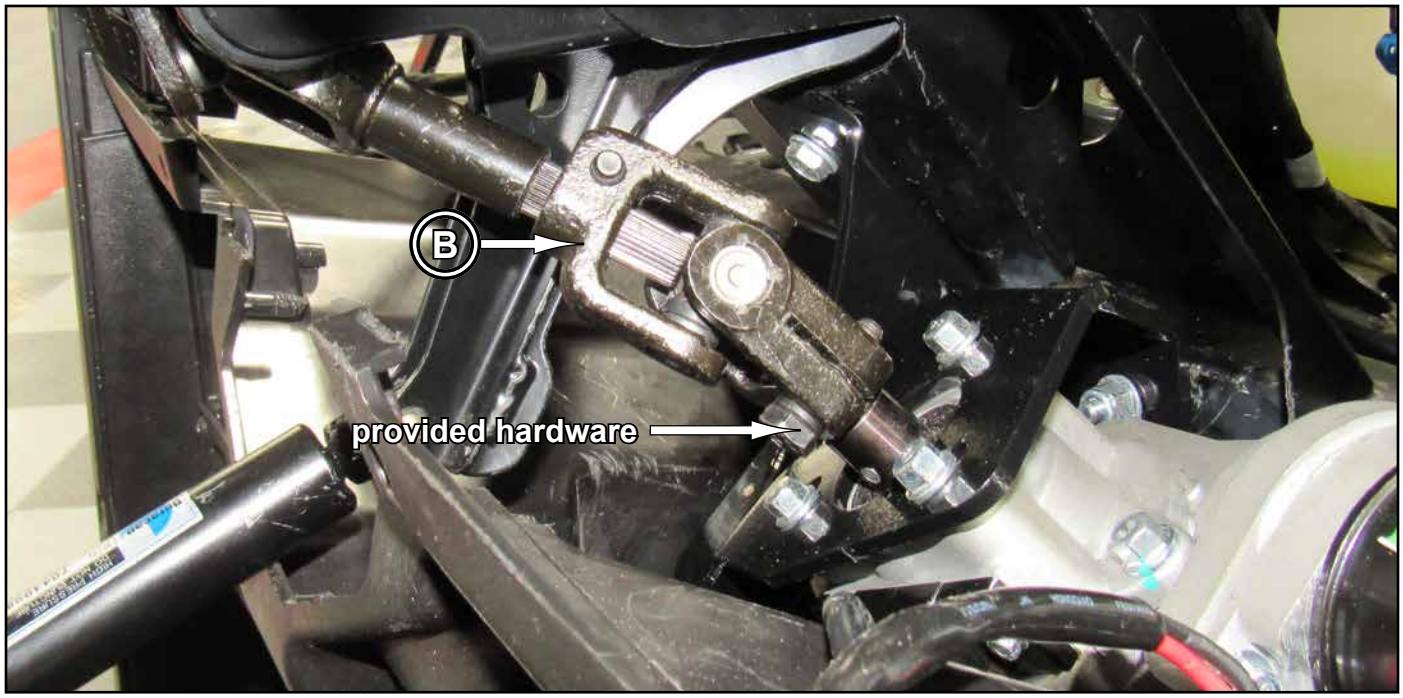

- Insert Upper Shaft (B) into Column.
- Reinstall Column with stock hardware; tighten.
- Secure Tilt Adjustor with stock hardware; tighten.
- Place stock Steering Bushing onto Upper Shaft (B)

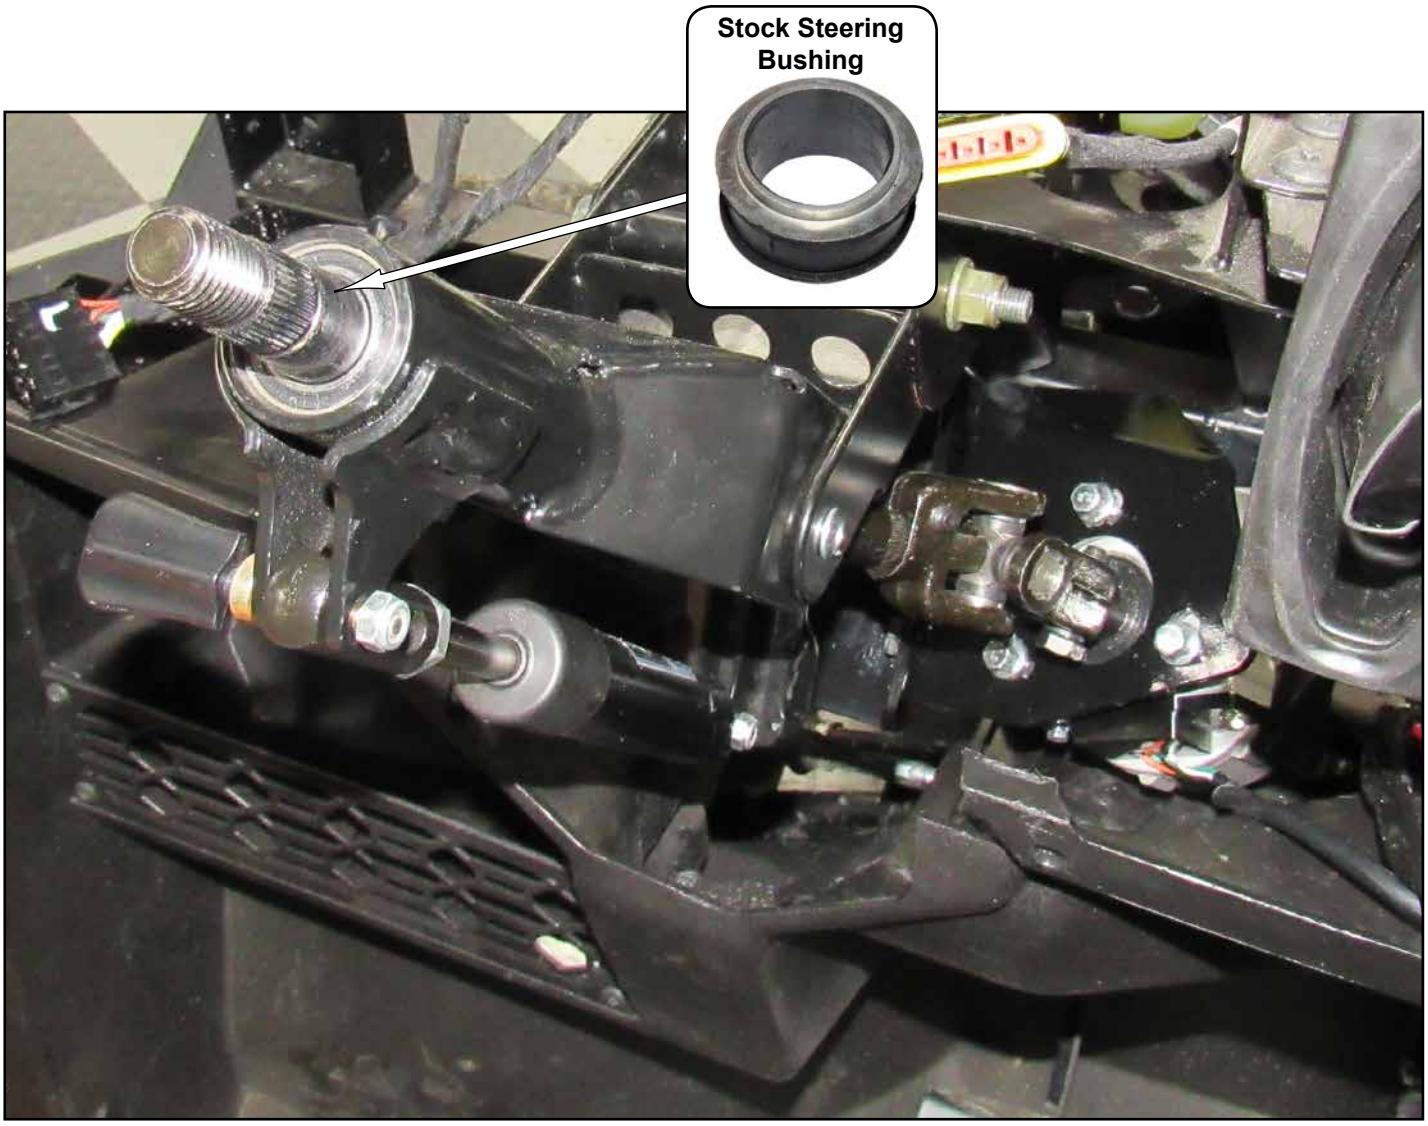

- Install ECU Mount (D) and ECU (H) with hardware shown; tighten.

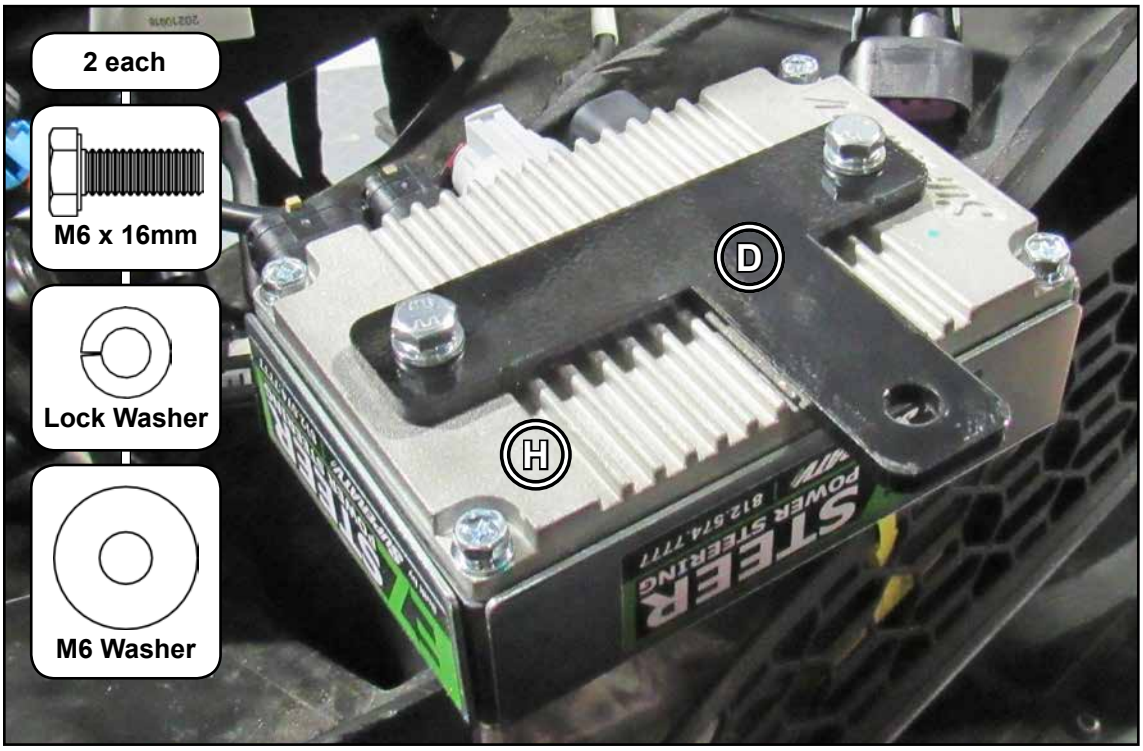

- Plug in Wiring Harness (J) and make connections.

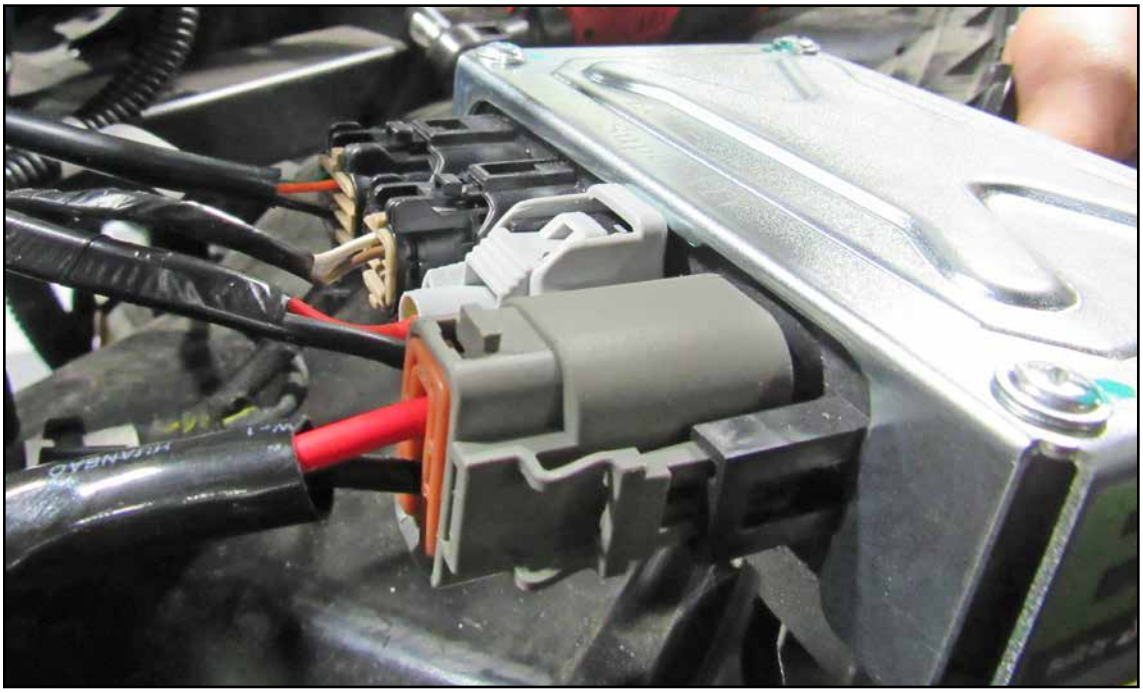

- Secure ECU assembly to Frame with hardware shown; tighten.

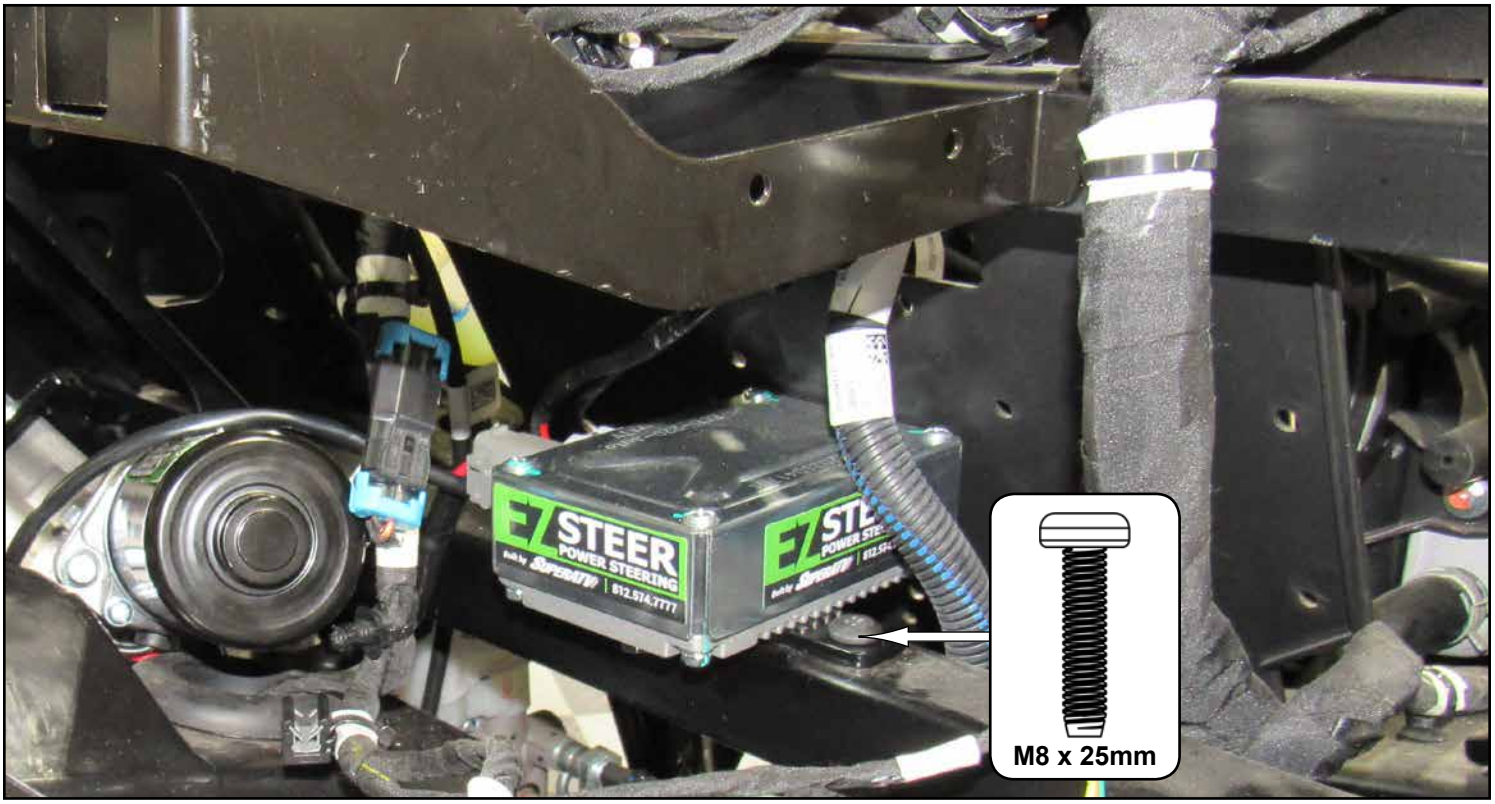

- Connect Wire Harness (J) as shown.

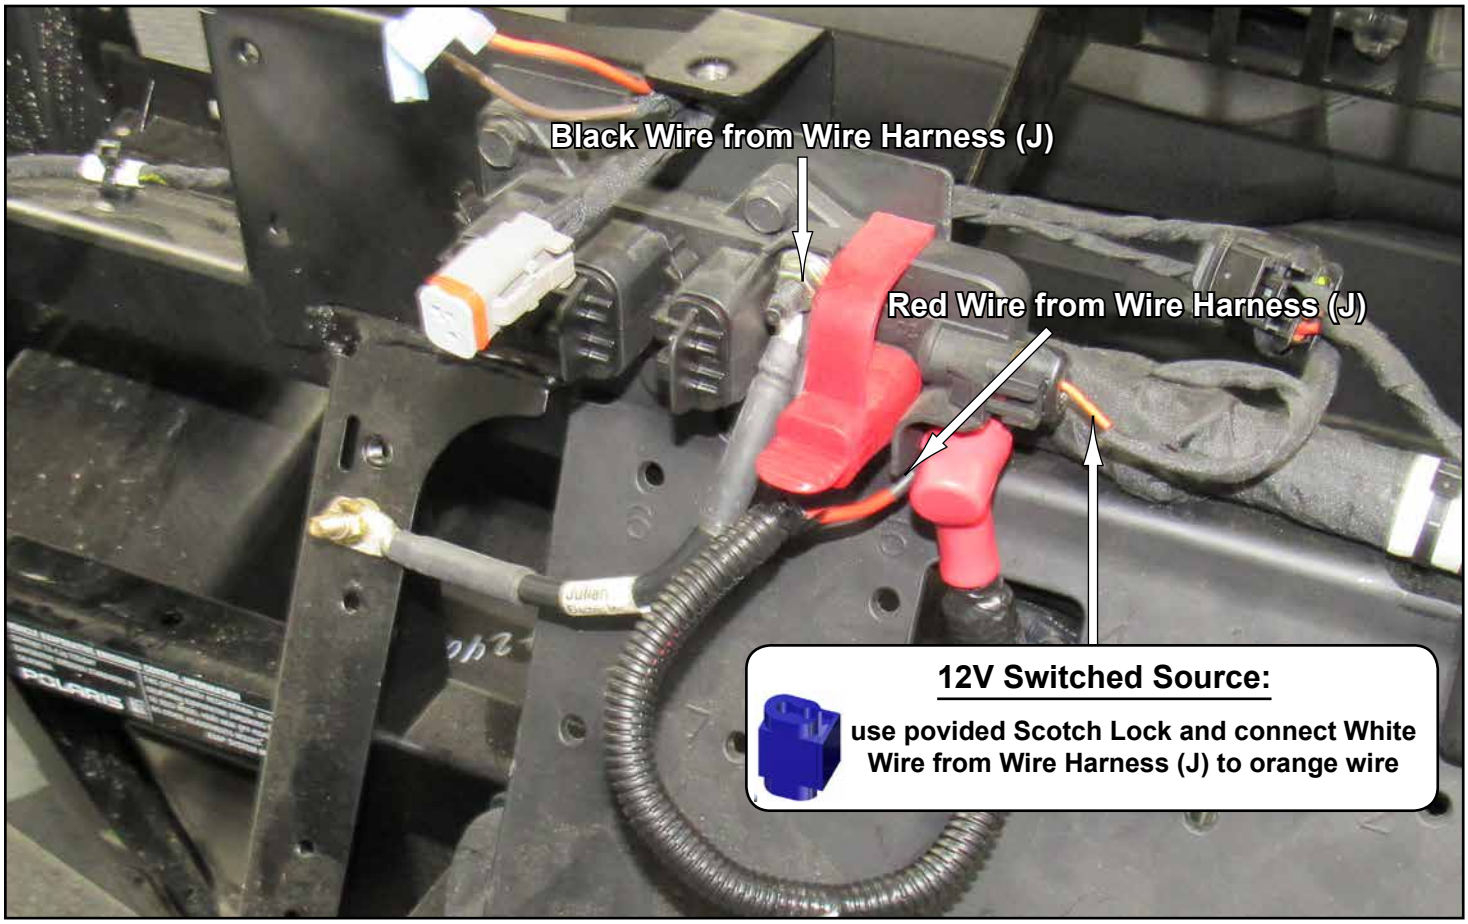

Tighten all hardware completely and reverse applicable steps taken during “Removal”.