

## 2011-2016 6.6L LML Duramax Turbo Inlet Horn Instructions

1. Make sure engine is cool and disconnect negative battery cables on both batteries
2. Remove 3 bolts holding intake resonator (12mm)




3. Remove intake connection tube (8mm)



4. Disconnect PCV hose from OEM turbo inlet horn


## 2011-2016 6.6L LML Duramax Turbo Inlet Horn Instructions

5. Remove OEM turbo inlet horn (8mm)

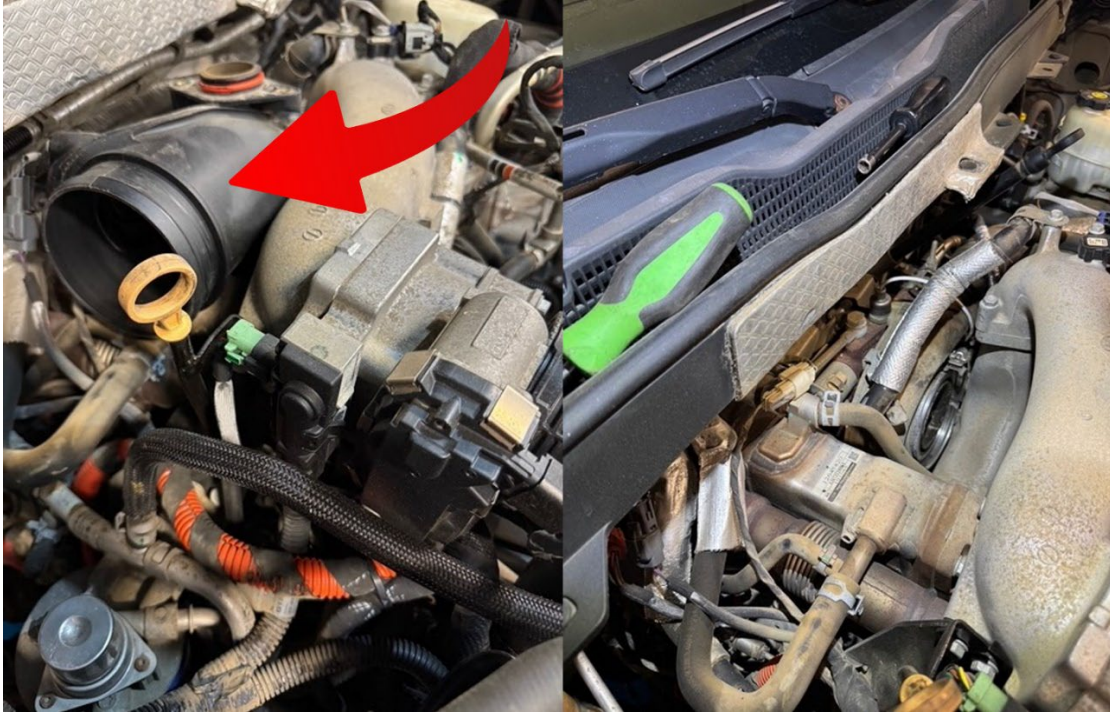

6. Drill and install supplied grommet and 90 degree elbow into OEM air intake tube using 1.5" hole saw
7. Reconnect PCV hose to newly installed 90 degree elbow on OEM air intake tube
8. Install new intake horn and connect PCV hose (don't fully tighten clamp so the tube can be indexed)

2011-2016 6.6L LML Duramax Turbo Inlet Horn Instructions

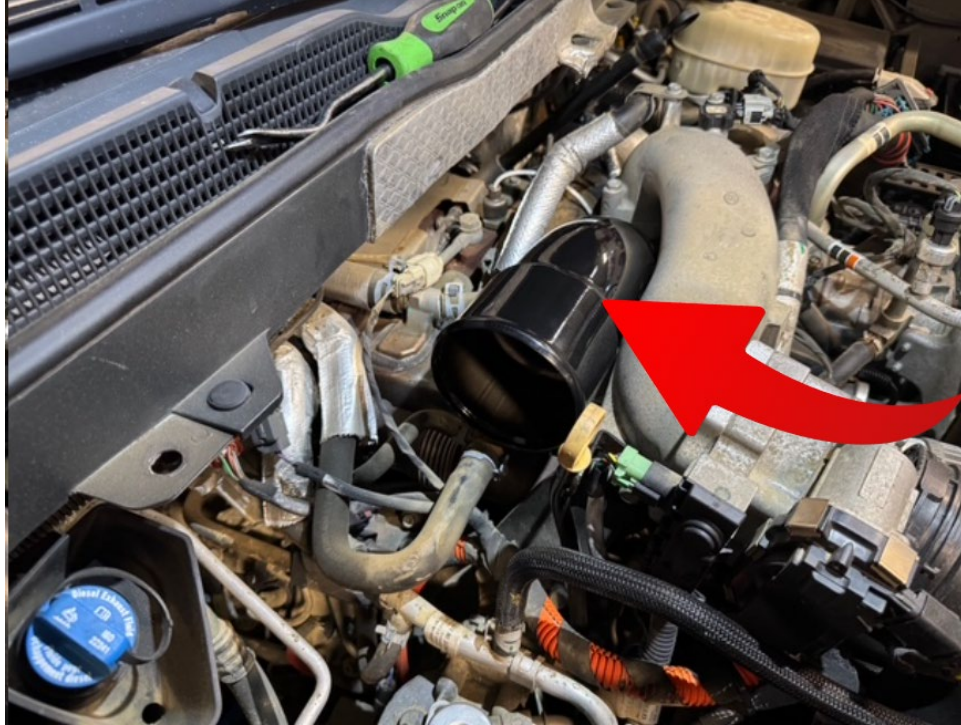

9. Reinstall previously removed intake connection tube



10. Once installed and everything is aligned, tighten all clamps and reconnect batteries