

FORD EXPEDITION MAX 2025+
LINCOLN NAVIGATOR L 2025+

CARGO LINER INSTALLATION SHEET

NOTE: It is important that all the areas where the accessory mounts to the vehicle are clean and free of debris before installation.

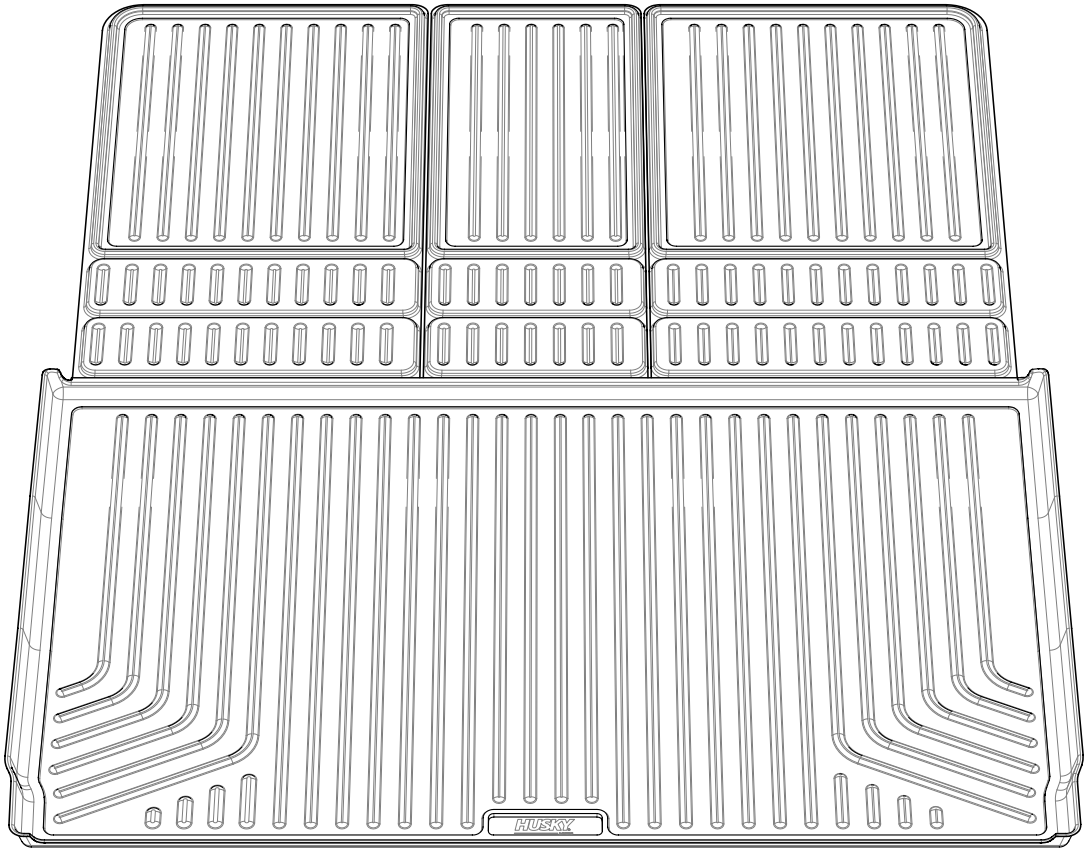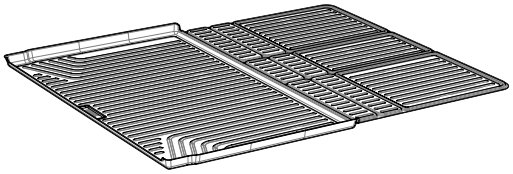

PARTS INCLUDED IN THE BOX

PART	DESCRIPTION	QTY	EXAMPLE
A	Cargo liner	1	

CUSTOMER SERVICE | 888-344-8759 | CustomerService@huskyliners.com | 5400 Data Court, Ann Arbor, MI 48108 | www.huskyliners.com

©RealTruck Group, Inc., 2026

Part# 23591 Rev. 9-17-26

INSTALLATION STEPS

1 Remove any cargo factory floor mats before installation.

1. Open the rear lift gate and clear the cargo area.
2. Remove any existing cargo mats from the vehicle.


IMPORTANT: Do not remove the factory-installed carpeting.

2 Verify the hook and loop pads are secured to the bottom of the liner.

NOTE: Upon removal from the box, your liner may not lay flat. Please refer to the "Troubleshooting" section.

1. Turn the cargo liner over so the bottom is facing up.
2. Double-sided hook and loop pads are attached to the bottom of the cargo liner when shipped. If any have loosened or detached, secure them in the locations shown.
3. Turn the cargo liner back over so the top is facing up.


Hook and loop pad locations
(Bottom of cargo liner)

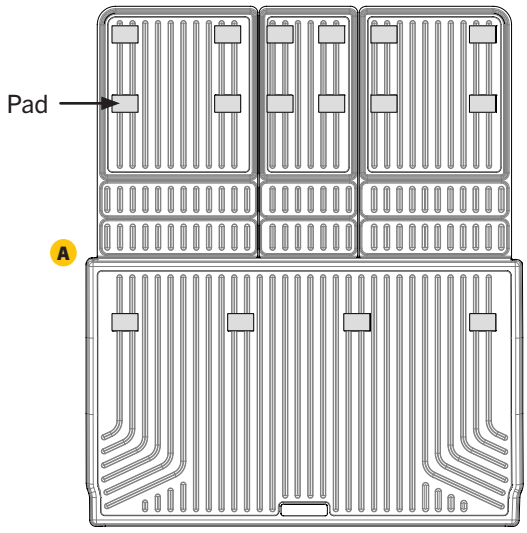

3 Split the seat back portion (optional).

NOTE: The seat back portion of the liner is shipped uncut. Split only if you want the 3rd row seat backs to fold independently.


1. Cut down the middle of the seat back portion only, along the trim groove molded into the center of the liner.

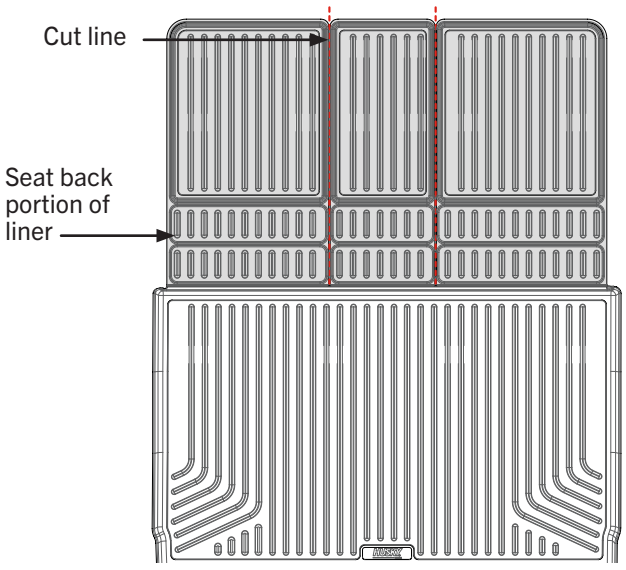

©RealTruck Group, Inc., 2026

4 Position and install the cargo liner.


1. Fold the 3rd row seats flat.
2. Position the liner in the cargo area behind the wheel wells and over the backs of the stowed 3rd row seat.
3. Press the liner down at hook and loop locations to fully seat the pads.

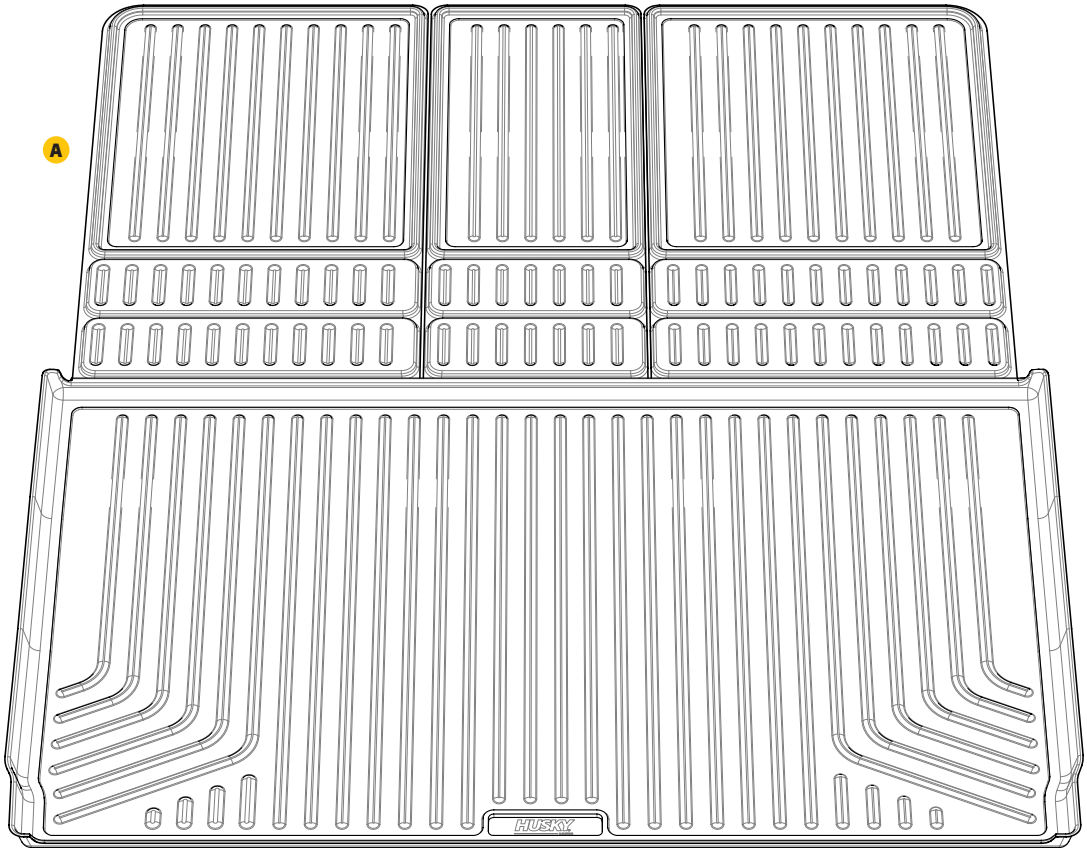

5 Raise the 3rd row seat backs (first time after installation).

1. Move the 3rd row seat backs up slowly.
2. Make sure the accordion section of the cargo liner folds outward toward the rear bumper of the vehicle.

NOTE: You may need to push the fold outward from the back of the cargo liner.

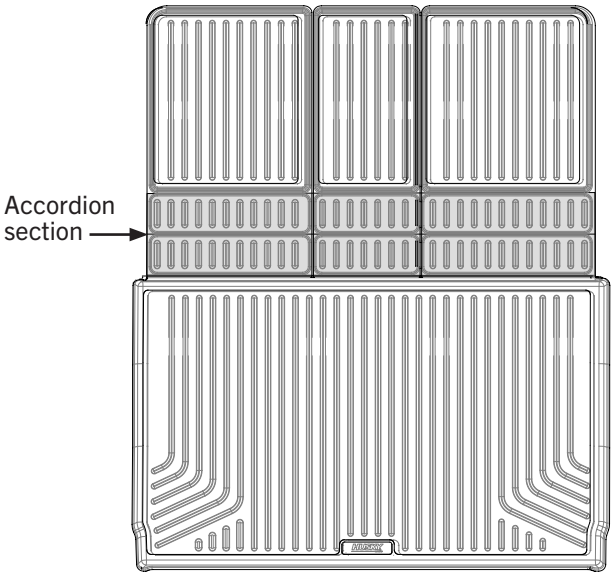

©RealTruck Group, Inc., 2026

Thank you for selecting a Floor Liner from Husky Liners. Your new liner is custom molded to fit your specific vehicle. The liner is made to take the place of your factory floor mats.

TROUBLESHOOTING

Upon removal from the box, your liner may not completely unroll and lay flat. This is normal and only temporary. Place the liner on the floor or in the trunk of your vehicle with a weighted object in each corner. After about 15 minutes, your liner will remain flat. In colder climates, this “relaxing” may take longer therefore moving the liner to a heated area will accelerate the process.

CARE AND MAINTENANCE

Your floor liners are made from a lightweight, tough engineering resin built to last. To clean them, wipe with a damp cloth or sponge. For heavier soiling, a mild household cleaner or glass cleaner works well. Avoid silicone-based protectants — they can make the surface slippery.

To remove the liner, grab the rectangular hook and loop patches. Hold each of them firmly in place as you pull the liner off the vehicle surface. The hook and loop patches are meant to stay attached to the seat back and cargo floor. This reduces wear from the liner being removed and reinstalled for cleaning.

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

LIFETIME WARRANTY

View the Husky Liners Lifetime Warranty at huskyliners.com/warranty-policies.

LIFETIME WARRANTY

©RealTruck Group, Inc., 2026

Part# 23591 Rev. 9-17-26