






Remove Shock and Sway Bar Link hardware shown.

(Driver)

- Install Mount - R to Trailing Arm with hardware shown.
- Tighten hardware.

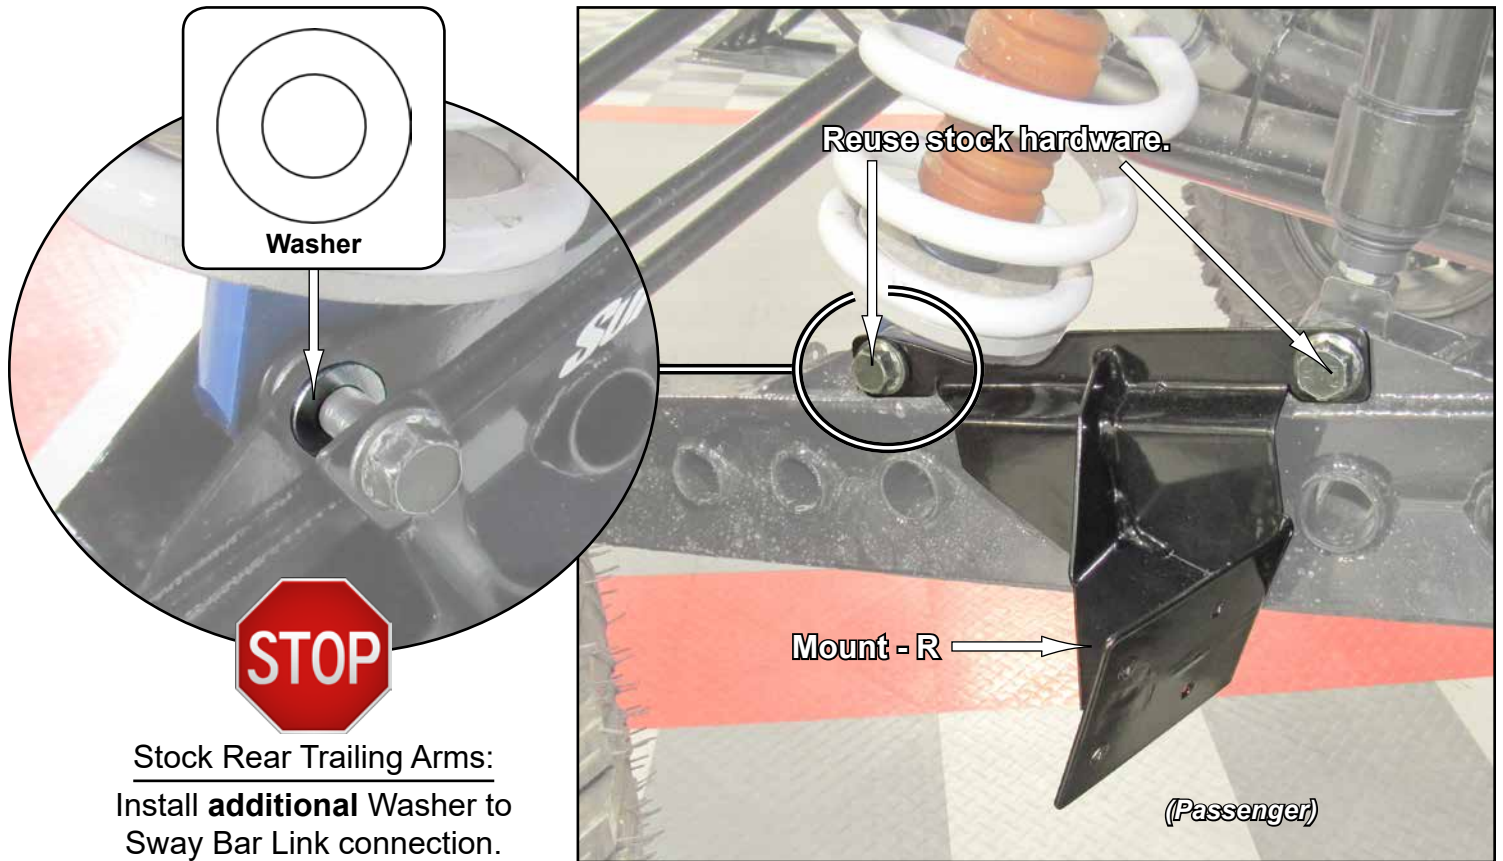

- Install Flap - R to Mount - R with hardware shown.
- Tighten hardware.
- Repeat for opposite side.

