

Notes:

- Hook and Loop Fasteners should be applied at a temperature of 70°F or above.
- Use Denatured Alcohol and thoroughly clean any area where Hook and Loop Fasteners will be installed.
- Installing and adjusting Soft Cab is easier with two people.
- When cleaning Soft Cab, use soap and water only. Do not use detergent, window cleaner, solvents.
- Do not use a dry cloth or rag on windows.
- Do not fold Soft Cab before storing. Zip windows closed and roll Soft Cab to store.
- Do not discard packaging until product has been successfully installed.
- Doors may be secured with Snaps only, Hook and Loop Fastener only, or a combination of Snaps and Hook and Loop Fastener.
- Any whiteness, clouding, wrinkles, or waves that develop will gradually disappear when Soft Cab is exposed to sunlight and/or heat. Use a heat gun or hair dryer to speed up this process. Do not overheat or heat in one area for an extended period of time.

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

**Read instructions and view illustrations before beginning.**

*Thank You  
For Choosing*

**SUPERATV**.COM<sup>®</sup>



#### **Liability Statement**

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

*passenger side installation shown*

- thoroughly clean Cage with Denatured Alcohol
- allow Cage to dry completely

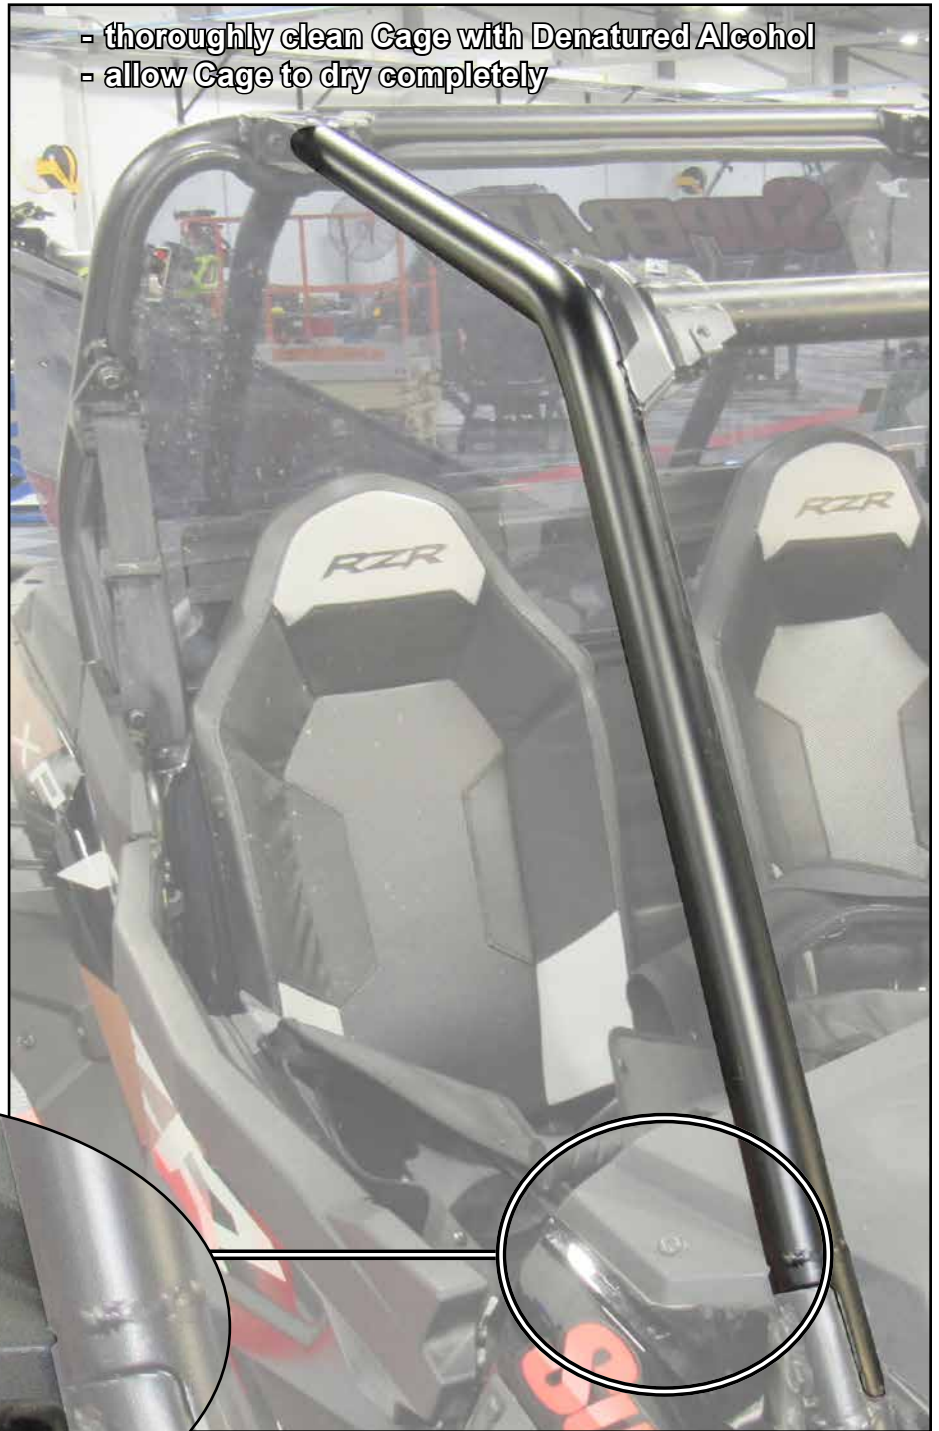

- thoroughly clean this area of Dash with Denatured Alcohol
- allow to dry completely




**repeat steps for driver side**

- Place Hook and Loop Fastener at bottom of Cage, in location shown, and route to top of Cage in location shown.
- Mark end point onto Hook and Loop Fastener; approximately 51".
- Cut Hook and Loop Fastener.
- Peel backing from Hook and Loop Fastener and install to Cage.






- this Snap must be located in area shown after securing top, front, and rear sections
- verify location after each section of Soft Cab is secured

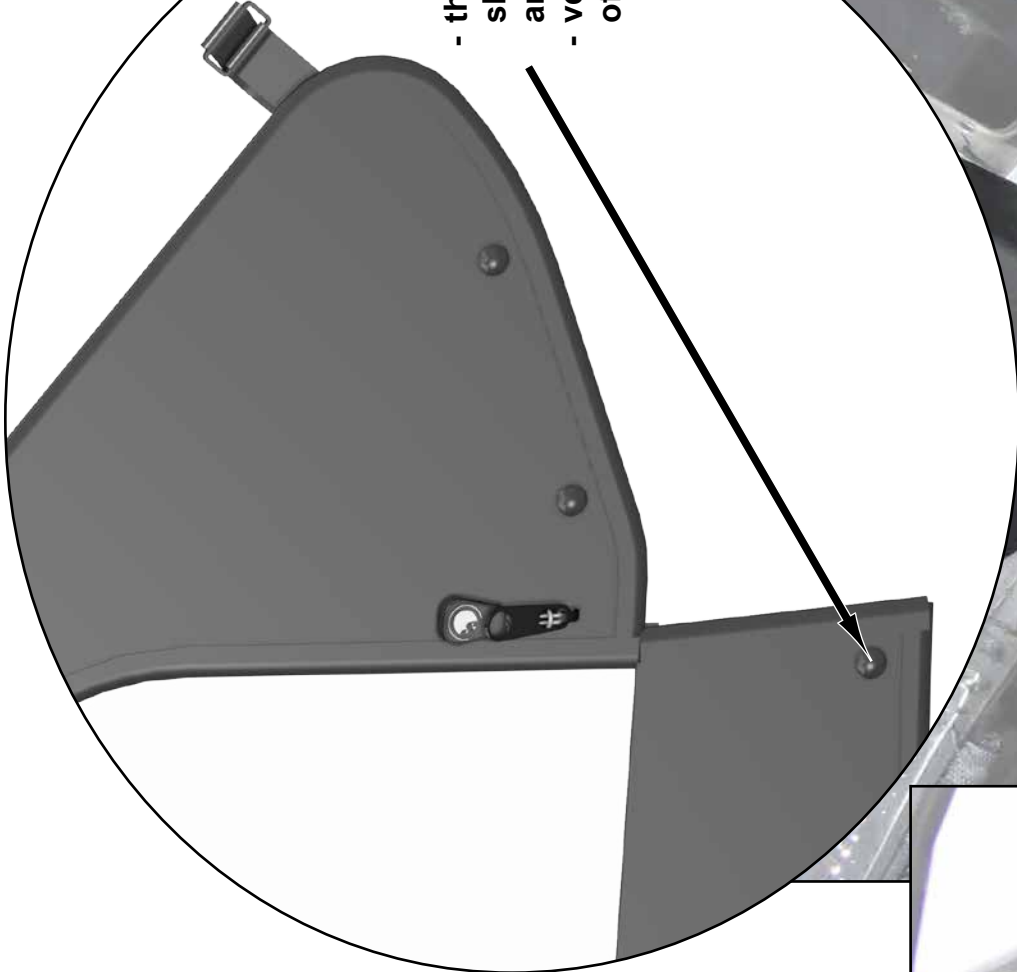


**Snap must be located in area shown. Hardware cannot be installed if Snap is located behind Door Latch.**

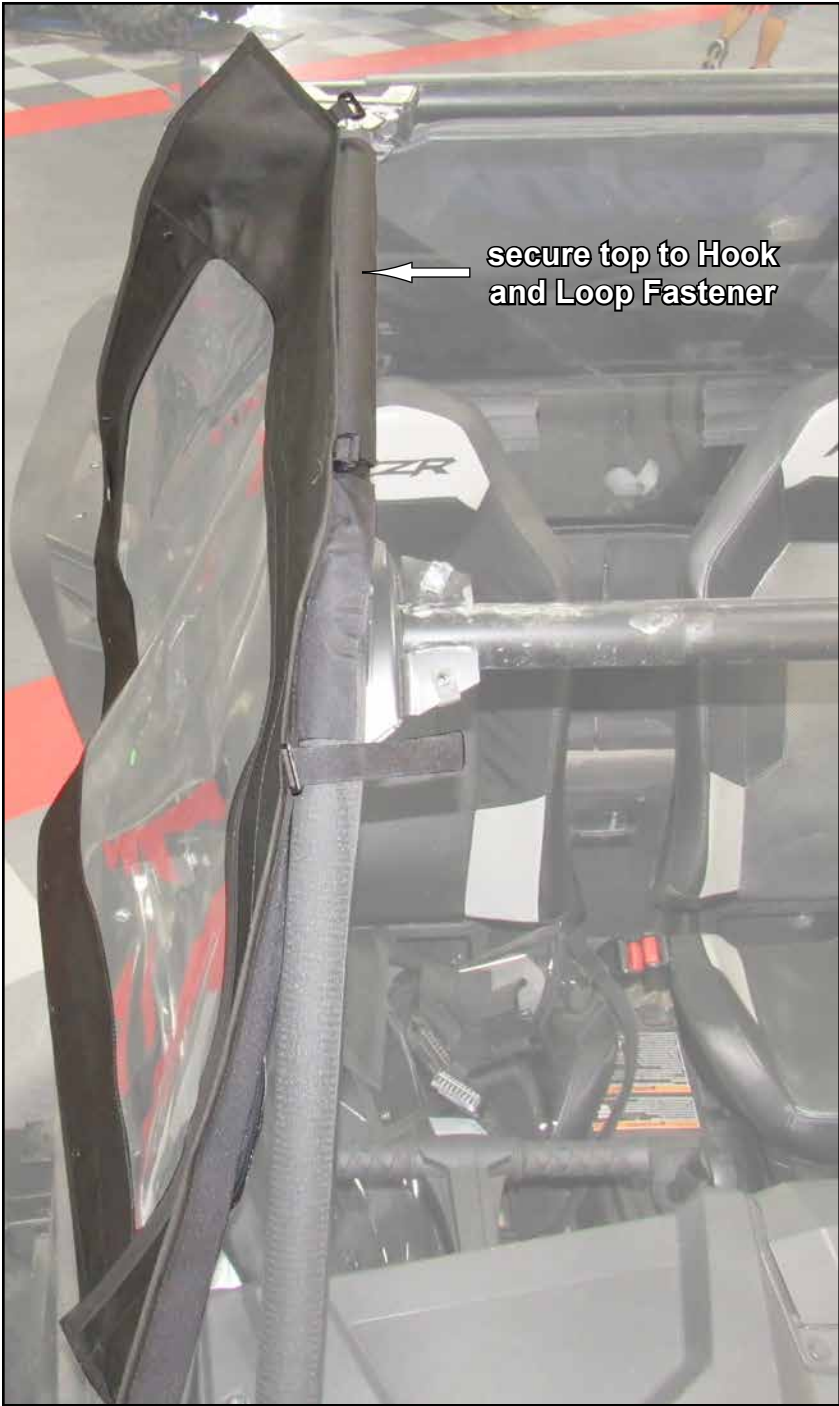

- thoroughly clean Cage with Denatured Alcohol
- allow Cage to dry completely



- Place Hook and Loop Fastener at bottom of Cage, in location shown, and route to top of Cage in location shown.
- Mark end point onto Hook and Loop Fastener; approximately 22-1/2".
- Cut Hook and Loop Fastener.
- Peel backing from Hook and Loop Fastener and install to Cage.

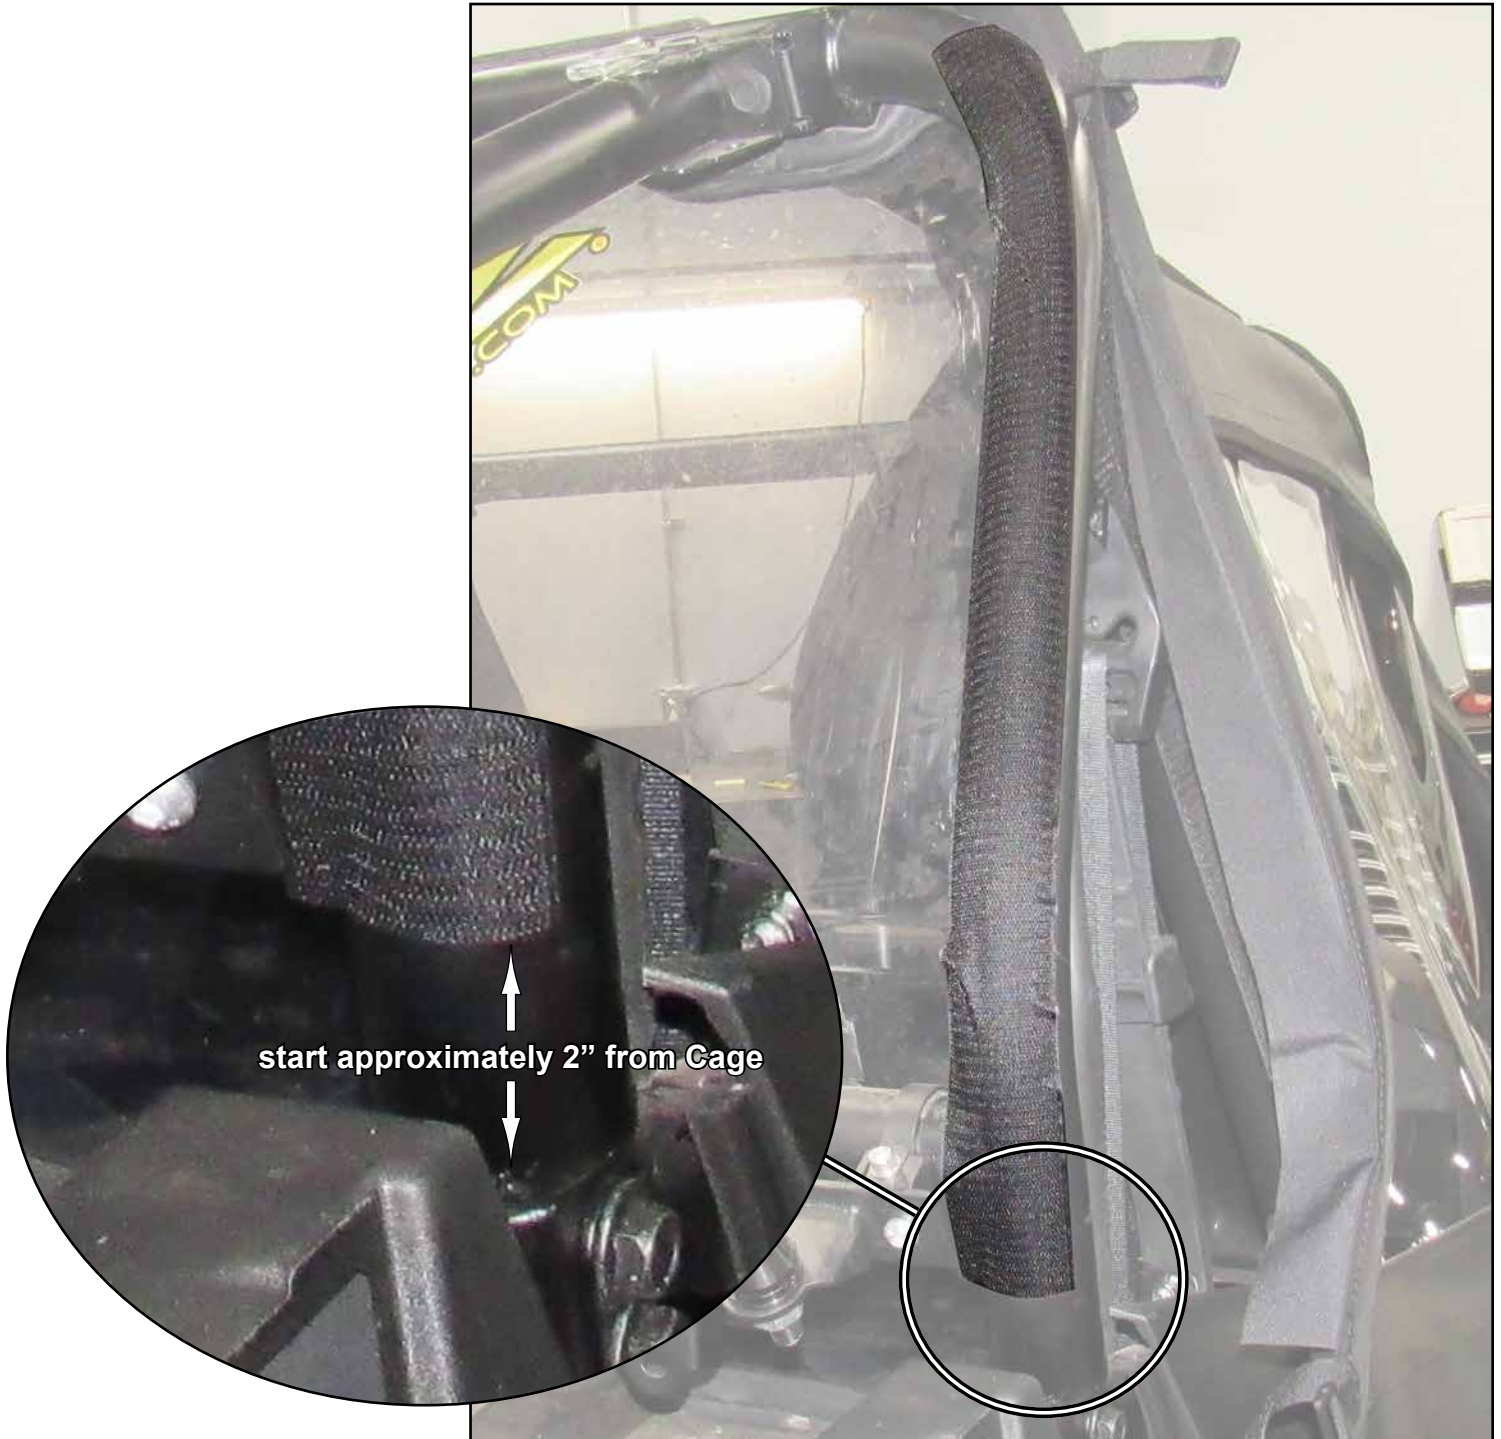




**leave strap on Soft Cab loose**

- Cut Hook and Loop Fastener to fit remaining portion of Cage.
- Peel backing from Hook and Loop Fastener and install to Cage.




**leave strap on Soft Cab loose**

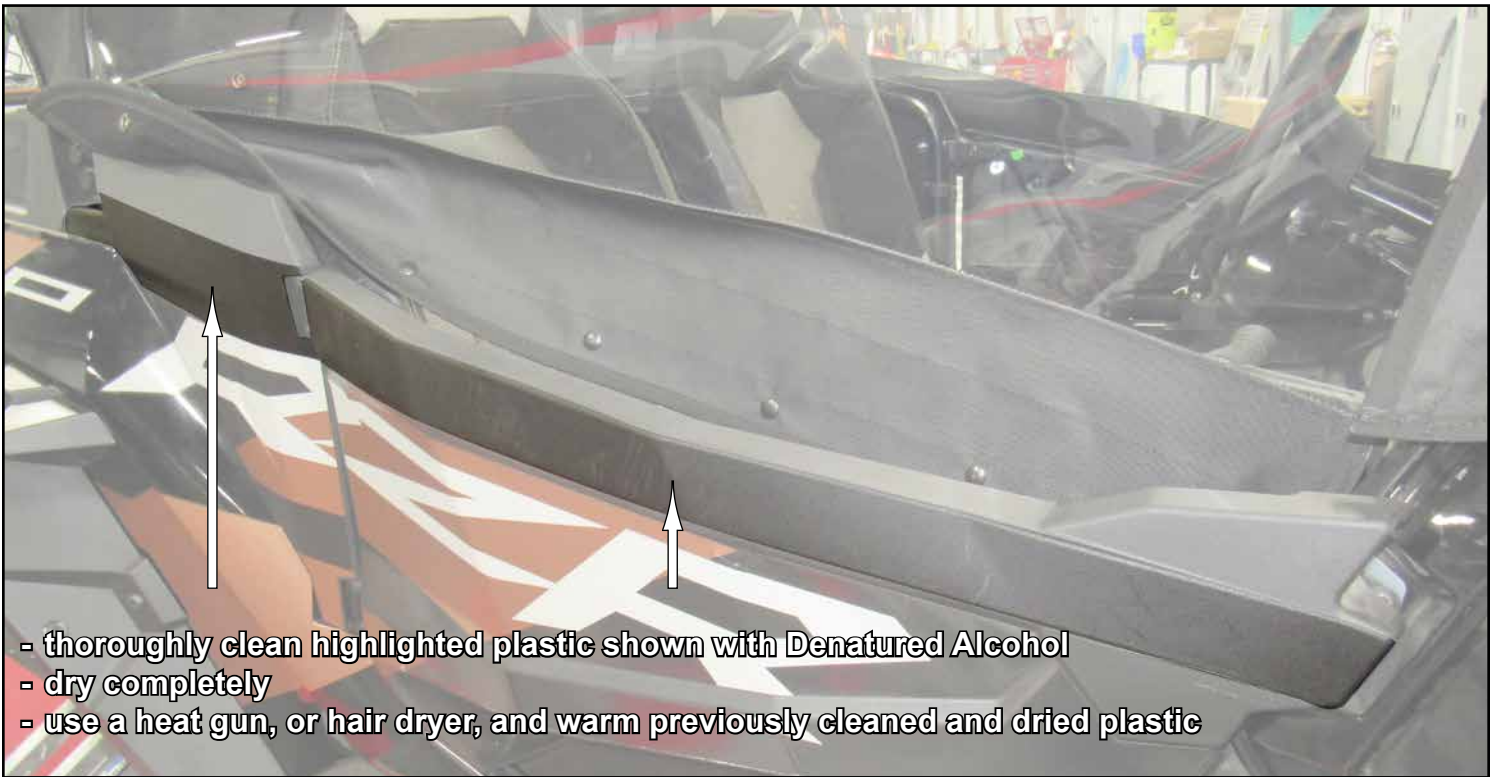

- thoroughly clean highlighted plastic shown with Denatured Alcohol
- dry completely
- use a heat gun, or hair dryer, and warm previously cleaned and dried plastic



- pull down flap
- reach behind flap and secure Hook and Loop Fastener to flap.

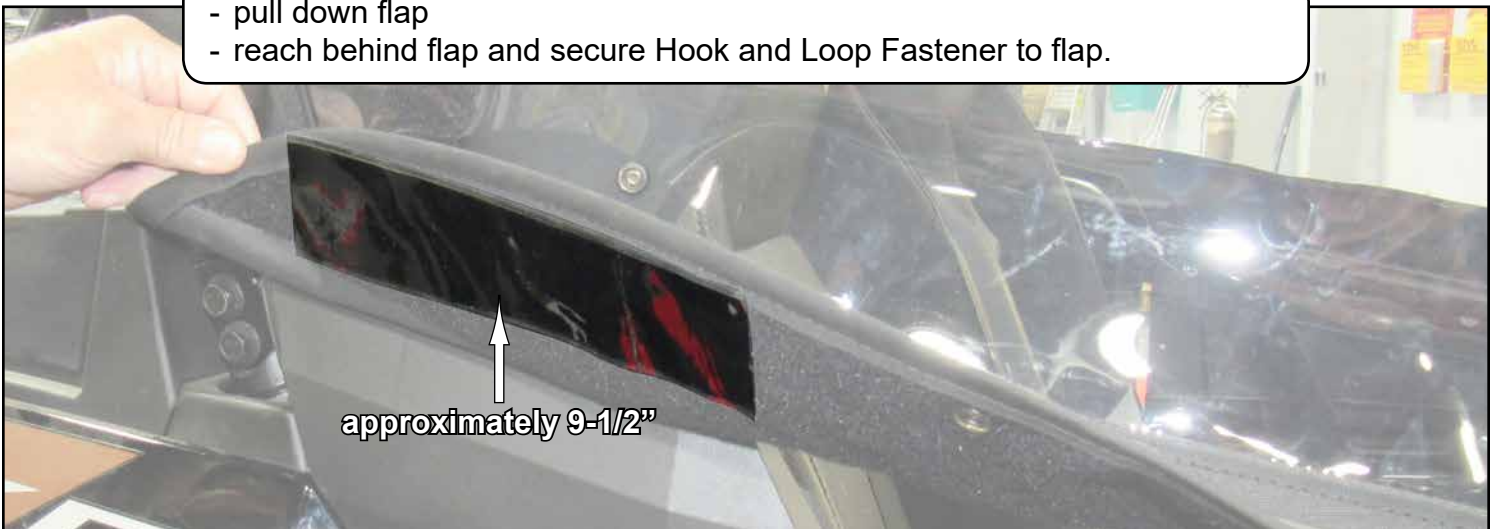


- Peel backing from Hook and Loop Fasteners.



**STOP** wait 15 - 30 minutes for adhesive to setup

- Carefully open flap; use one hand to gently separate Hook and Loop Fastener from flap and plastic while opening.
- Apply more heat to Hook and Loop Fastener.




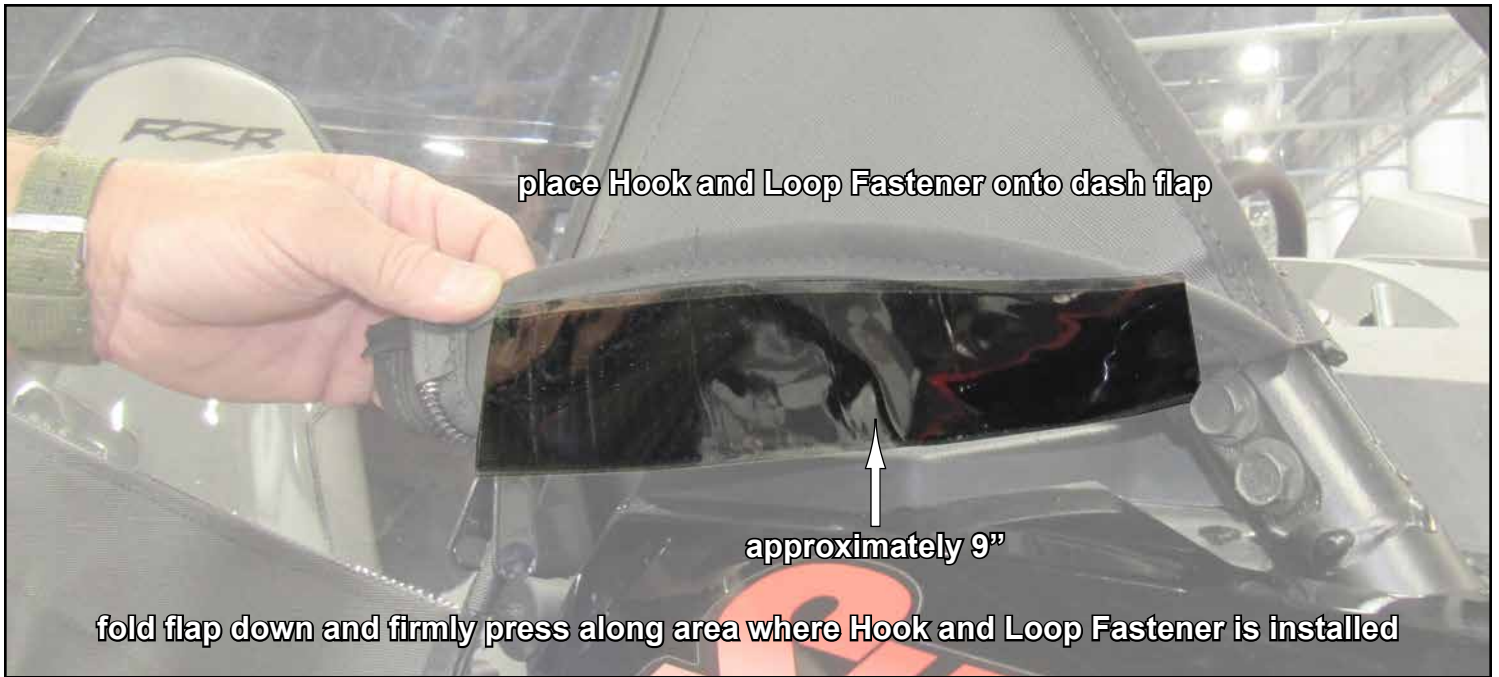

wait 15 - 30 minutes for adhesive to setup


- Carefully open flap; use one hand to gently separate Hook and Loop Fastener from flap and plastic while opening.
- Apply more heat to Hook and Loop Fastener.



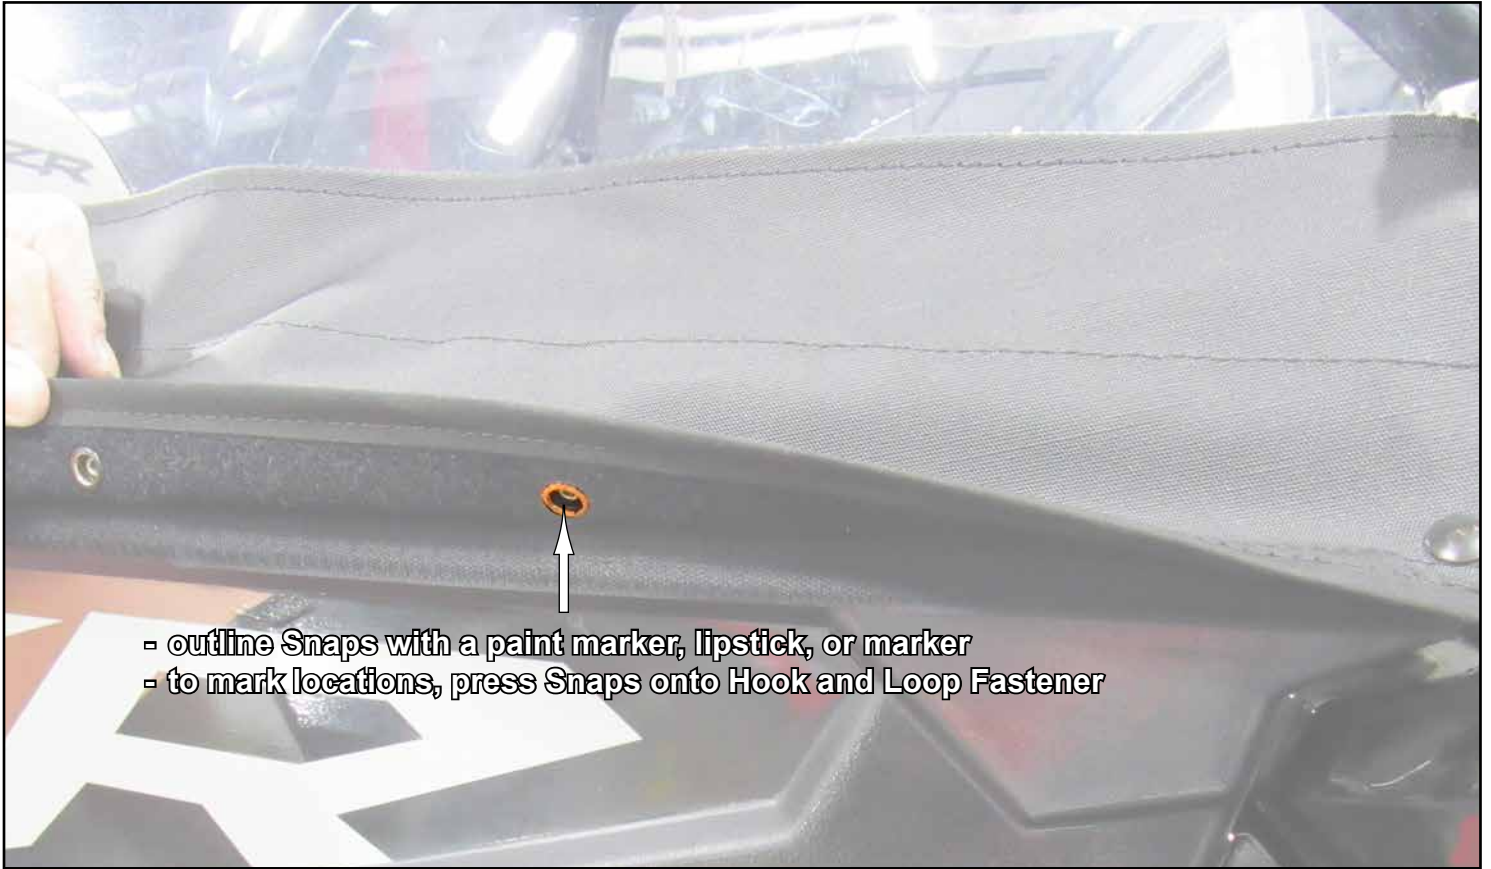



install Snap Studs to plastic  
with hardware shown

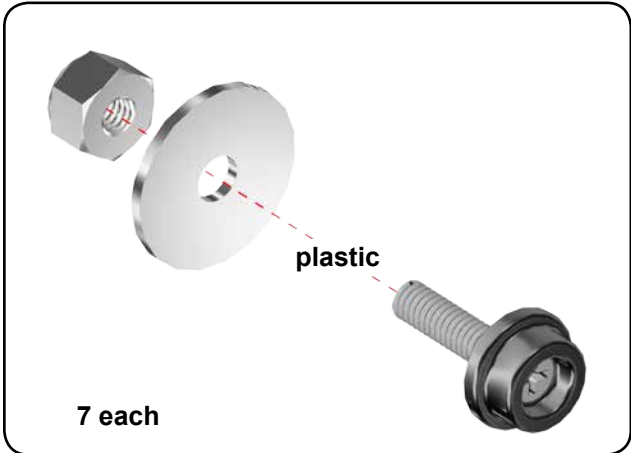



- outline Snaps with a paint marker, lipstick, or marker
- to mark locations, press Snaps onto Hook and Loop Fastener





install Snap Studs to plastic with hardware shown

cinch all straps down on Soft Cab

repeat steps for driver side


**Windows must be rolled up when trailering machine**

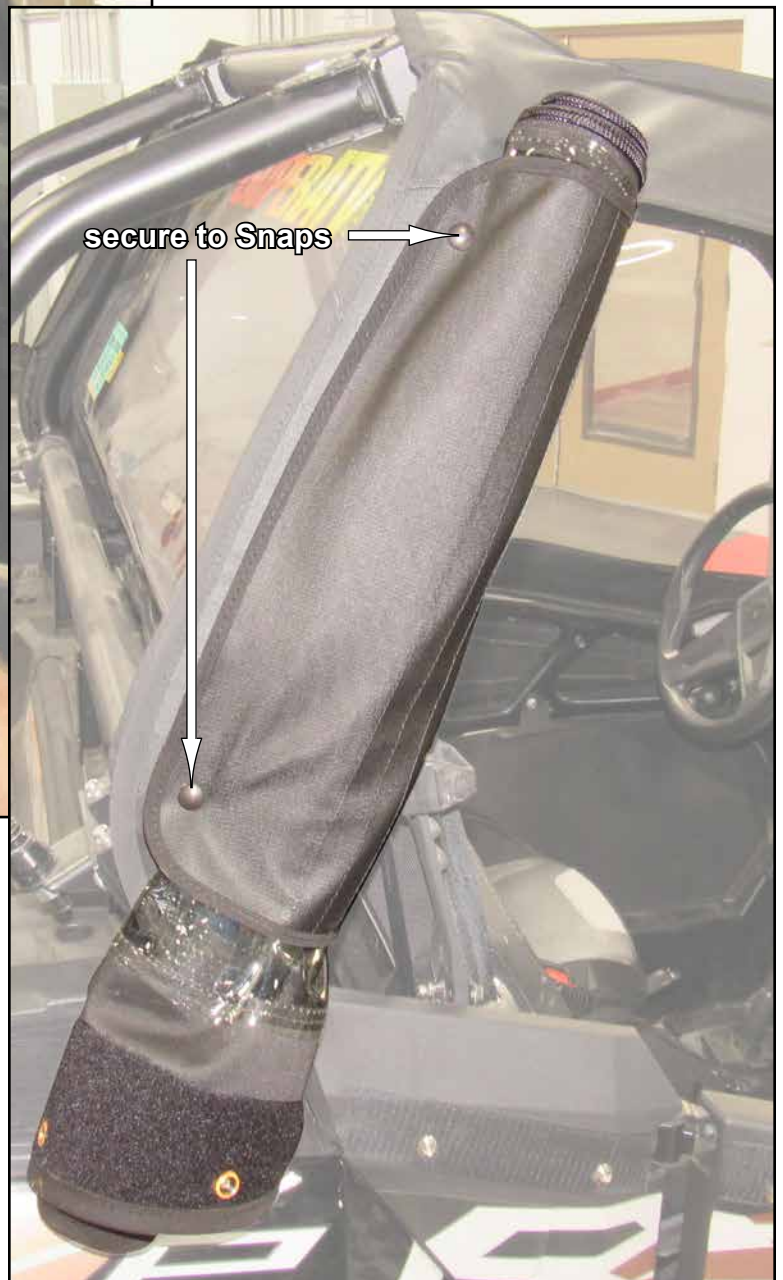

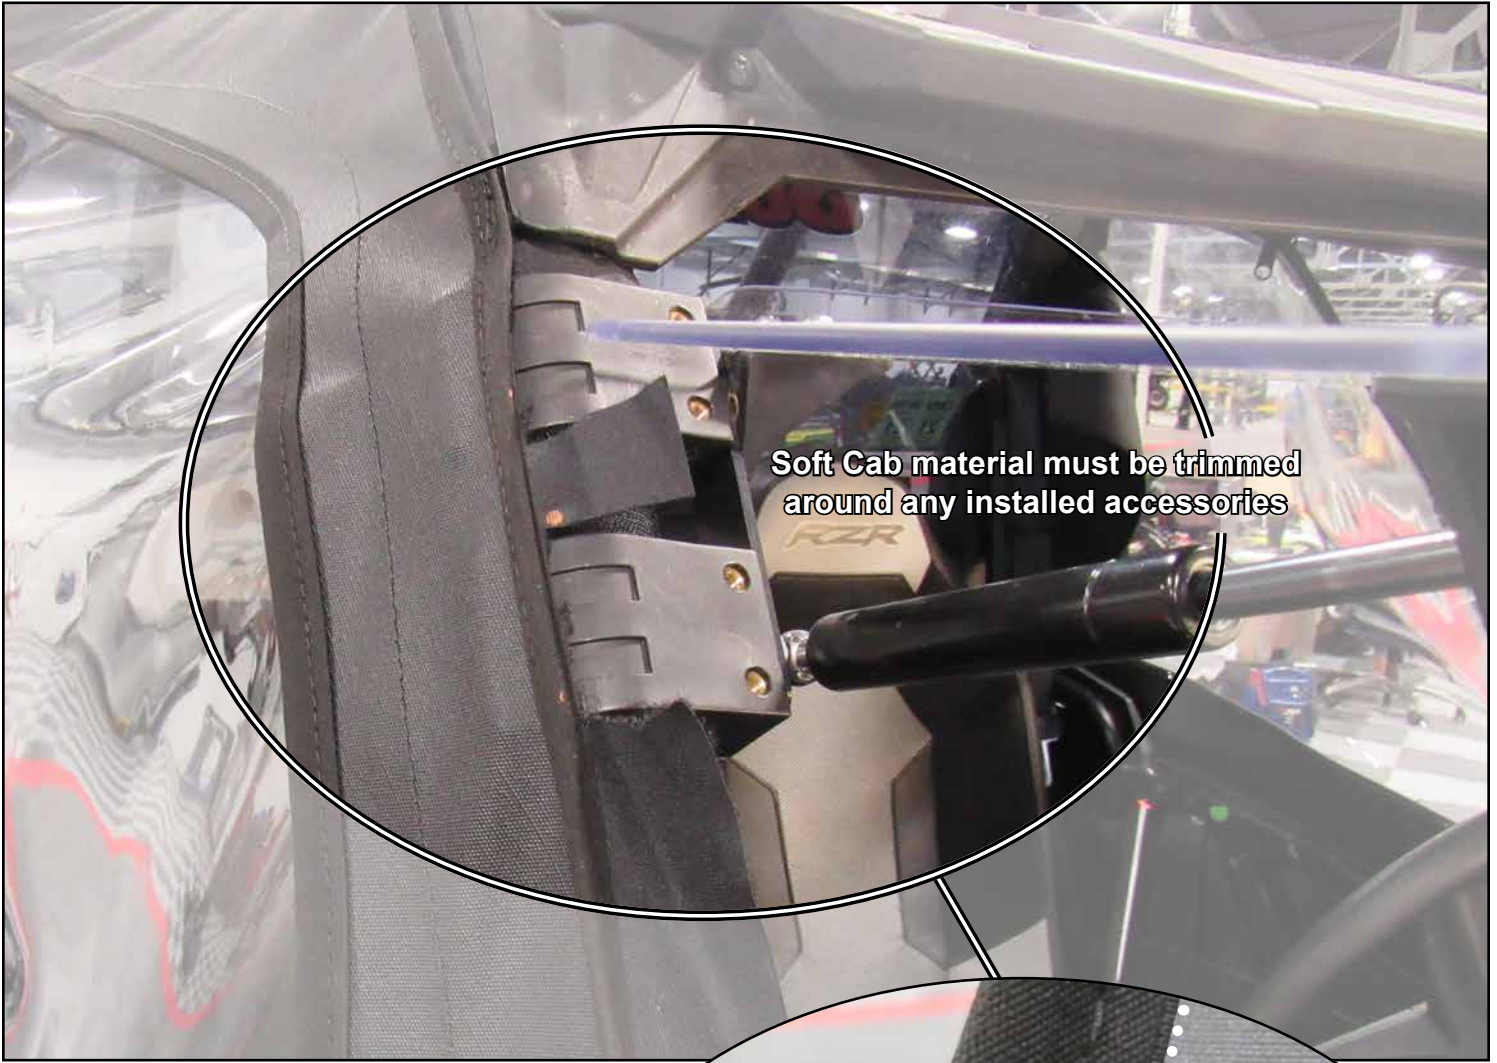

Soft Cab material must be trimmed around any installed accessories

*do not cut into binding when cutting material*

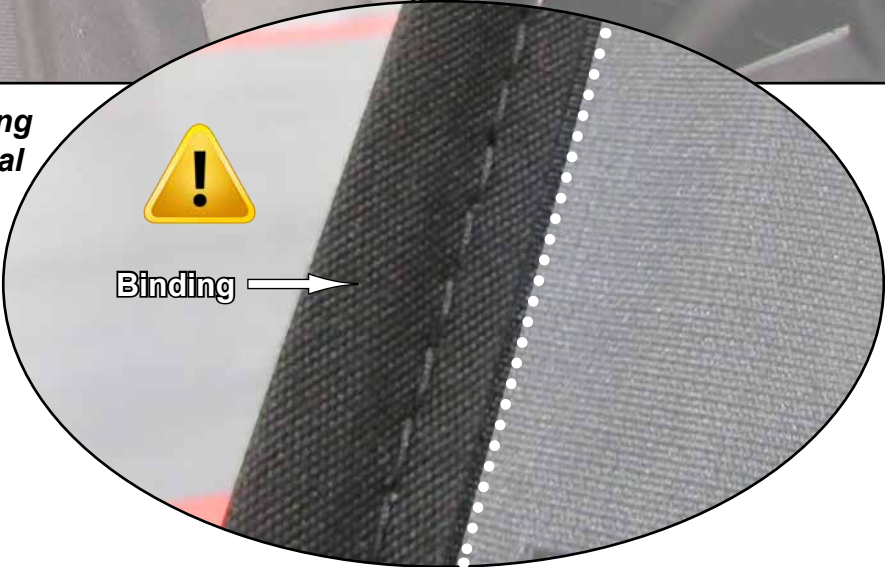

Binding →