


ROAD GLIDE BRACKET INSTRUCTIONS

KIT CONTENTS

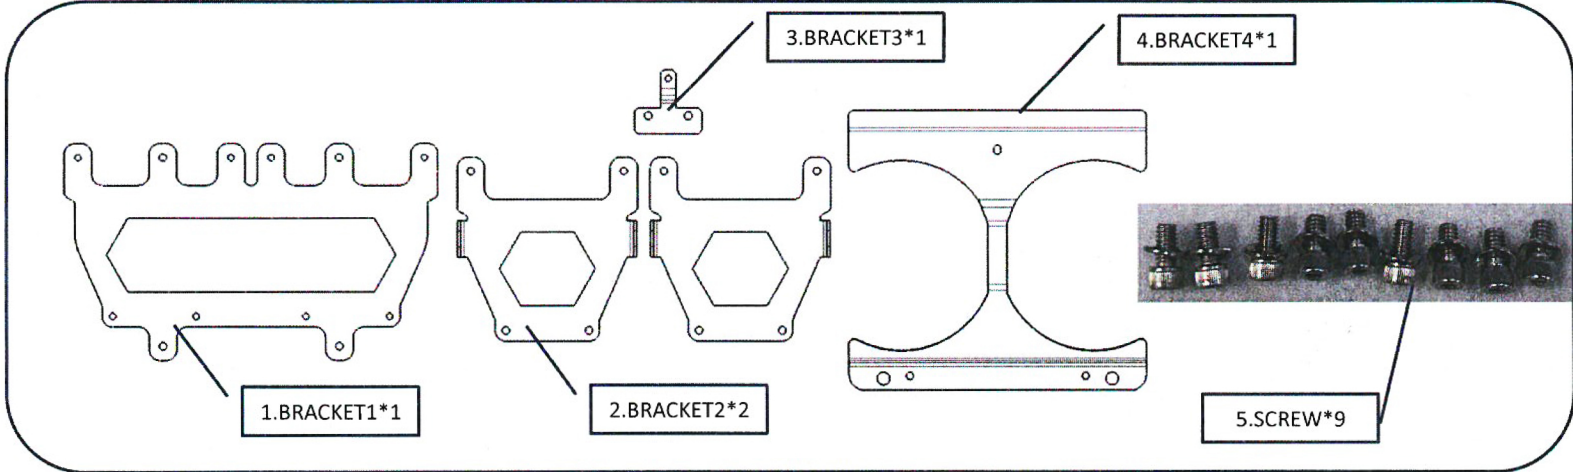

PREPARE(On the premise that the wiring harness has been installed)

- 1.Remove windshield/ speaker grilles/ outer fairing.
- 2.Remove OEM headlamp and disconnect headlamp connector.

INSTALL

1. Baja LP6 headlight installed on bracket 2. See Fig 1.
(Using screws provided by Baja)
2. Install bracket1 on the frame, only fix the upper two screws first .See Fig 2.
(Using original factory screws)
3. Install the combination of Baja headlight and bracket 2 on bracket 1, only fix three screws first .See Fig 3/ Fig 4/Fig 5.
(Using KIT 5 screws)

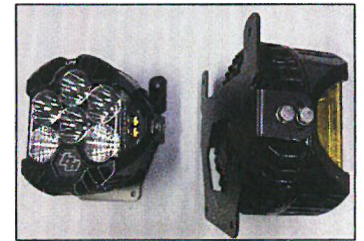


Fig 1

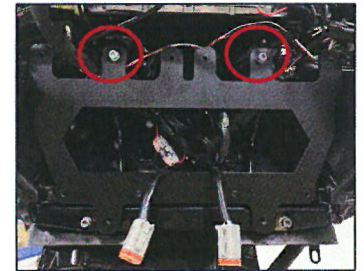


Fig 2



Fig 3

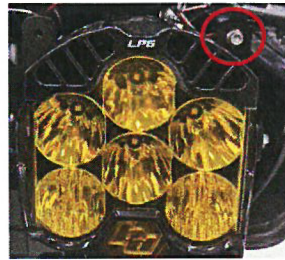


Fig 4

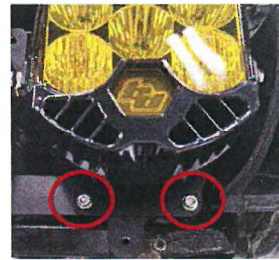


Fig 5

4. Repeat to install another combination.
5. Install bracket3. See Fig 6. (Using KIT 5 screws)

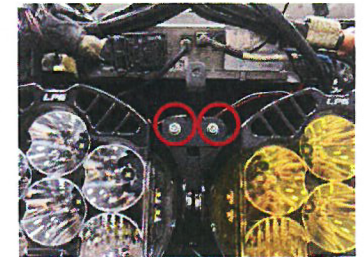


Fig 6

6. Install bracket4. See Fig 7. (The upper one uses kit 5 screws, and the lower two use original factory screws)
7. Reinstall outer fairing and other parts.

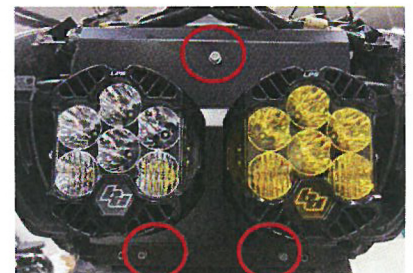


Fig 7