


SG-BRACKET INSTRUCTIONS

KIT CONTENTS

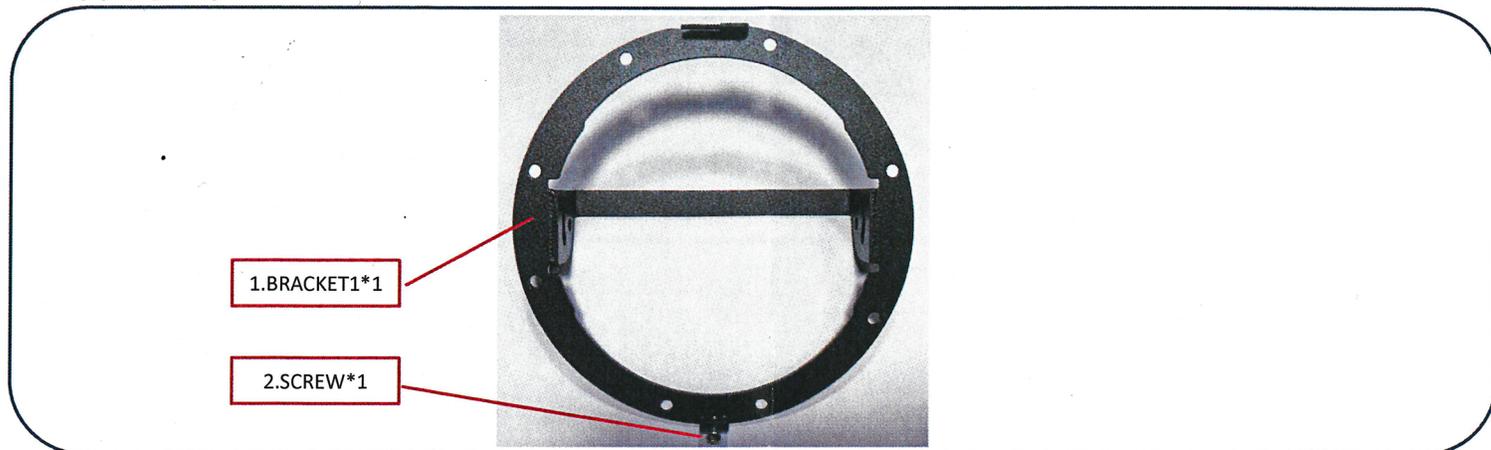

PREPARE(On the premise that the wiring harness has been installed)

- 1.Remove the OEM Ring.
- 2.Remove OEM headlamp and disconnect headlamp connector.

INSTALL

1. Baja LP6 headlight installed on bracket 1. See Fig 1 & 2.
(Using screws provided by Baja)

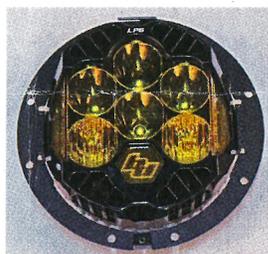


Fig 1

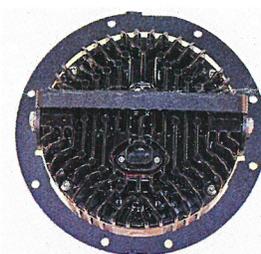


Fig 2

2. Replace OEM 7inch bracket for Street Glide.
See Fig 3. (Using Original screws)

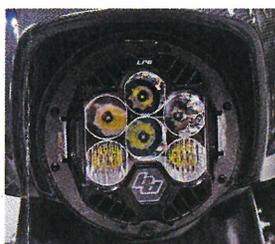


Fig 3



Fig 4

3. Replace OEM 7inch bracket for Road King or Fat Boy.
See Fig 4. (Using Original screws)



Fig 5

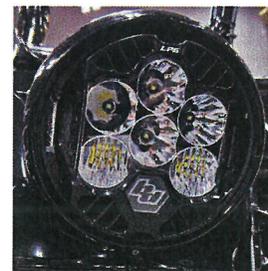


Fig 6

- 4.Reinstall the OEM Ring.
See Fig 5 & 6. (Using KIT 2 screws)