




# ORACLE LIGHTING

HIGH POWERED HEADLIGHTS  
PART #5769  
INSTALLATION GUIDE

VIDEO INSTALL



TOOLS NEEDED:  
PANEL TOOL  
T15 TORX BIT  
WIRE CRIMPS  
T-TAPS

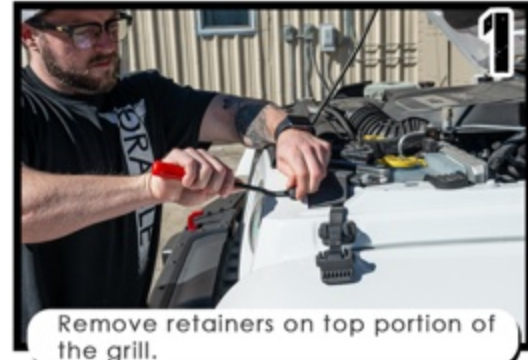





# ORACLE LIGHTING

HIGH POWERED HEADLIGHTS  
PART #5769  
INSTALLATION GUIDE

FOR TECH SUPPORT, PLEASE CONTACT US @ 1-800-407-5776

VIDEO INSTALL




Install new LED Headlight into factory housing on chassis.




Re-install OEM Trim Ring and the (4) T-15 Torx screws.

**11** Repeat steps 3 to 10 on the Driver's side of the vehicle.

**12** Connect T-Taps to Positive & Negative wires on the Parking Light Wiring Harness. (See Diagram Below)

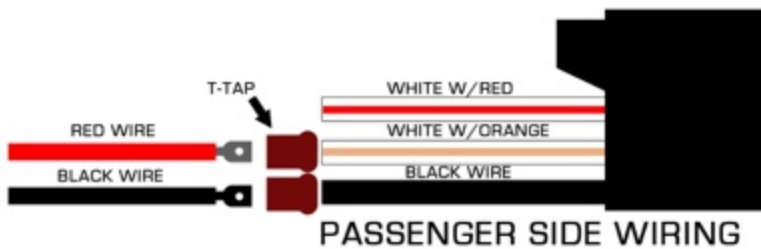

Re-install Parking Light Bulbs into grill, and re-install grill.

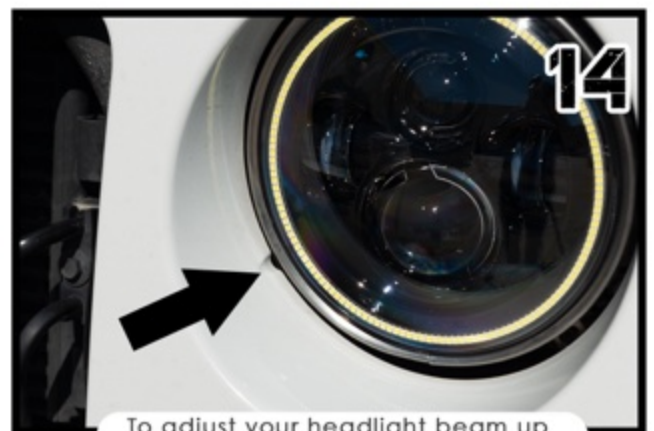

To adjust your headlight beam up or down, use T-15 Torx shown here.