



***Rudy's Performance Parts Edge CTS3 Center
Console Tray Mount Instructions
2017-22 Ford F-Series Trucks***



For full color instructions, please visit our website: www.rudysdiesel.com/files/rdp-cts3mount.pdf

Parts breakdown:

- Rudy's Center Console Tray Mount
- 1x Rubber grommet
- Double sided tape


Tools needed:

- 7mm socket
- T20 torx
- 1 ¼" hole saw (suggested for proper fitment of grommet)
- Trim removal tool


NOTE: This mount is not compatible with center console trays that have a wireless charger. You must have part number KL3Z-1513594-AA. This can be purchased directly from us or your local Ford dealer.

Instructions

1. Open center console lid, lift up on back of the console trim until it unclips. Be sure to disconnect the plug on the bottom of the trim piece.

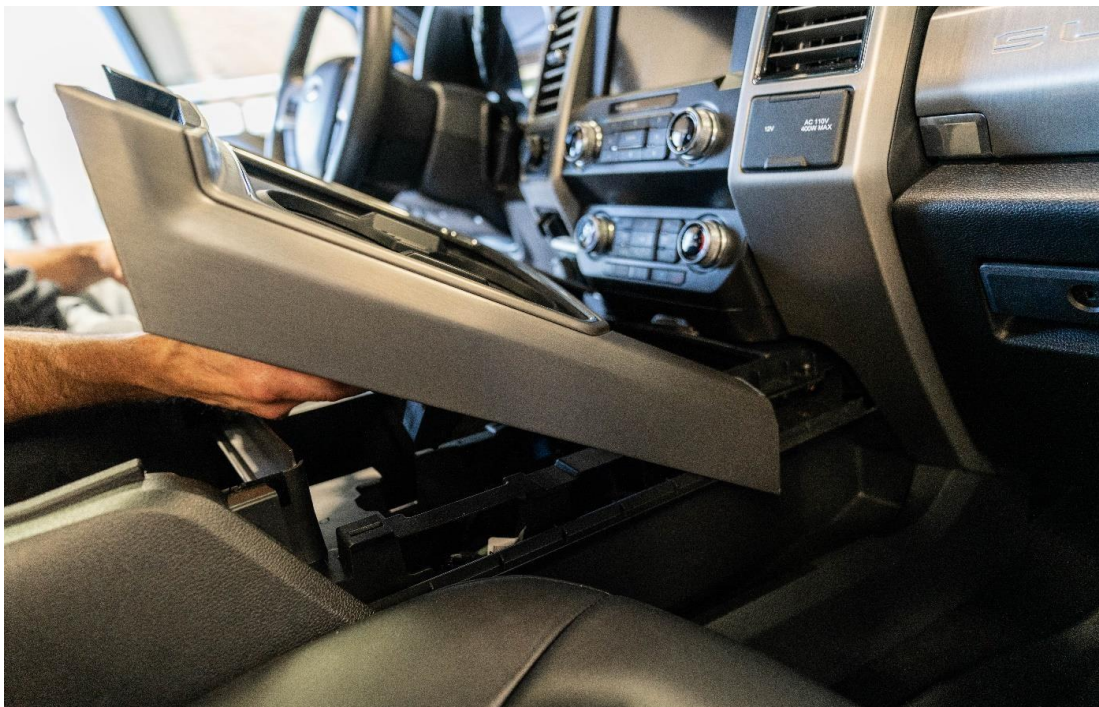

2. Once the trim piece is removed, locate the (2) T20 torx screws as shown below, and remove them.

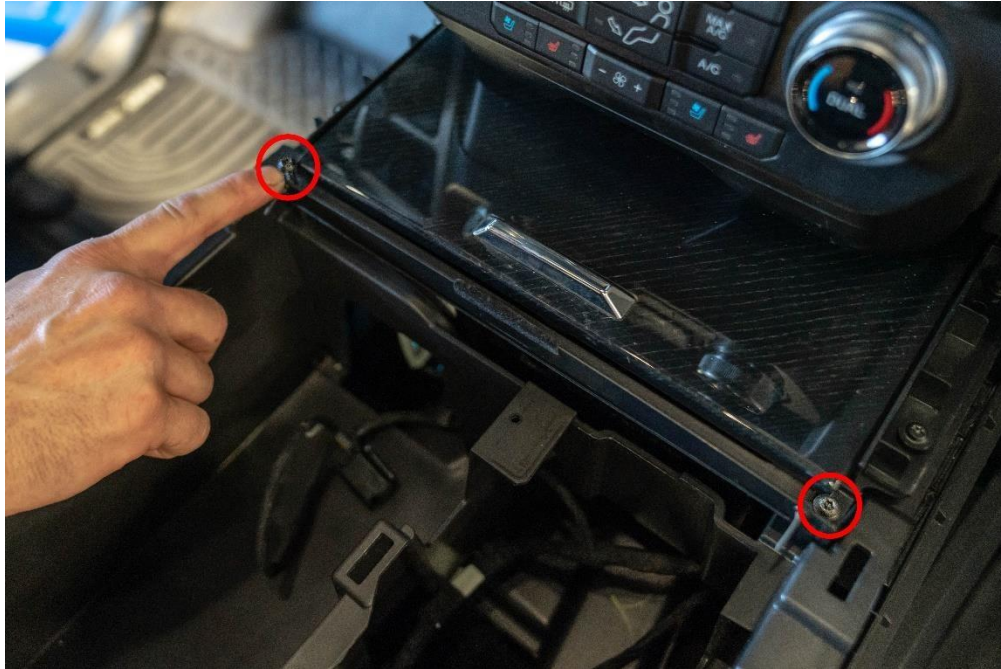

3. Now that the screws have been removed, you will be able to slide the sliding cover forward, and remove it from the console.



4. Once the sliding cover has been removed, you are presented with an option. You can drill out the 1 ¼" hole with the tray in the truck, and attempt to fish the CTS3 power wire to the hole. We do not recommend this option, but it is available if you do not want to remove the remaining trim pieces. If you drilled the hole with the tray in the truck, skip to step #11.



5. To gain access to remove the center console tray, lift up on the dash tray that sits above the radio as shown below. Remove the (2) 7mm bolts, you do not need to remove the tray, just lift up until the front clips release.



6. With the tray unclipped, pull the top of the radio display trim towards you, until it unclips. There are multiple clips that will need to release, take your time as you do not want to damage the trim piece.




7. Once it has been unclipped, you will need to unplug all connectors on the back of the trim. Once unplugged, set the trim piece aside.





8. Next you will remove the trim pieces on each side that house the AC vents, these unclip and unplug the same as the previous pieces.




9. Once the vent pieces are removed, locate the (2) 7mm bolts at the bottom of the center stack, and remove them. This will allow removal of the small trim piece at the bottom.

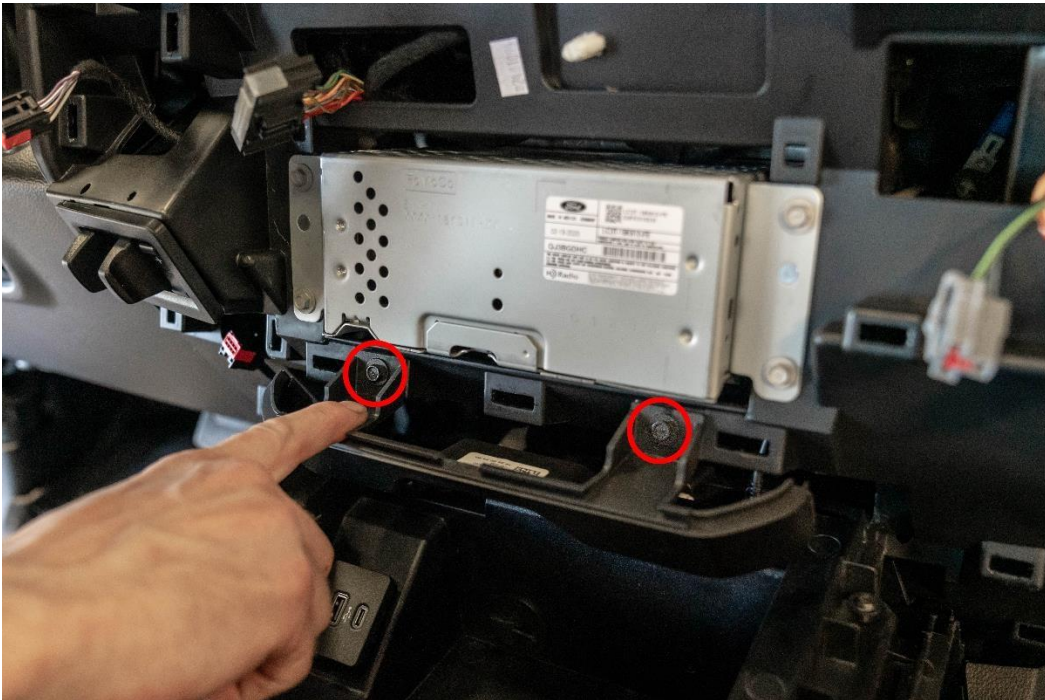

10. With the piece removed, locate the (4) T20 torx bit screws that hold the center console tray in. There are 2 on each side. With the screws removed, pull out the center console tray.

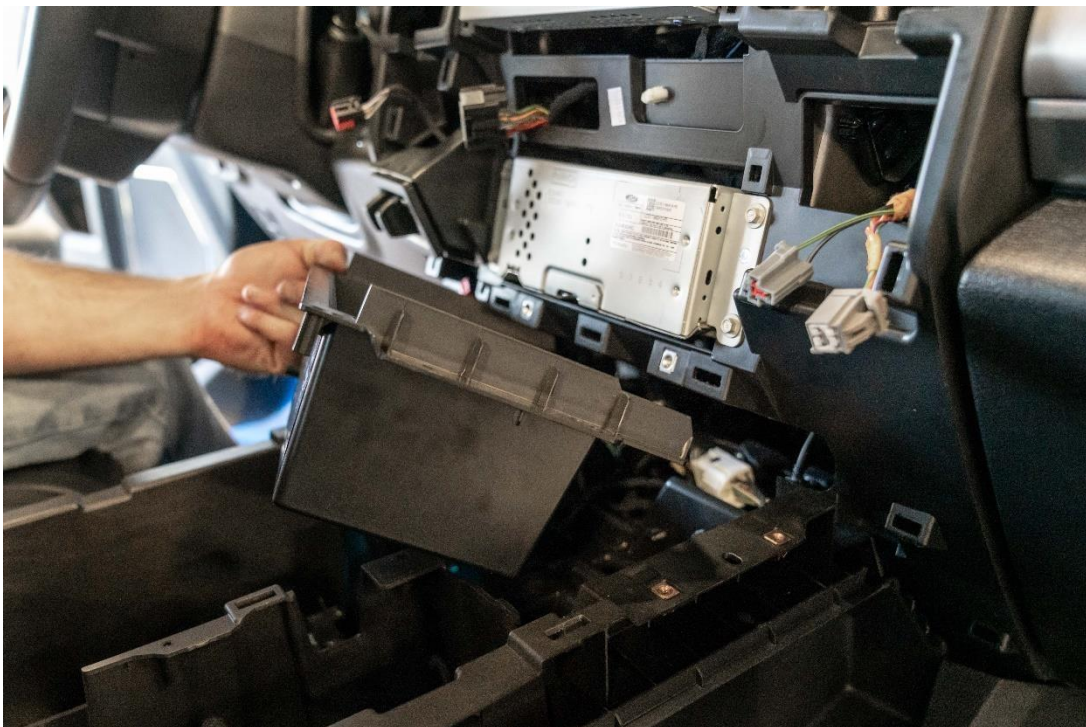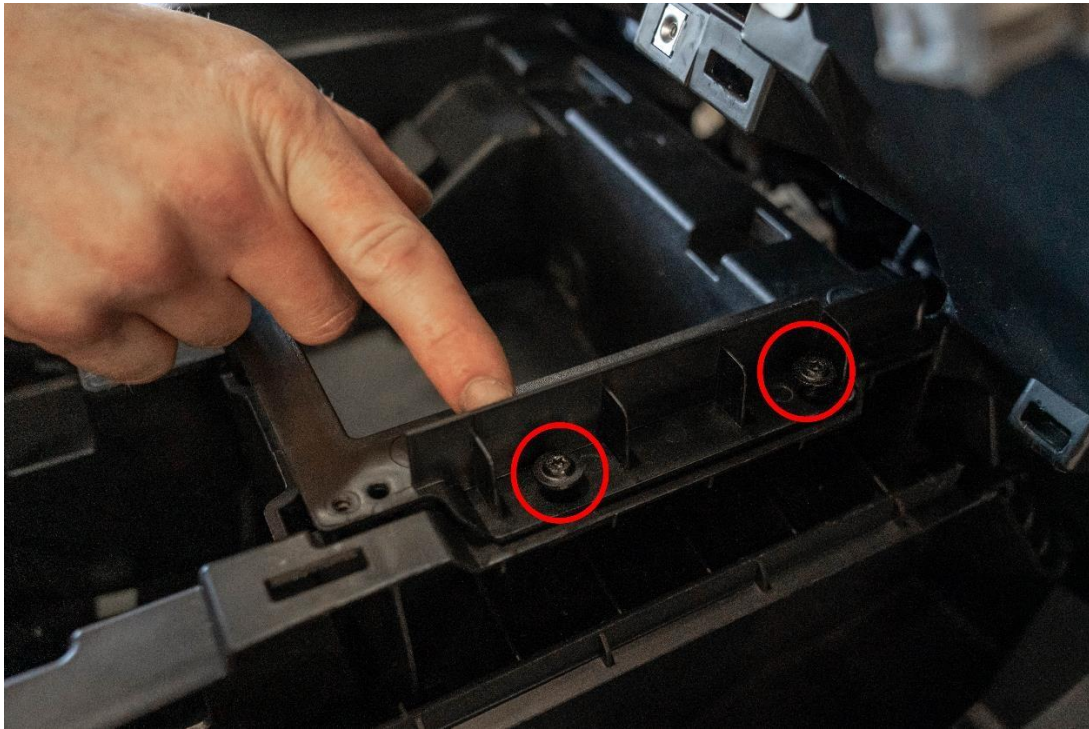

11. Now that the center console tray has been removed, drill a 1 ¼" hole next to the USB block. Once the hole is drilled, insert the provided rubber grommet into the hole.

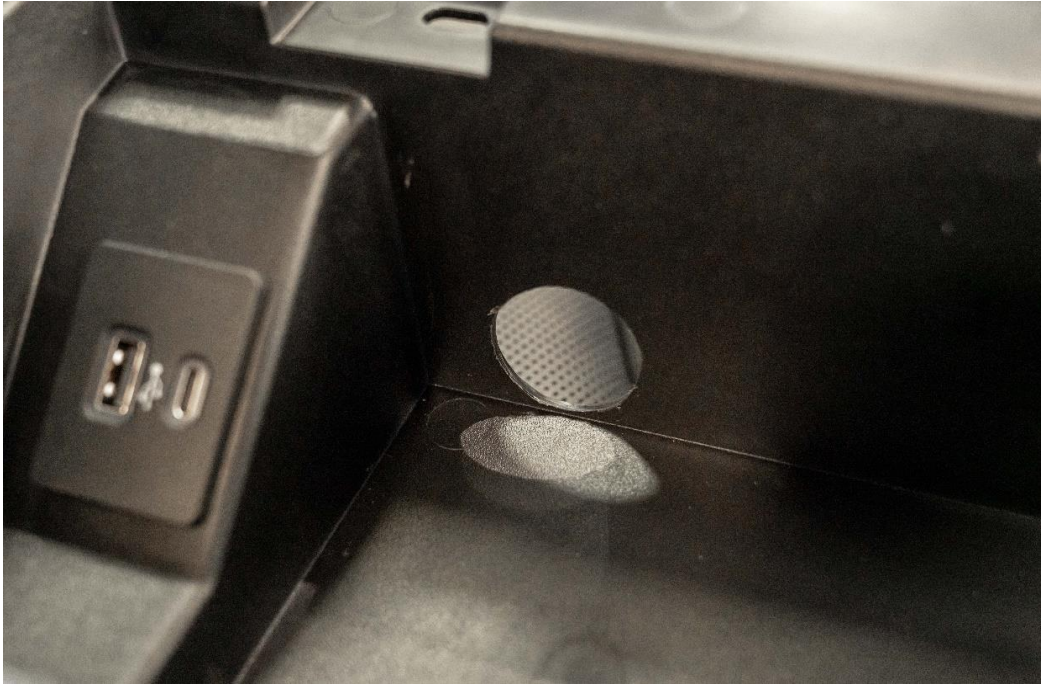

12. With the hole drilled, run the Edge CTS3's HDMI power cable from the OBD II port, under the dash, and up through the opening where the center console tray sits.



13. If your truck came equipped with a wireless charger, you can tuck the power cable for the wireless charger down and out of the way.
14. Now that your center console tray has been modified, reinstall it into the truck, and route the HDMI cable through the rubber grommet and set the tray back into place.
15. Use the provided double sided tape and apply it in each corner of the CTS3 mount. Once applied, connect the power cable, and set the CTS3 into place in the Rudy's center console mount. *Note that you may have to pull the power cables slack from under the dash to keep it from binding when you set the CTS3 into place.



16. We recommend verifying that your CTS3 powers up before proceeding with the next step to avoid having to remove the trim pieces again.
17. With the CTS3 in place, reinstall all of the factory trim pieces and hardware in the reverse order that you removed them.

With all trim pieces reinstalled, you have now completed installation of the Rudy's CTS3 center console mount.

