


Ecodiesel Switch Installation


Step One:

Disconnect the C1 Connector from the ECM (larger of the two connectors that connects to the ecm)

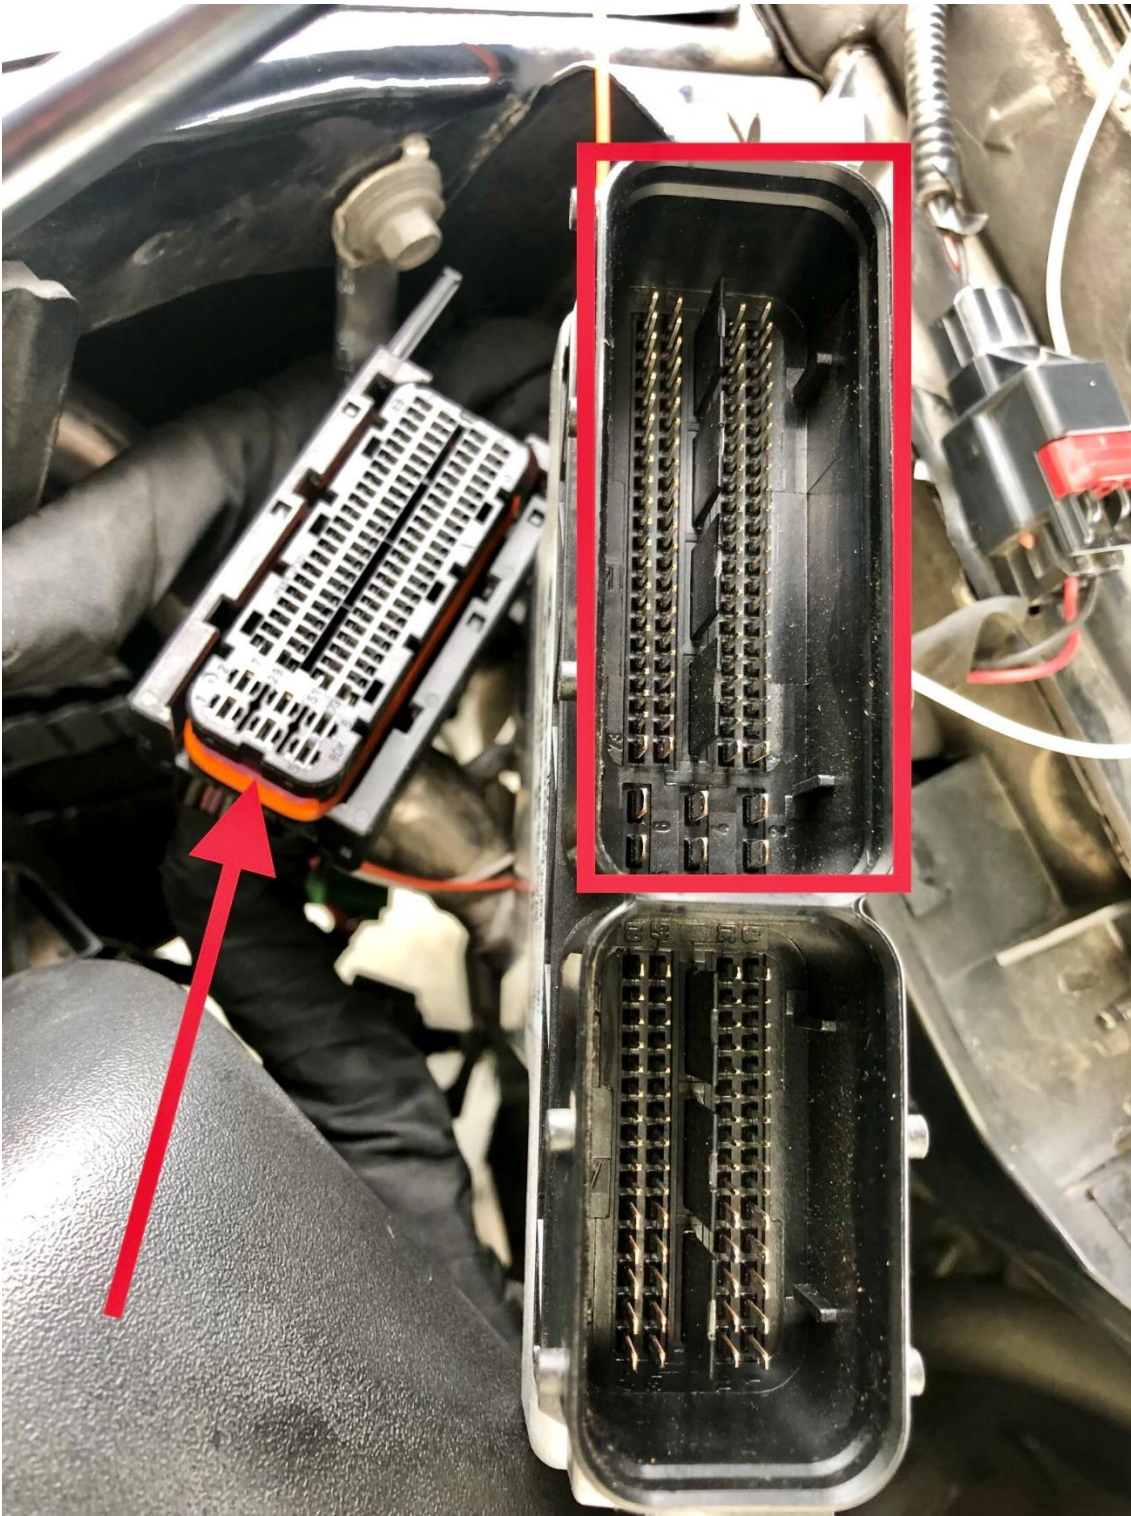

Step Two:

Pull the plastic cover off of the backside of the C1 Connector

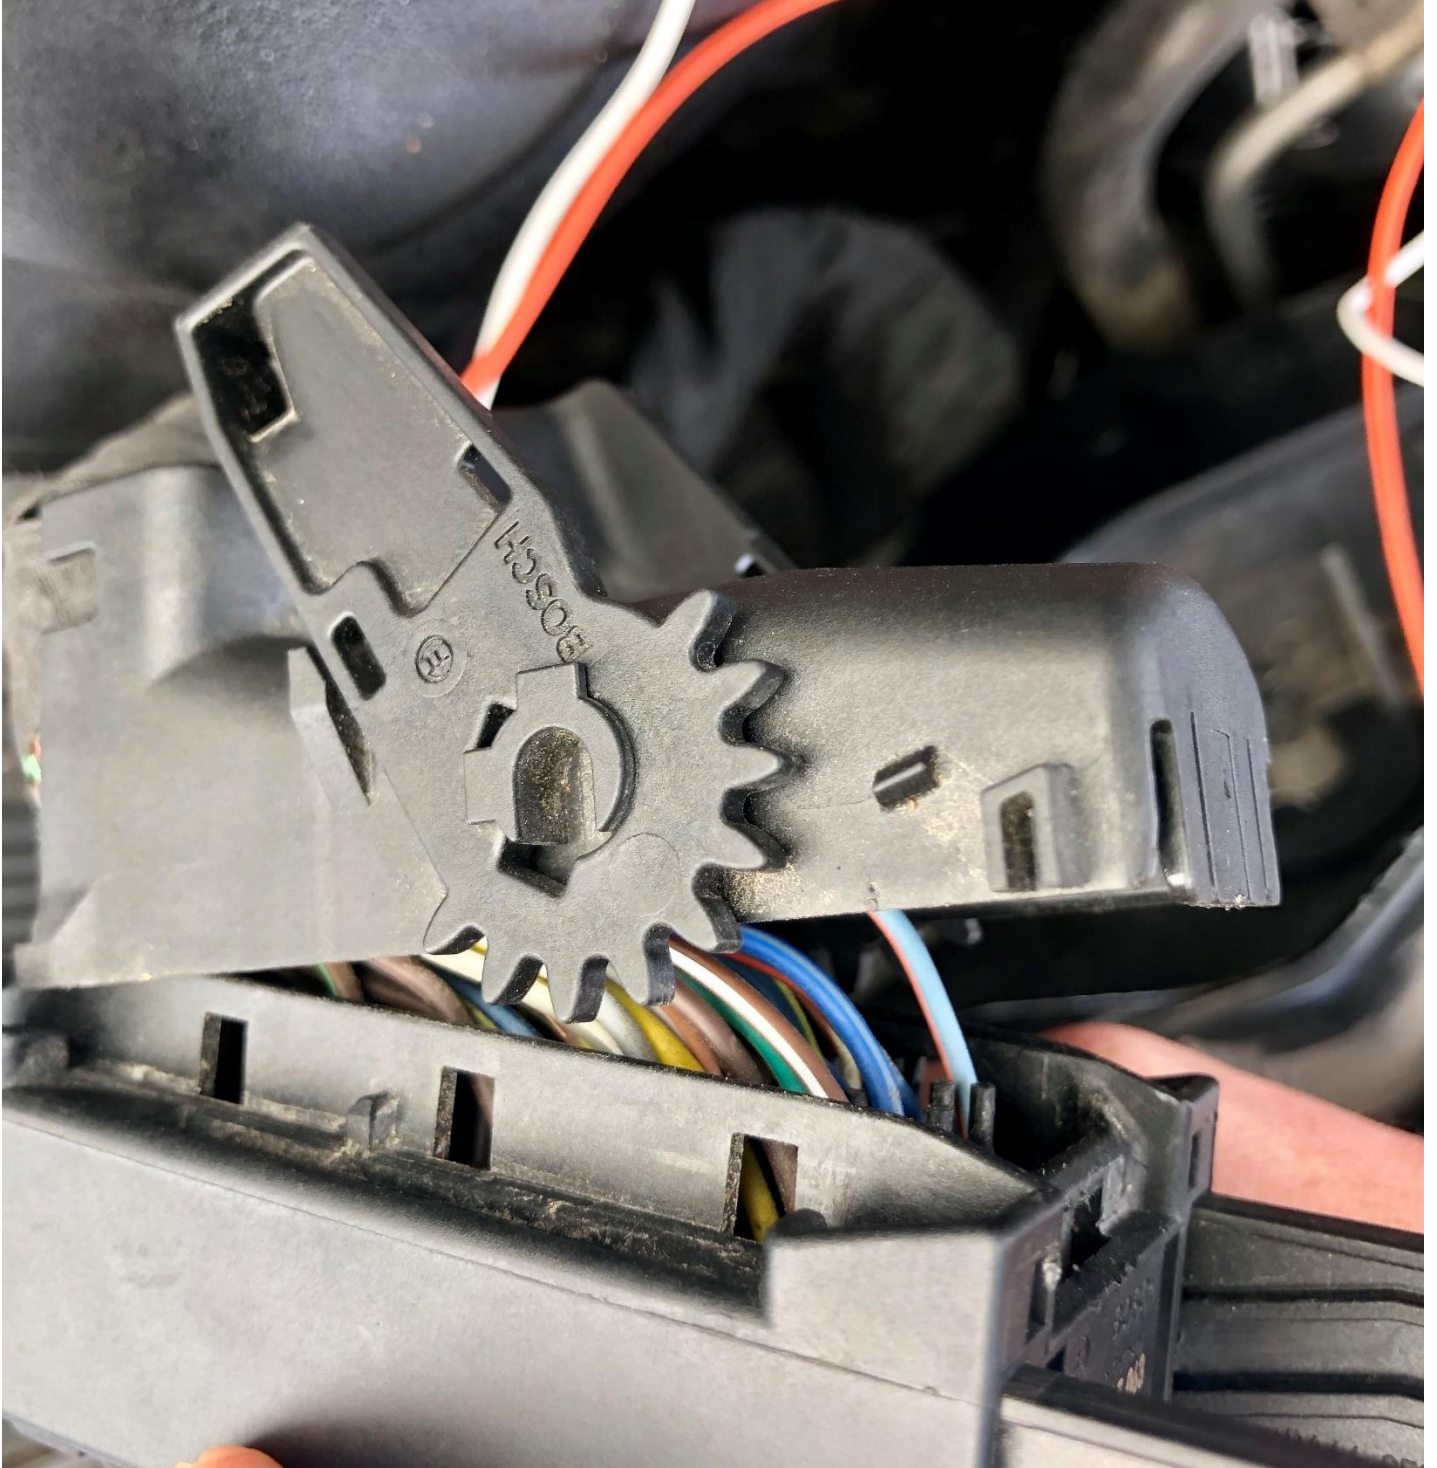

Step Three:

Use the Wire Taps to connect the signal and return wires

