

TITANIUM SERIES INSTALLATION MANUAL

ALL 1/2" FUEL PORTS

APPLICATION:

TS-F17-165G (165GPH @8-10PSI)





POWERSTROKE 6.7L STANDARD PICKUP TRUCK

*NOTE: CAB AND CHASSIS MAY REOUIRE MODIFICATIONS





Thank you for choosing FASS, from Diesel Performance Products, Inc.

FASS specializes in building extremely high-quality fuel products. We have earned an unsurpassed reputation for excellence in our industry by using only the highest-quality American-made components. In order to support our American workers and our American economy, more than 98+ percent of our products are manufactured completely in the United States.

Of course, that dedication to excellence comes at a price, but it is important to remember that price does not dictate quality-quality dictates price! We will never compromise by using cheaper, foreign-made components, like so many of our competitors do.

Customer satisfaction is our top priority and we strive always to provide outstanding customer service. Our Research and Development department, in conjunction with our Dealer Support Department, continually searches for ways to improve quality, expand our product line, and provide superb support. Our exclusive ViP Network ensures that customers receive the proper products and support at the local level. The extended four-year warranty is only available on products purchased from the network. There is no warranty on products not purchased outside the network.

IMPORTANT:

In order to qualify for the Four-year extended warranty, your product registration form and proof of purchase from an authorized dealer must be submitted to FASS Fuel Systems within 30 days of purchase. Failure to comply will void the warranty. We have the right to deny any warranty believed to be false, altered or purchased through an unauthorized or terminated dealer. A current list of authorized dealers can be found on our website, FASSRide.com.

The complete conditions of the Limitation of Warranty can be found in the back of this manual, and FASSRide.com.

The installation of this product indicates that the buyer has read and understands the Warranty agreement and accepts its terms and conditions. In the event that the buyer does not agree with the terms, the product —in new, unused condition—along with the dated receipt should be returned within thirty (30) days of the date of purchase for a full refund less shipping costs.

For more information, contact Technical Support: Diesel Performance Products, Inc. 16240 State Hwy O. Suite B Marthasville, MO 63357 636-433-5410





WARNING!

This product has NO WARRANTY unless:

1. It has been purchased from an Authorized or ViP FASS Dealer. If in doubt, check www.FASSRide.com. (If your purchase was made on Amazon.com, the warranty is void. Return the FASS product to the seller and get a refund).

2. It is registered within thirty (30) days of purchase.

Other conditions may apply. Please see full warranty information.

ATTENTION!

Before you begin installation Register for your Warranty ONLINE at

https://www.fassride.com/register-awarranty/

No online access, call our TECH Support at

1-866-769-3747



FOLLOW THESE STEPS TO ENSURE A SIMPLE, CORRECT INSTALLATION OF YOUR NEW TITANIUM FUEL SYSTEM

ATTENTION:

Be sure to identify the proper FASS System and fuel line configuration. For help, our product finder can be found at www.FASSride.com. Follow the instructions to see fuel line detail.

- Be sure the serial number on this installation manual matches that on the outside of the box
- 2 Pay close attention to ALL WARNINGS
- **3** Read all instructions before starting installation of this product.
- 4 Inventory the package components. Notify the place of purchase immediately of any parts missing or damaged.
- 5 The installation recommendations contained herein are guidelines. Use good judgment and take into consideration your vehicles' accessories.
- 6 For best results in accuracy and efficiency (due to training, communication, and our relationship with our dealer network), we recommend a VIP FASS dealer for the installation. They are prepared to install the FASS fuel pumps with the most efficiency. If a situation or problem arises during the installation, the dealer is prepared to handle it. Diesel Performance Products, Inc. is not responsible for any installation mistakes.
- 7 If you have any questions or concerns that cannot be addressed with your dealer, email or call FASS

If any installation procedure is uncertain, contact FASS technical support.

Call customer service at 636-433-5410,

or send us an e-mail: techsupport@FASSride.com

with the following information:

Your name, address and daytime phone number Model (TS-F17-1656)

Serial Number

Last 6 digits of vehicles' VIN

Date of purchase
Nature of Your Concern
Serial number





INSTALLATION MANUAL

TS-F17-165G

Recommended Application

T S FT-165G: Powerstroke (6.7L) 2011-2016 with stock - 600 horsepower

- 1. Read all instructions before starting installation of this product!
- 2. Installing the improper FASS Pump can cause severe engine damage.
- 3. Secure vehicle from ROLLING!
- 4. Cab and Chassis may require modifications
- 5. Consult vehicle's manufacturers' instructions concerning the electrical system before at-tempting any electrical connections.
- 6. Be sure that the serial # on this installation manual matches that of the outside of the box.
- 7. Flush and clean all brass fittings and fuel line from debris.
- 8. Keep debris from entering the internals of the system during installation. Getting debris in the water separator nipple can lock up the motor. If the motor does lock up from debris call FASS for technical assistance.



- 9. Wear safety glasses when operating power tools such as drills and grinders or when using a punch or chisel.
- 10. Properly secure lines to prevent chaffing.



TITANIUM Signature SERIES 165 GPH

www.fassride.com

(866) 769.3747







PUMP GUIDE:

- 1. "E" To Engine
- 2. "R" Return to Tank
- 3. "H" Coolant Heater Ports
- 4. Serial Number
- 5. "T" Fuel Inlet
- 6. Electric Heater Ports
- 7. "G" Gauge Port

INSTALLATION GUIDE:

- Step 1. Install Electrical Harness
- Step 2. Prep the FASS
- Step 3. Mount the FASS
- Step 4. Fuel Line Supply
- Step 5. Review Installation





TITANIUM SIGNATURE SERIES 95 GPH or 165 GPH

8-10 PSI (Approximately)Note: Going over 30 PSI WILL void warranty.

NOTE: WARRANTY MAY BE VOID IF SILICONE BAND IS REMOVED FROM MOTOR!!

The silicone band is in place to retain motor wires, preventing damage to the electric motor.





CONTENTS

(866) 769.3747

NOTE: Owner's Manual available for download on our website,

www.FASSride.com







OR-017



DIELECTRIC GREASE

NOTE: THESE SPARE BASE O-RINGS ARE INCLUDED WITH THE KIT IN THE EVENT OF A PINCHED O-RING DURING ASSEMBLY




PFB-2001C



MP-9075



RS-2002

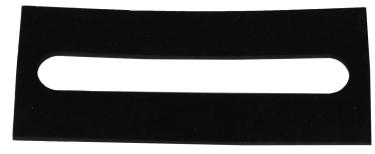

RS-2001



WH-1006-3

FL-1002 x14'



PBR-2001





MOUNTING PACKAGE CONTENTS





THREE (3) PL-1005



BHF-1002



FOUR (4) HC-1001





1/2" PLUG



PL-1004



10-301





10-300



FOUR (4) LOCKING **NUT3/8**""



FOUR (4) 3/8" WASHERS



THREE (3) WA-1001D



CABLE TIES



OR-223



THREE (3) HEX BOLT 1/4"-20x1 3/4""



FOUR (4) Hex Bolt 3/8" -16x11/2"



LW-1001





Hex Bolt M12-1.75 x **60mm**



DT-1002





MOUNTING PACKAGE CONTENTS

(866) 769.3747



ST-1006P

RS-2001C



Diesel Fue System STEP 1: INSTALL ELECTRICAL HARNESS


The installation of the electrical harness is done first, allowing power to be applied to the pump for lubrication purposes later in the installation.

NOTE: USE SUPPLIED DIELECTRIC GREASE SPARINGLY ON ALL ELECTRICAL CONNECTIONS! BE SURE TO GREASE RELAY PIGTAIL!









iesel Fuel Systems STEP 1: INSTALL ELECTRICAL HARNESS

The installation of the electrical harness should be completed first. This will allow power to be applied to the pump during installation.

Using wire stripping tool remove excess insulation off the 46044 and the WH-1006-3.



B. Place wire from 46044 and WH-1006-3 into butt connector. Using crimping tool connect 46044 and WH-1006-3 with butt connector. Install 46260 to 46044 bottom slot (opening that is near the spade).







C. Crimp the ring terminals to the red and green wires of the WH-1006-3 Wire Harness. Attach red wire to the positive terminal of the battery and the green terminal to the negative terminal. The use of a corrosion preventative on electrical connections is recommended.






STEP 1: INSTALL ELECTRICAL HARNESS

D. Secure relay and fuse in an upright position, as shown, to prevent moisture from entering. Di-electric grease may be applied to prevent corrosion.



E. Route the extension to the engine bay fuse panel. Remove a fuse (maximum of 10A) that is "hot" when the key is on. Example: #54 or #55. **Use a test probe to locate the "hot side" of the circuit in the fuse block.** Install the fuse tap into the open location. Install the pulled fuse into the open space on the fuse tap. Disconnect the vehicles' battery and continue installation.

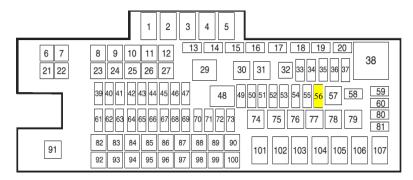



F. Route WH-1006 wire harness along frame rail to mounting location of pump. Completion of this step will be addressed in the mounting step.



STEP 2: PREPARE SUCTION & RETURN LINES

Some of the photo's are of a different application, procedures are the same..

NOTE: Before installing fittings make sure to inspect for burs or flare imperfections. When cutting fuel line make sure to blow out line to keep debris from moving forward.

Helpful Hint: Directions for removing factory lines.

- 1. Pull up on the locking tab (blue),
- 2. Push in slightly on the connector,
- 3. Press down on the release tab,
- 4. Pull the connector straight off



A. Before tank is removed, identify ALL areas of clearance between the tank and the truck's bed for the best location to install the BHF assem-bly. With proper clearance, you want to install it as close to the Fuel sending unit as possible.



B. Remove the filler neck and overflow tubes from the truck by loosening the clamps at both ends.



C. Disconnect factory suction and return lines (refer to diagram at the beginning of step 2).





STEP 2: PREPARE SUCTION & RETURN LINES

D. With the fuel tank empty of fuel, unbolt the tank straps and remove it from the vehicle.




E. Clean the fuel module area then remove the lock ring on the top of the fuel tank. **This is spring** loaded, so, holding it down while removing the ring will prevent the sending unit from popping up and possi-bly causing damage.



F. Note the location of the tab and arrow. Re-install the sending unit in the same location to prevent the fuel level arm from binding.



G. Once the lock ring is removed, carefully remove pick up module from fuel tank without bending fuel level arm.

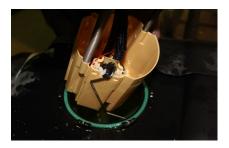



STEP 2:

PREPARE SUCTION & RETURN LINES

H. Push the ST-1006P onto the barb portion of the BHF-1002. Slide HC-1001 onto the ST-1006P down to barb portion of BHF-1002, and tighten accordingly. Insert O-ring OR-223 into groove on the bottom side of BHF-1002. Install 1/2" plug into the "R" port of BHF-1002, install PL-1004 into the "S" port, torque both fit-tings to 20 ft./lbs. **DO NOT USE THREAD TAPE ON PL-1004, FITTING IS EQUIPPED WITH THREAD SEALANT**



I. Place the BHF-1002 bulkhead fitting on the tank with enough clearance for the fuel line and fittings. Keep in mind the bulkhead must also clear the bottom of the bed support structure.





Note: Fuel tank left in vehicle for visual representation.

J. Once location has been established, double check! Mark location and drill 13/8" hole with hole saw. Hold a cup or catch can inside the tank while drilling to catch any debris. Place a rag over the open-ing to prevent tank contamination. Double check for debris around the ring and inside tank.



K. De-burr hole and check for fit.









STEP 2: PREPARE SUCTION & RETURN LINES

L. Place fuel tank module on a suitable work area, utilizing provided template mark mounting holes for TC-1001. Drill pilot holes for the draw tube assembly with a 1/16" bit. Use a 1/4" bit for the final hole.



M. Install TC-1001 onto fuel tank module, be sure to apply red Loctite onto mounting screws and set screws. Install DT-1002 into TC-1001 using supplied set screws, and adjust 1"- 1 1/2" from bottom of tank module.






N. N. Install BHF-1002 into fuel tank hole previously drilled, install LW-1001/BHN-1001 onto BHF-1002 and tighten accordingly. Carefully install tank module into fuel tank while guiding float arm. Attach ST -1006P onto DT-1002 using hose clamp HC-1001. Reinstall tank module locking ring. Install one end of FASS hose onto BHF-1002, and the other end onto the factory tank module supply using fitting A624C56-55-05 and HC-1001. Reinstall fuel tank by reversing steps taken for removal. Be sure FASS lines are free from obstructions and will not be pinched by body/frame mounting points.













NOTE:

ATTENTION: While installing fittings into Titanium pump DO NOT Apply side pressure to draw tube of pump p



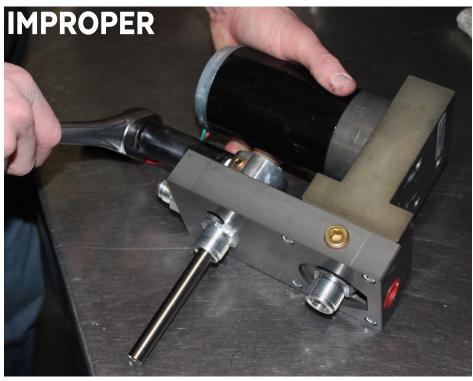





STEP 3: MOUNT FUEL SYSTEM


NOTE: Before installing fittings make sure to inspect for burs or flare imperfections. When cutting fuel line make sure to blow out line to keep debris from moving forward..

A. Install 10-300 into the "E" port and 10-301 into the "T" port of the FASS, torque to 20 ft./lbs.


FITTINGS COME EQUIPPED WITH THREAD SEALANT, DO NOT USE THREAD TAPE





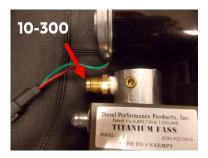

B. For fitting purposes. Secure PBR-2001 to pump assembly lightly with (3) 1/4"-20x1 3/4 bolts and (3) WA-1001D. Assembly will be used in future steps for correct fitting of brackets. (Note: Bracket may-be flipped to accommodate your application.)

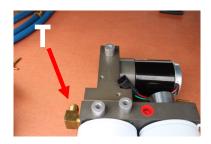



C. Assemble PFB-2002C and RS-2001C RS will make contact with bed channel when assembled correctly. Insert the PFB-2002C assembly in to bed channel align the nut with the opening on the channel.









STEP 3: MOUNT FUEL SYSTEM

D. Secure PFB-2002 and RS-2001 with (1) hex bolt $1/2" - 20 \times 11/2"$ and (1) 1/2" washer to PFB-2002C





E. Plug female plug of the WH-1006 harness into the FASS pump. Reconnect the vehicles battery. Turn key on. With pump operating, liberally spray WD-40 (or equivalent) into Water Separator nipple. This process helps lubricate the gear for easier initial priming.



F. Position the PBR-2001 to the PFB-2002 pump assembly at the mounting location and check for fit. Once location is established mark location for mounting in next step.









STEP 3: MOUNT FUEL SYSTEM

G. Assemble the FASS pump bracket PBR-2001 using the RS-2002 spacer between PFB-2002 and PBR 2001 bracket with 4-3/8 bolts, nuts, and washers. **Note: Torque bolts not flange nut.**







H. Once secure use 3-1 3/4 bolts and 3-WA-1001D spacers to mount the pump to the bracket.







STEP 3:

MOUNT FUEL SYSTEM

NOTE: If fuel pressure gauge is pulsating after FASS installation, use snubber valve (Cat Part # 7S-3795)

I. Apply motor oil to gasket located on filters. Attach to system and hand tighten.



Extreme Water Separator - Install XWS-3002 on side of pump with draw tube in the middle of the filter nipple.







Particulate Filter -Install PF-3001 on filter nipple without the draw tube. Make sure to insert O-Ring provided on nipple.


Note: O-Ring must be put back on suction side of pump. Failure to do so can result in priming issues, cavitation or pressure losses.



STEP 4: INSTALL FUEL LINE


Caution: DO NOT use sealant on AN fittings

A. Route suction line from the factory suction port and fitting A624C56-55-05 to port 'T' on the FASS system. Cut FL-1002 to needed length. Insert PL-1005 using oil. Connect to 10-301 in port 'T'. Torque to 18 ft./lbs.

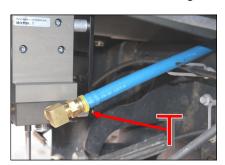

NOTE: Hose clamps are not recommended for push lock fittings. They will hold up to 300psi! Use oil on fittings and inside fuel line when installing Push-Lok fittings

B. Route fuel line from the 'S' port of the suction tube assy. to the 'R' port on the FASS system with a gentle bend. Cut and insert PL-1005 using oil. Attach fitting to the 'R' port. Do not use any sealant. Torque to 18 ft./lbs.

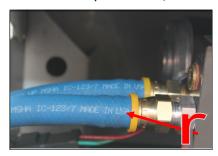

C. Insert PL-1005 into remaining fuel line using oil. Attach fuel line to the 'E' port of the FASS system. Torque to 18 ft./lbs. Route this line to the engine side of the factory lift pump. Do not cut at this time.



D. Disconnect factory fuel supply line on rear of factory Ford lift pump, and connect FASS hose using fitting A624C56-55-05 and HC-1001.



Note: Secure all fuel lines with cable ties. Cable ties are an economical way to prevent the possibility of problems occurring! The factory suction line can be capped off or removed from the truck. The openings on the filter and tank will need to be capped off to keep debris from getting into lines or canister.



STEP 5: REVIEW INSTALLATION

- 1. Blow out any open lines/cover any open ports
- 2. Bolts and fasteners properly tightened?
- 3. Electrical harness and fuel lines secured and properly tightened? Reconnect the battery.
- 4. Has the system been primed?
 - a. Turn key to the ignition position, turning on the FASS pump for 15 sec..
 - b. Crank engine and allow to run for at least 1 minute.
- 5. Check for leaks.
- 6. Start the engine
- 7. Recheck all fluid and filter connections for leaks
- 8. This pump comes with a 1 Year Manufacturer's Warranty based on the date it has been manufactured. To receive your extended Lifetime Warranty, you have 30 days from date of purchase to send the completed warranty information

To assist with priming your FASS pump crack the XWS-3002. Put power to the FASS pump to activate the pump. When the tone of the pump changes you can tighten up the fuel filter. If you need a video of the priming process go to www.FASSride.com.



Note: The Red Plastic Plugs located in the "H" ports can stay in place fuel will not flow through these ports. Coolant can be plumbed into these ports to heat the fuel in the Winter months.



(866) 769.3747



LIMITATION OF LIFETIME WARRANTY

Disclaimer: To help insure you receive the proper system and customer support at the local level, FASS has a VIP and Authorized Dealer network representing FASS products. This is one reason you must purchase through a dealer to comply with our warranty policies. If you do not, there is no warranty! We recommend you go to www.FASSride.com, click "Find a Dealer", put in their ZIP code, select the type of dealer, and see if the company you purchased from is listed. If they are not, put their phone number in the field below the ZIP code field to see if they are listed. Below these two fields is a list of "Terminated/Unauthorized" dealers. You may want to review this list. If the company is not listed or is on the "Terminated/Unauthorized" list, we suggest you return the product immediately to that dealer and call FASS. We'll recommend you to the nearest dealer.

Diesel Performance Products, Inc. (hereafter "SELLER") gives Limited Warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of SELLER'S product sold herewith. The SELLER shall be in no way responsible for the product's open use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

When MANUFACTURER receives the "ORIGINAL" PRODUCT REGISTRATION form with a copy of the "BILL OF SALE/SALES RECEIPT" within 30 days of the sale, then the following applies! The Warranty will then and only then be validated to that of which typically accompanies your unit for your specific application from the date of sale or for recommended service life and limited solely to the original purchaser and/or vehicle and parts contained within the product's kit. This warranty does not cover normal wear on consumable items such as but not limited to filters, fuel line, wire harness & etc. The warranty does not cover seized gears due to lack of filtration. Warranty is voided if used with other than diesel fuel. Returned items will arrive prepaid to the place of purchase. Diesel Performance Products, Inc. will repair, without cost, any product found to be defective during the warranty period; parts only, or at its option, will replace such products in exchange for the product. Repair or replacements are warranted for the remainder of the original warranty period. All Warranty claims are subject to approval by Diesel Performance Products, Inc.

A Return Material Authorization (RMA) number must be obtained before any product is to be returned to Diesel Performance Products, Inc. for warranty consideration, repair or product return. Requests for product returns must be offset by an equal value order. Return parts must be completed and in resalable condition. No returns after 30 days.

Your Name, Address, and Phone Number's Model and Serial Number (Not Motor Number) Example: Model HD Series, Serial: 00125966 VIN Number of Vehicle Date of Purchase Nature of Problem

RMA and Product Serial Number must be on all paperwork and correspondence. Failure to obtain the required information or paperwork will result in \$25.00/item penalty and delay or denial of any warranty claim.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

Under no circumstances shall the SELLER and/or MANUFACTURER be liable for any damage or expenses insured by reason of the use or sale of any such equipment. This warranty does not apply to products which Diesel Performance Products, Inc. has determined to have been misused or abused, improperly maintained by the user, or where the malfunction or defect can be attributed to the use of non-genuine Diesel Performance Products, Inc. parts.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND LESS SHIPPING.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.