2753 Michigan Road • Madison, Indiana 47250 • 855-743-3427

INSTALLATION INSTRUCTIONS

2 Seat Door Kit: for CFMOTO UFORCE 1000XL

- Make sure door handles are unlocked before installing.
- Do not discard packaging until product has been successfully installed.
- Discard any remaining hardware.
- This item is not returnable if the protective film has been removed.
- Test fit to the cage to confirm fitment before removing film.
- Driver side installation shown in illustrations.

Door Cleaning:

- Do not use Rain-X®, Plexus® or any other protector, wax, or polish.
- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
- Never use abrasive cleaners, abrasive pads, or gritty cloths.
- Never use razor blades, scrapers, squeegees, brushes, etc.

1. Thoroughly rinse Doors to float off dirt and mud.
2. Using a soft cloth, or microfiber cloth, clean Doors with warm water and a gentle detergent. Baby shampoo, rubbing alcohol, or hand washing soap can also be used.
3. To prevent water spots, use a chamois to blot Doors dry.

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?

sales@superatv.com

www.superatv.com

1-855-743-3427


8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You For Choosing SUPERATV.COM®


© 2025 SuperATV.com®. All Rights Reserved.

Kit Contents

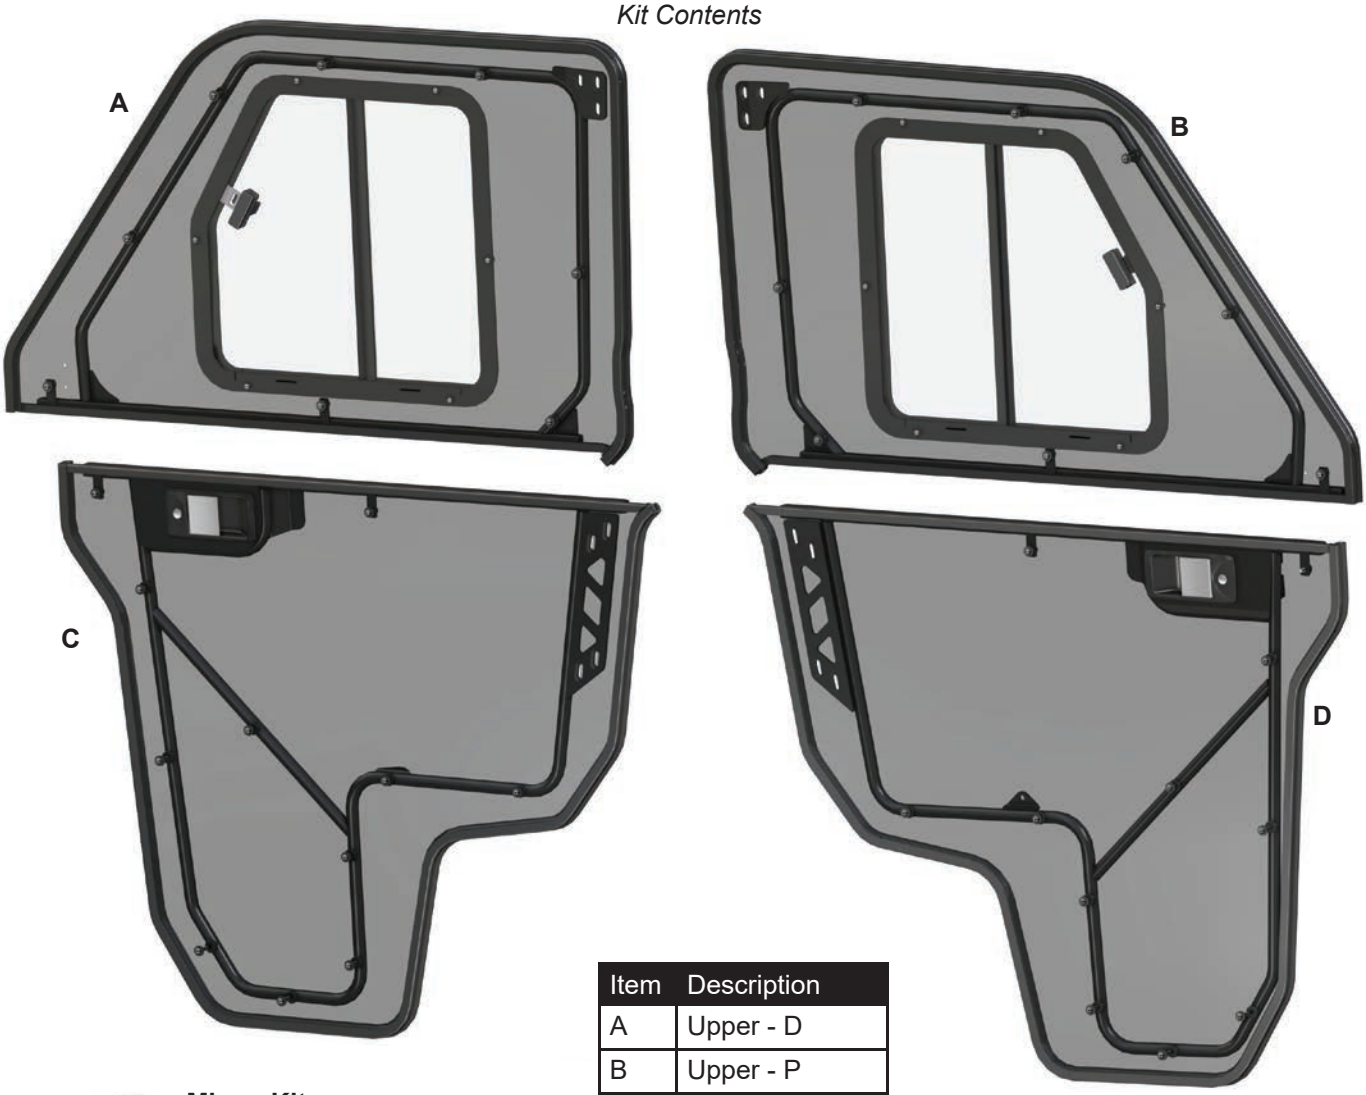

Item	Description
A	Upper - D
B	Upper - P
C	Lower - D
D	Lower - P

Mirror Kit

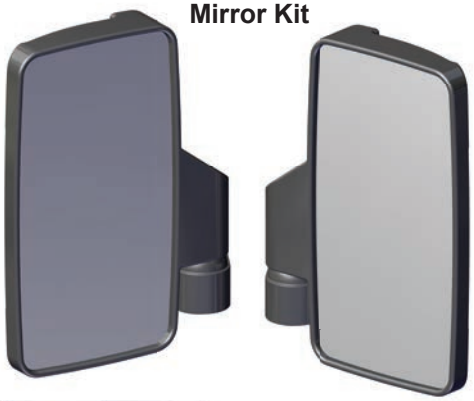




remove Blocks from Mirrors (will not be used)



2x - Clamp

Foam




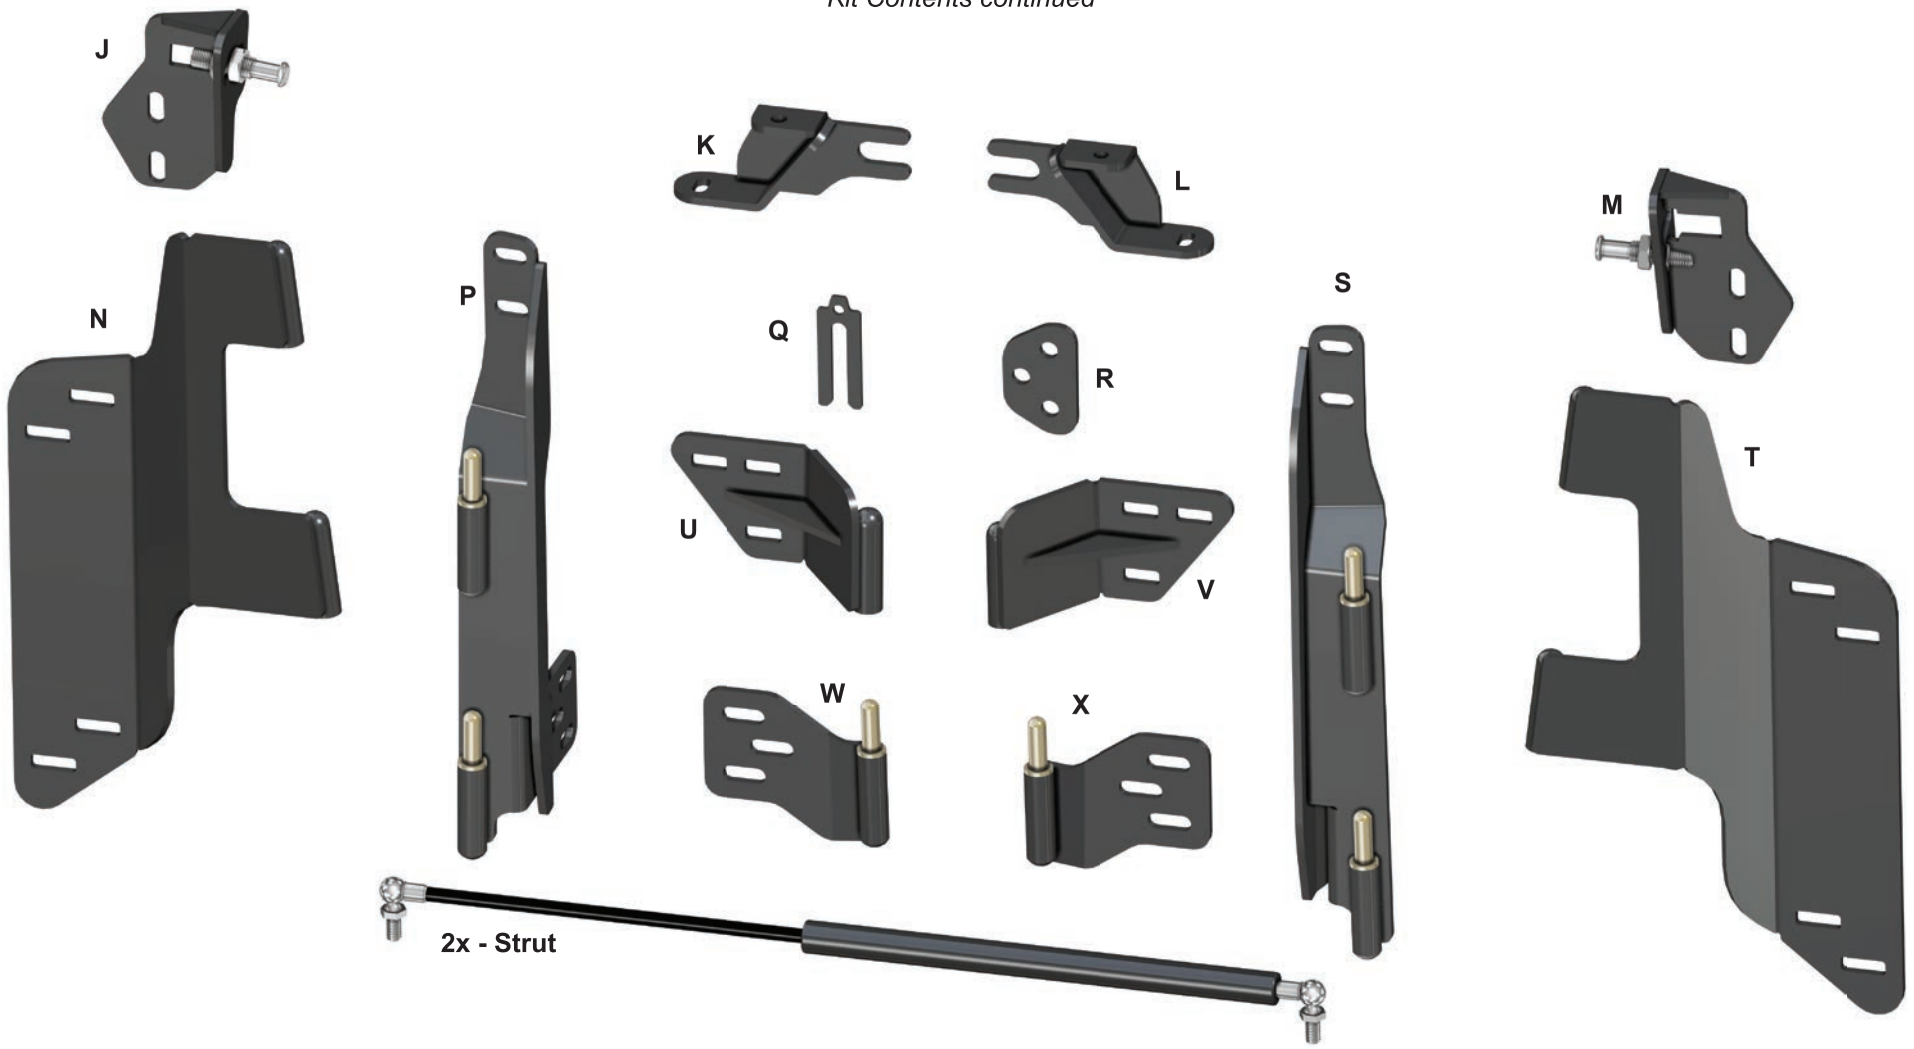


Item	Description
J	Front Striker Bolt - D
K	Strut Bracket - D x 2
L	Strut Bracket - P x 2
M	Front Striker Bolt - P
N	Lower Hinge Bracket - D
P	Lower Pin Bracket - D
Q	Lower Hinge Shim **A** x 4

Item	Description
R	Lower Hinge Shim **B** x 2
S	Lower Pin Bracket - P
T	Lower Hinge Bracket - P
U	Upper Hinge Bracket - D
V	Upper Hinge Bracket - P
W	Upper Pin Bracket - D
X	Upper Pin Bracket - P

Remove components / hardware shown; do not discard.

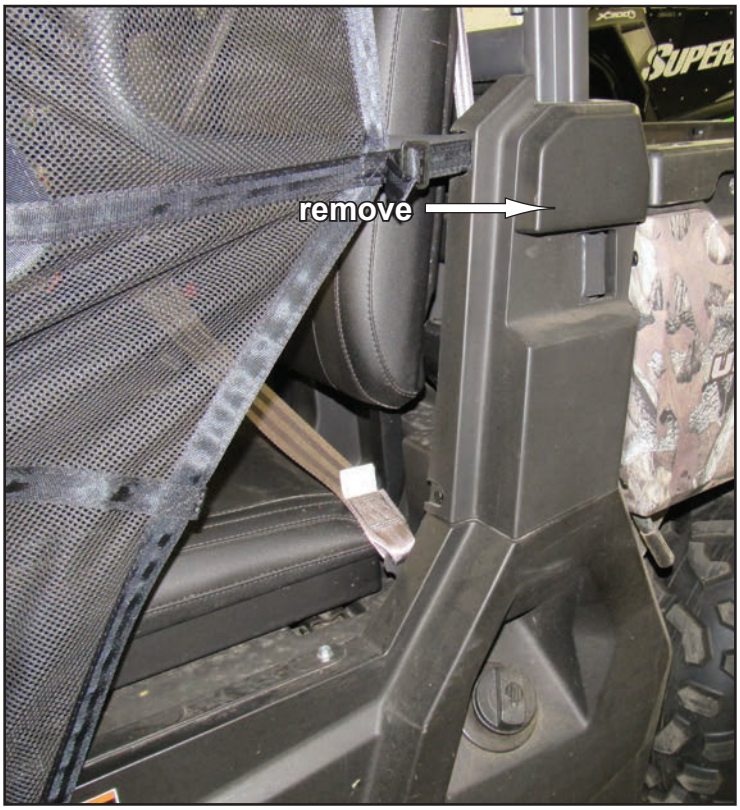

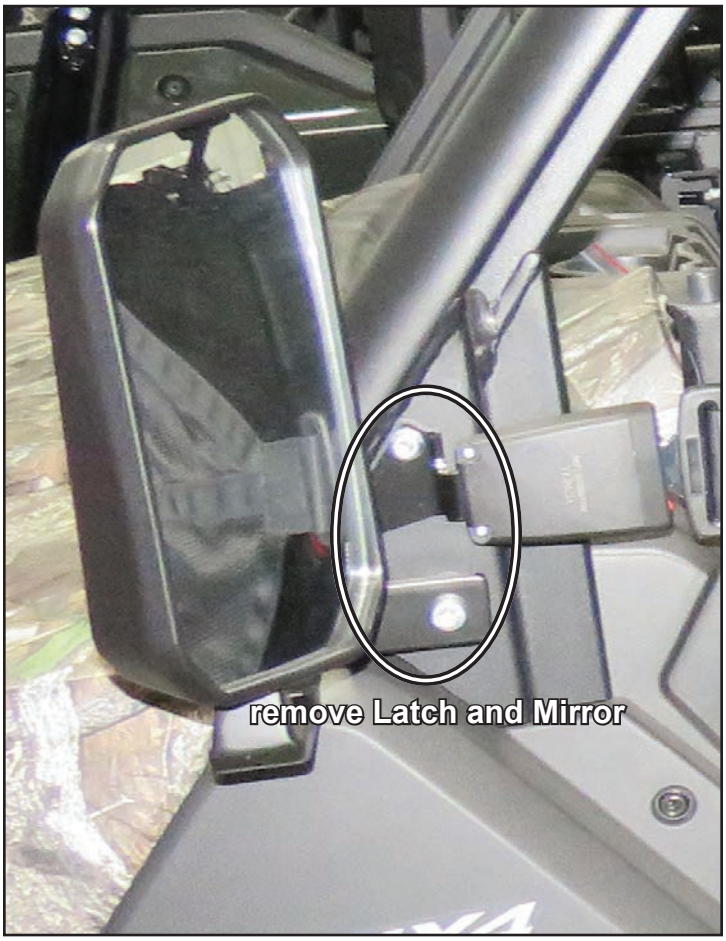




Remove components / hardware shown; do not discard.



Raise Bed and remove components / hardware shown; do not discard.

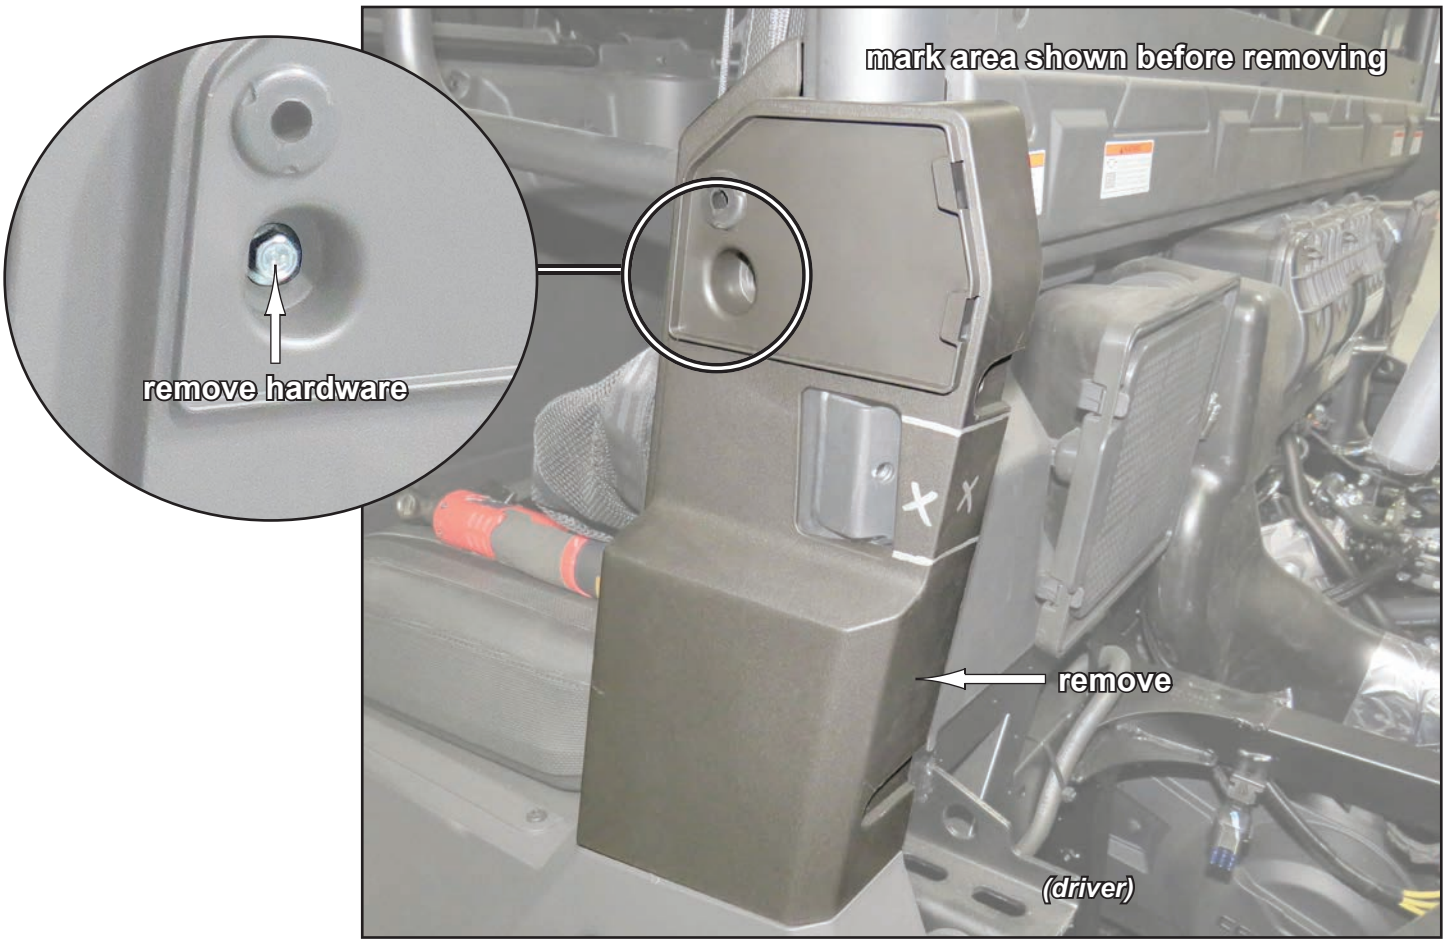



Follow markings and cut out material.


Locate stock markings and drill through plastic.






hardware should be snug but not completely tight

- Install Front Striker Bolt - D (J) with hardware shown.

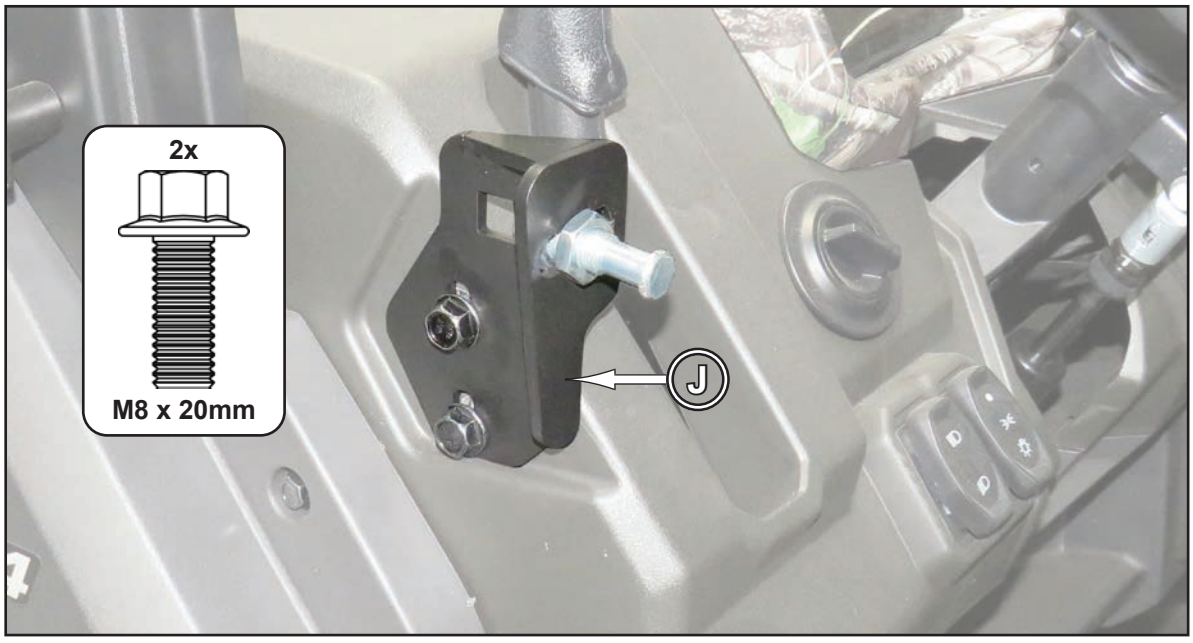

hardware should be snug but not completely tight


- Install Upper Pin Bracket - D (W) with hardware shown.
- Install Clamp to Frame in general location shown.

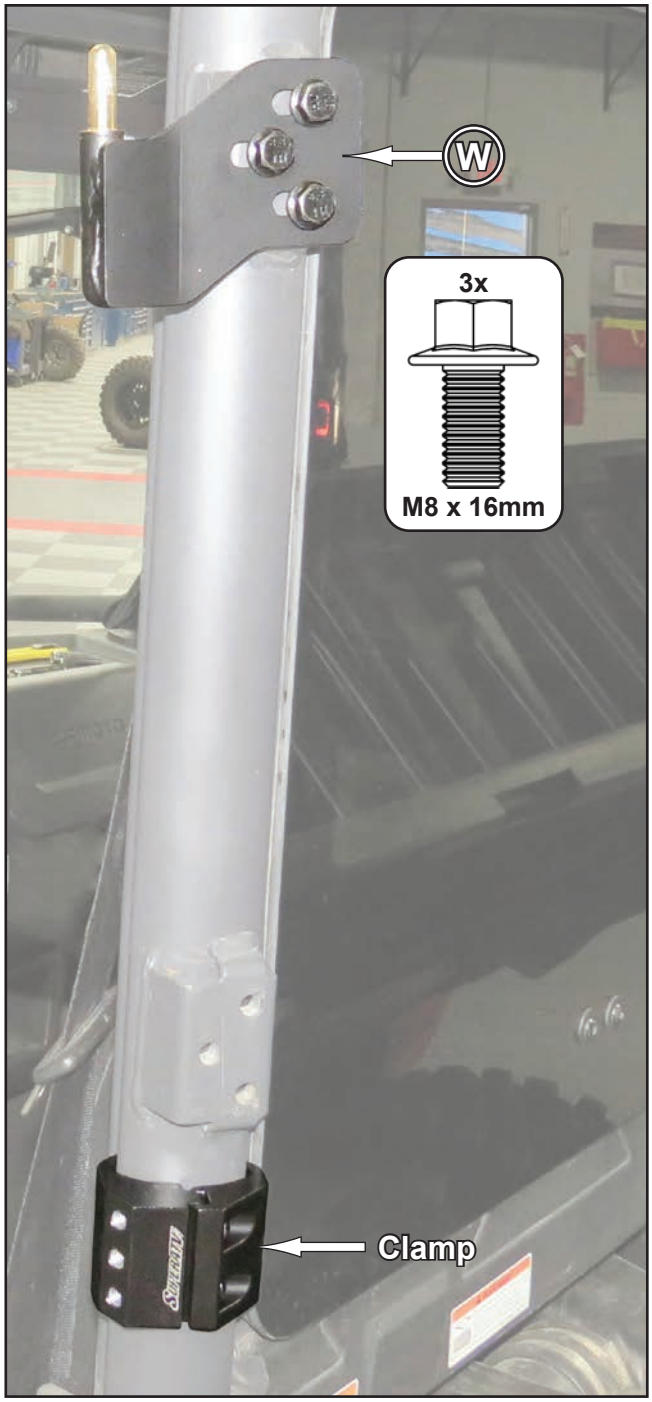

hardware should be snug but not completely tight


- Reinstall previously removed plastic shown on page 6.
- Install Lower Pin Bracket - D (P) to machine and Clamp with hardware shown.



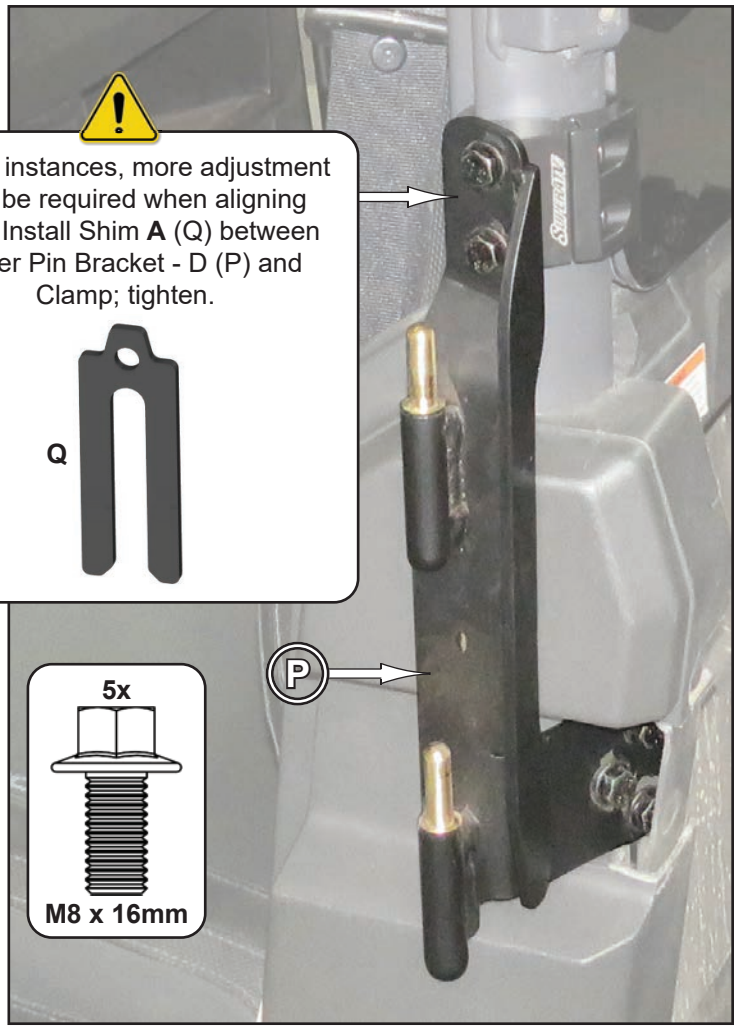

hardware should be snug but not completely tight

- Install Lower Hinge Bracket - D (N) to Lower - D (C) with hardware shown.

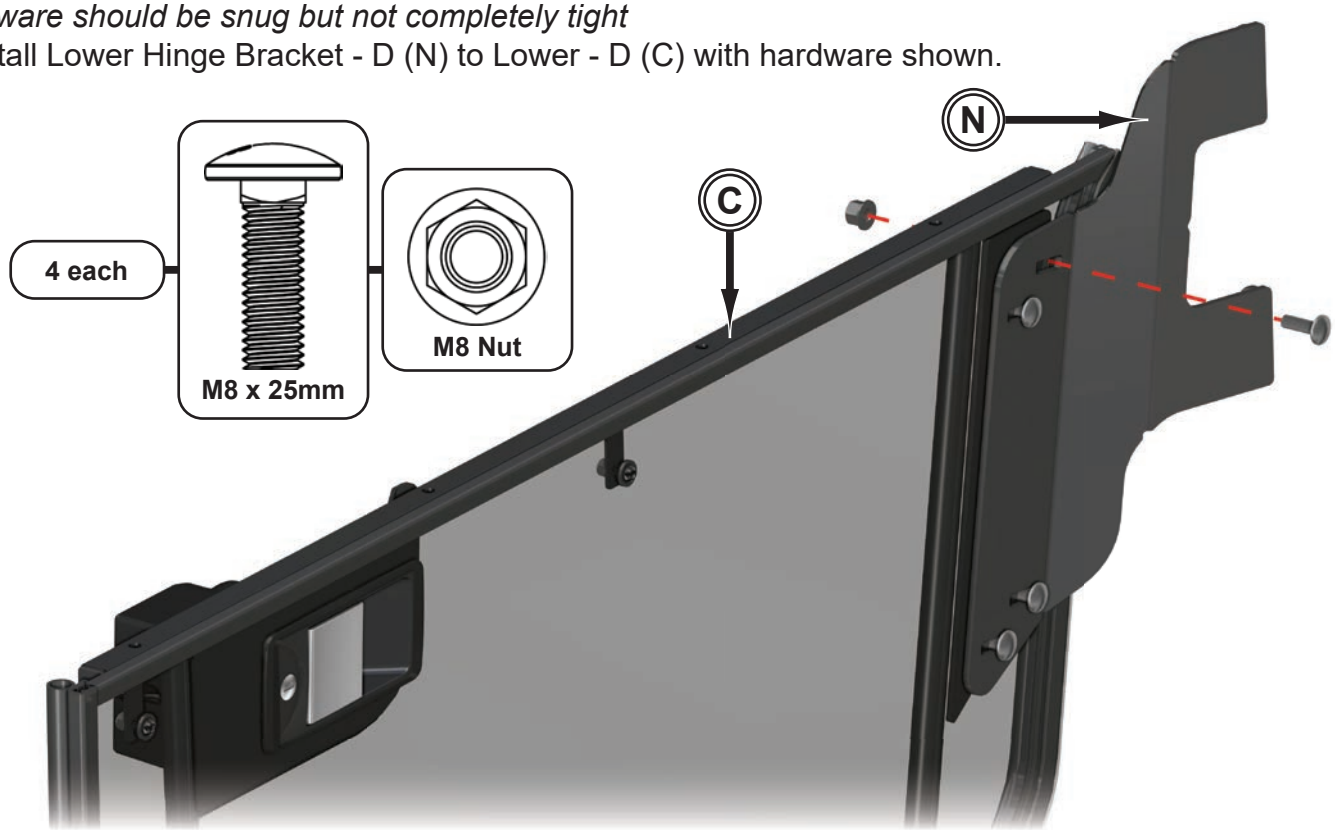


- Install assembly onto Lower Pin Bracket - D (P).



hardware should be snug but not completely tight

- Install Upper Hinge Bracket - D (U) to Upper - D (A) with hardware shown.

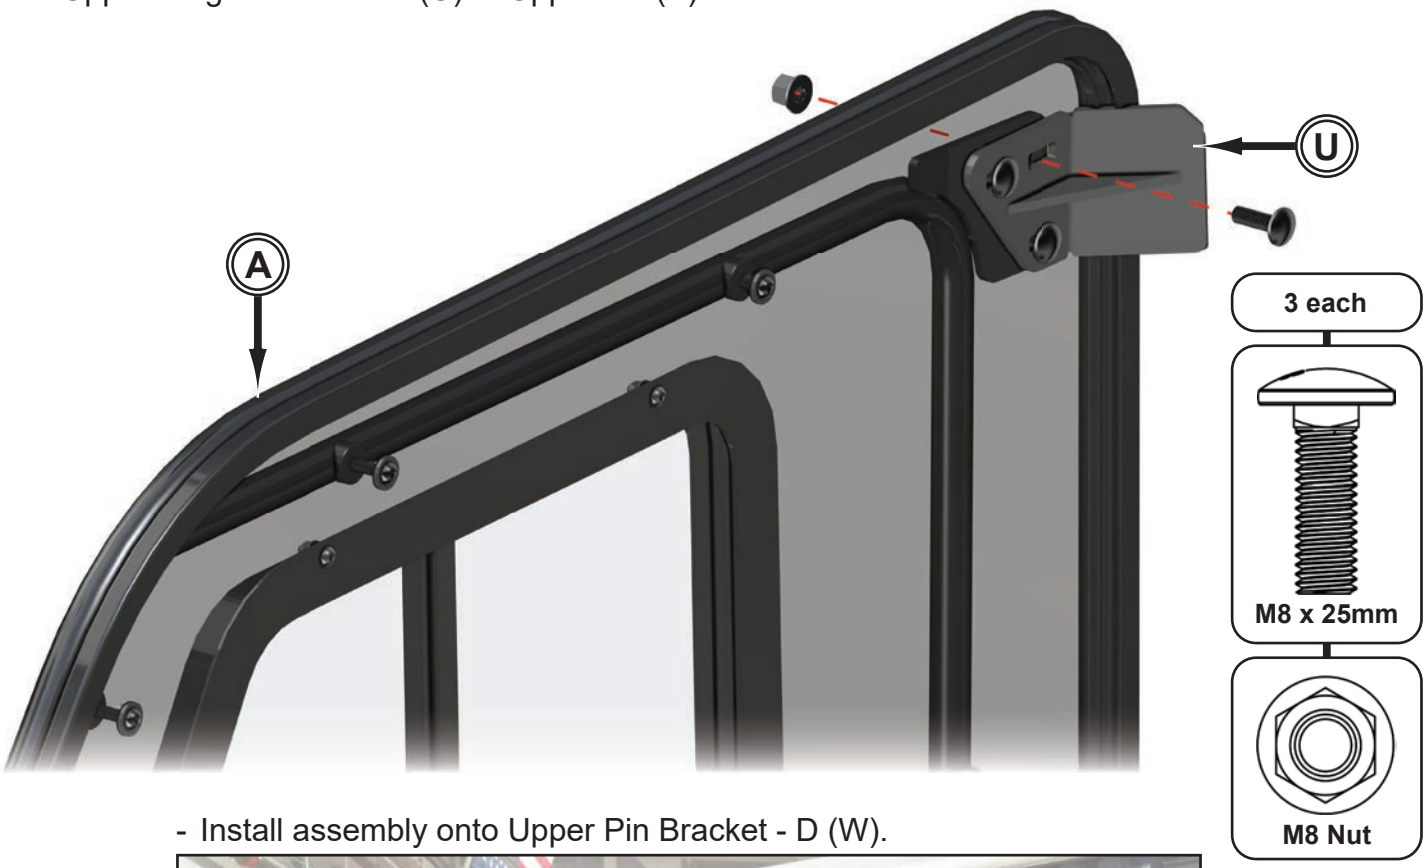

- Install assembly onto Upper Pin Bracket - D (W).



- Join Lower - D (C) to Upper - D (A) with hardware shown; tighten.



- Cut and install Foam to location shown.




- Close Door and engage Latch.




- Align Door to high-lighted area of machine and tighen all hardware completely.




- Remove and loosen hardware shown.

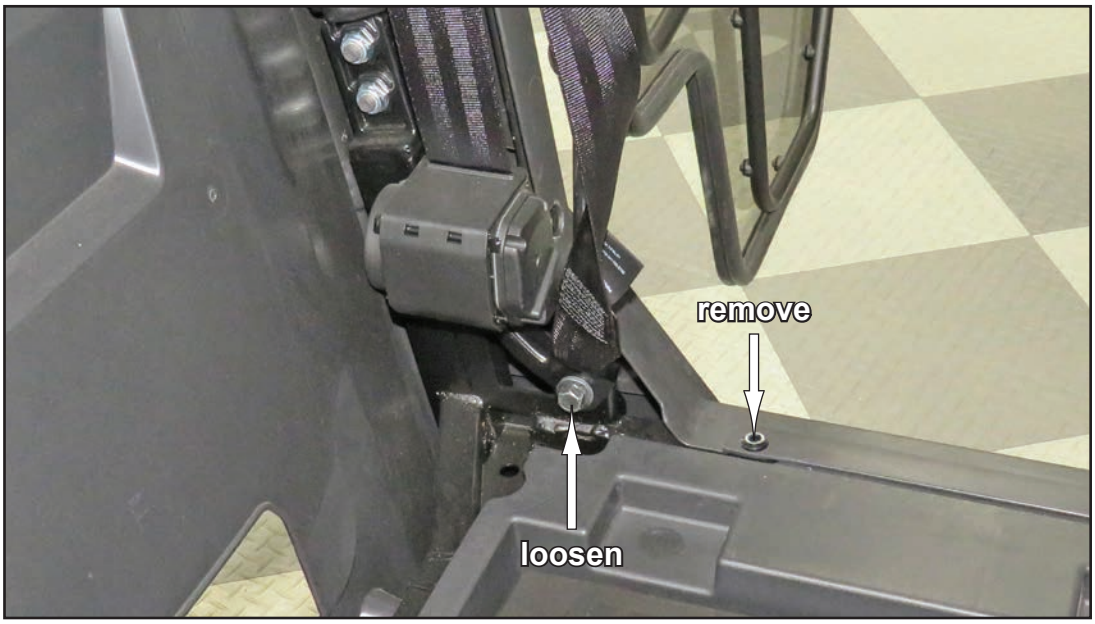


- Remove Front Seat.
- Install Strut Bracket - D (K) with hardware shown; tighten.

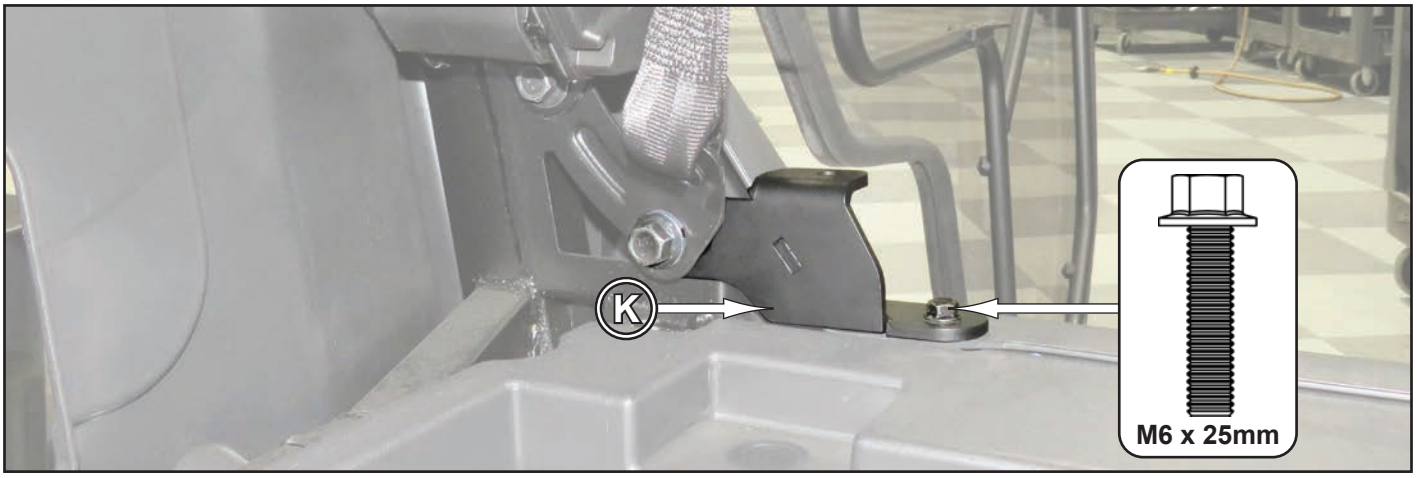

- Install Strut to Lower - D (C) and Strut Bracket - D (K) with hardware shown; tighten.
- Reinstall Front Seat.

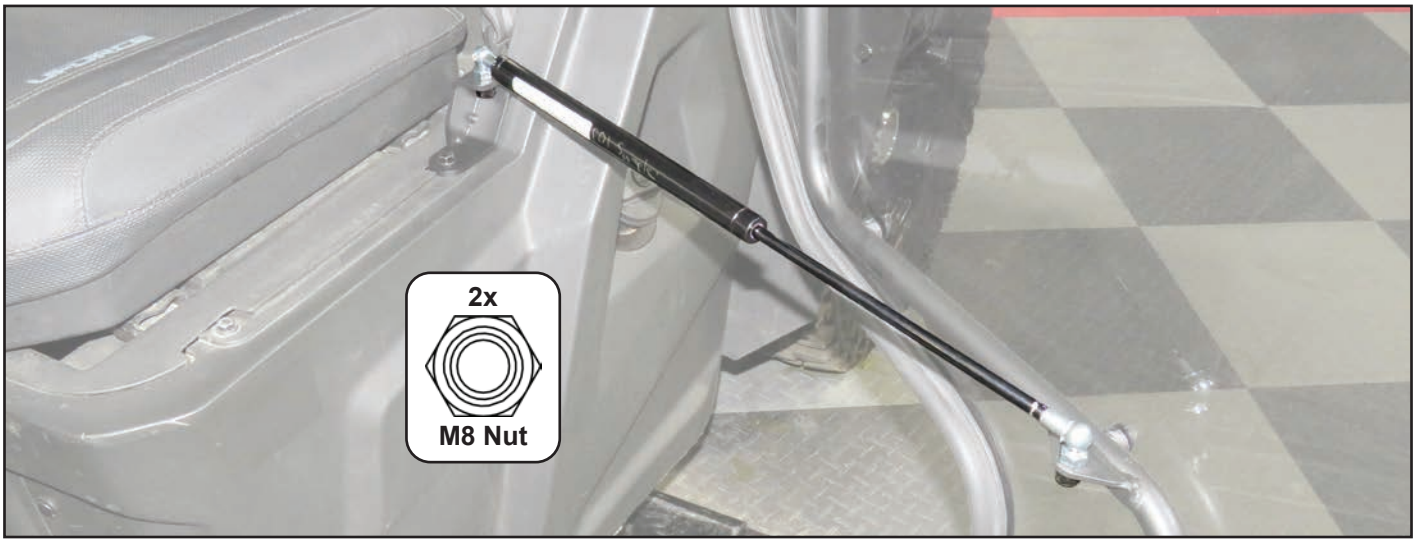

- Repeat steps for passenger side installation.

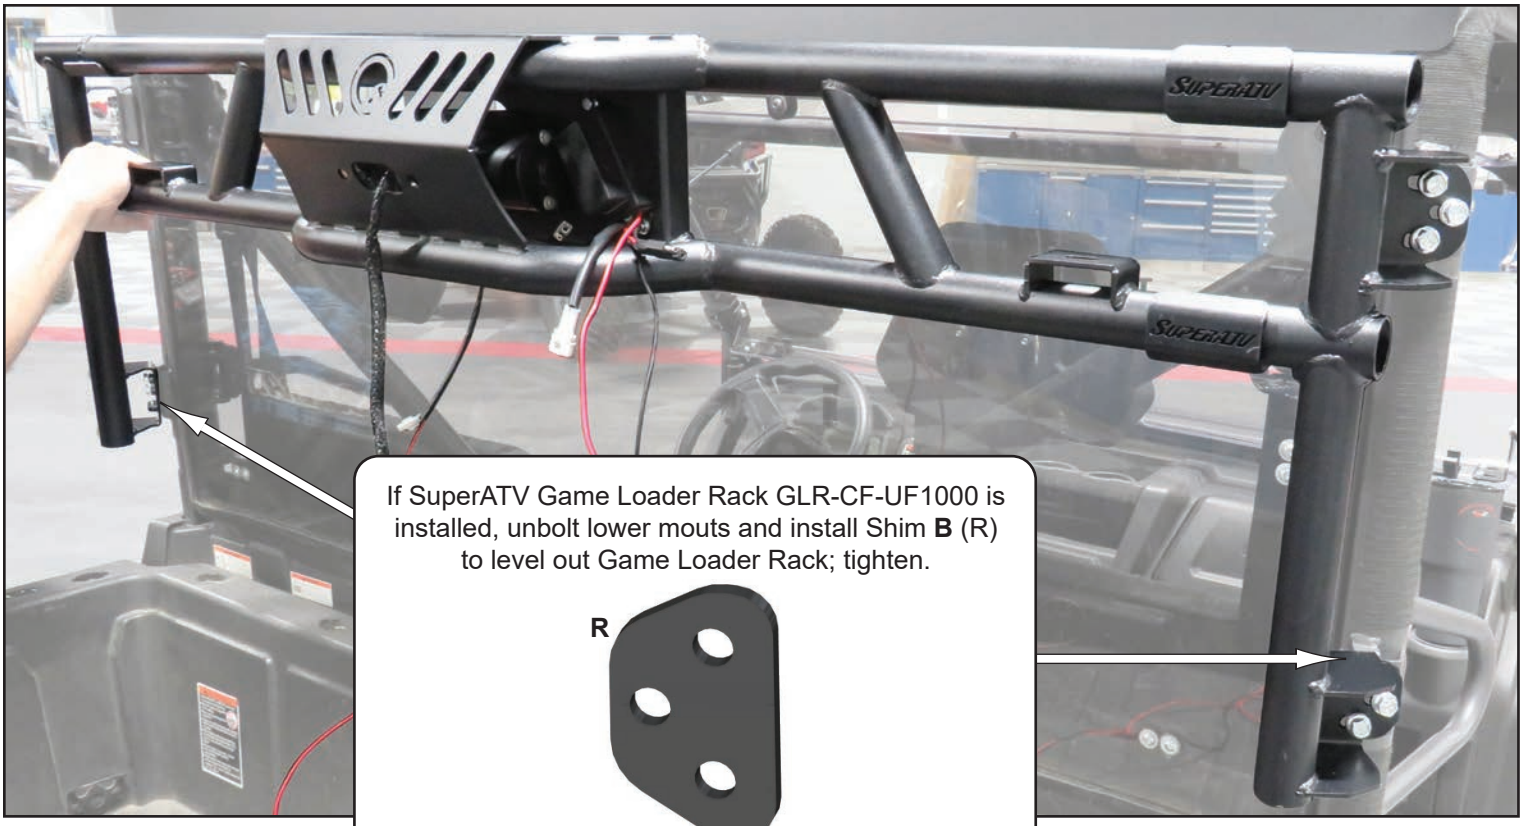

- Install Mirrors to Front Upper Doors with hardware shown; tighten.

